


Whirlpool LEQ5000KW2 02 - TOP AND CONSOLE PARTS

TOP AND CONSOLE PARTS

For Models: LEQ5000KQ2, LEQ5000KW2
(Designer White) (White/Grey)

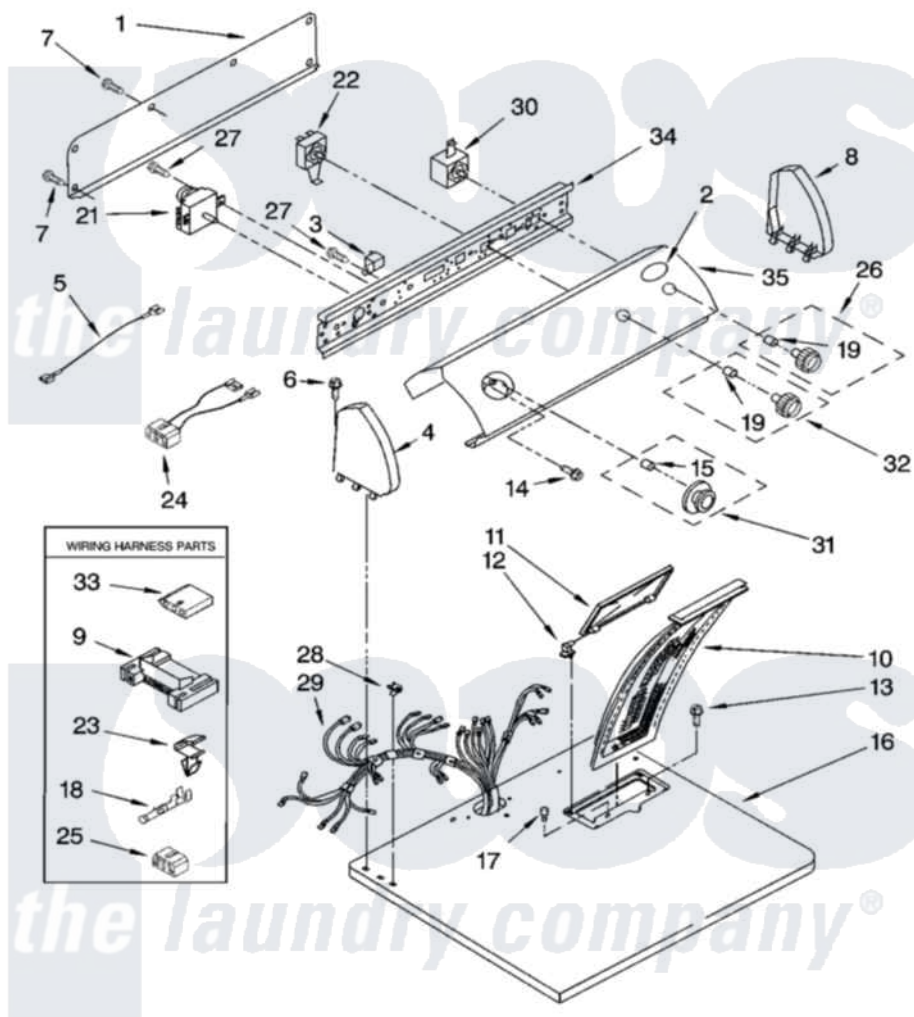

8180217

3

Whirlpool [Residential Whirlpool LEQ5000KW2 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|---------------------------|--------|-----------------------------------|
| 1 | 8274261 | | | Do-It-Yourself Repair Manuals |
| 2 | 3955775 | 8303811 | | Badge, Assembly |
| 3 | 694419 | | | Mini-Buzzer |
| 4 | 8271365 | 279962 | | Endcap |
| 5 | 3401674 | | | Wire, Jumper |
| 6 | 388326 | | | Screw, 8-18 X 1.25 |
| 7 | 693995 | | | Screw, Hex Head |
| 8 | 8271359 | 279962 | | Endcap |
| 9 | 3395683 | | | Receptacle, Multi-Terminal |
| 10 | 349639 | | | HANDLE AND LINT SCREEN ASSEMBLY |
| 11 | 8283378 | | | Cover, Lint Screen |
| 12 | 3978605 | W10044470 | | Hinge, RH |
| " | 3978606 | | | Hinge, Lint Lid |
| 13 | 688983 | 487240 | | Screw, For Mtg. Service Capacitor |
| 14 | 3400859 | | | Screw, Grounding |

| | | | |
|----|-------------------------|---------------------------|-------------------------------|
| 15 | 688805 | | Clip, Spring Knob |
| 16 | 8271390 | 8521918 | Top |
| 17 | 297535 | 17258 | Bumper |
| 18 | 94614 | | Terminal |
| 19 | 8536939 | | Clip, Knob |
| 21 | 8299778 | | Timer, 60 Hz |
| 22 | 3405152 | | Switch, Wrinkle Shield |
| 23 | 3394427 | | Clip-Harness |
| 24 | 8283292 | 8283276 | Wire, Jumper |
| 25 | 3347243 | | Block, Disconnect |
| 26 | 8271341 | 3957804 | Knob, Push-To-Start |
| " | 8538959 | | Knob, Push-To-Start |
| 27 | 3390646 | W10139210 | Screw, 8-18 X 5/16 |
| 28 | 357213 | | Nut, Push-In |
| 29 | 8299869 | 8576501 | Hams-Wire |
| 30 | 3977456 | | Switch, Push-To-Start |
| 31 | 8312687 | 3957754 | Timer Knob Assembly |
| " | 8538953 | | Timer Knob Assembly |
| 32 | 8271339 | 3957799 | Knob, Control |
| " | 8538957 | | Knob, Control |
| 33 | 3936144 | | Do-It-Yourself Repair Manuals |
| 34 | 8271418 | | Bracket, Control |
| 35 | 3977849 | | Panel, Control |
| " | 8532637 | | Panel, Control |
| " | N/A | Not Available | ACCESSORY PARTS |
| " | 3404351 | | Accessory Parts |
| " | 8522199 | | Accessory Parts |
| " | 279948 | 4392065 | Kit, Dryer Repair |
| " | 72017 | | Paint, Touch-Up |
| " | 350930 | | Paint, Pressurized Spray B |
| " | 350938 | | Paint, Pressurized Spray B |
| " | 799344 | | Paint, Touch-Up) |

