


Whirlpool LEQ8621PG0 01 - TOP AND CONSOLE PARTS

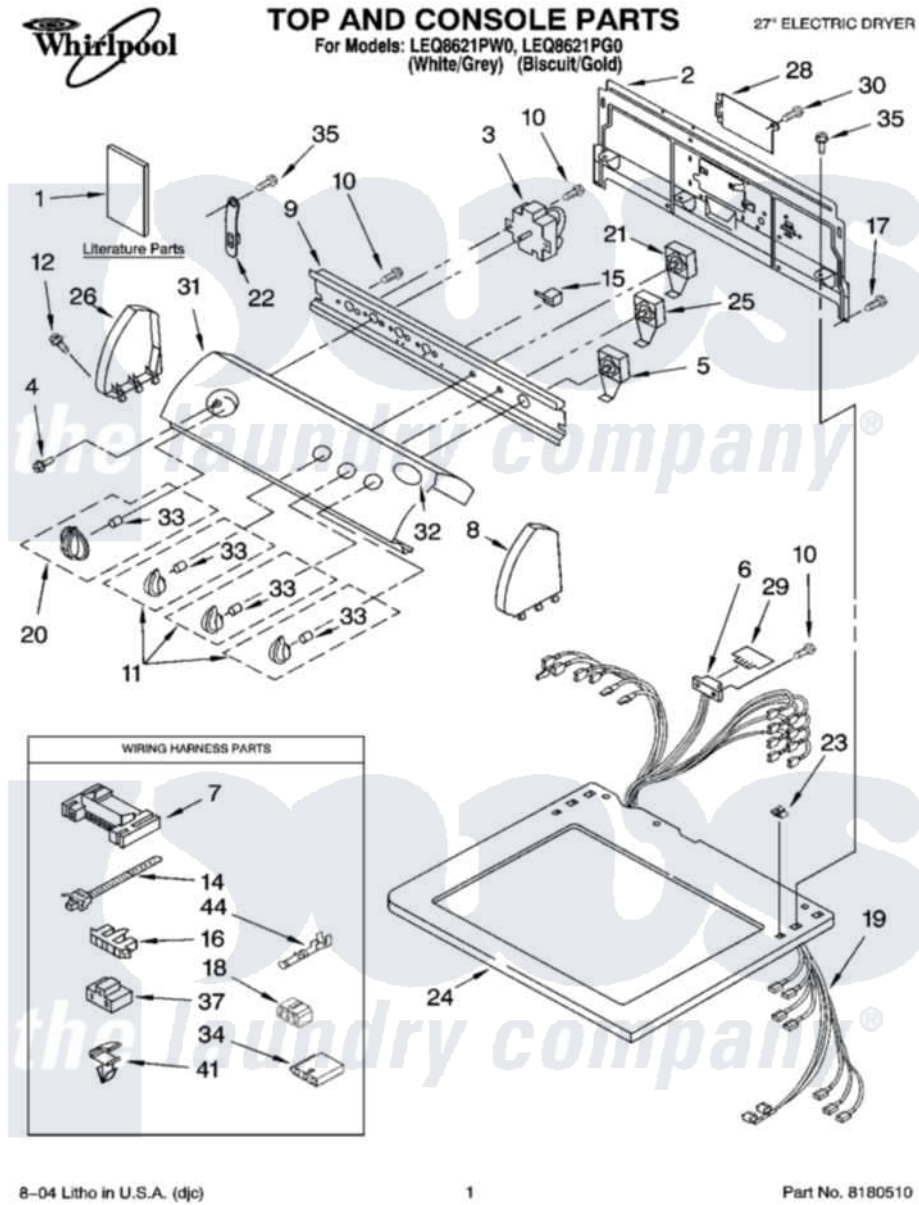

8-04 Litho in U.S.A. (djc)

1

Part No. 8180510

Whirlpool Residential Whirlpool LEQ8621PG0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8541832		Not Available	Wiring Diagram
"	8533772		Not Available	Guide, Use & Care
"	8533770		Not Available	Sheet, Cycle Feature
"	8535833		Not Available	Instructions Installation
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8317305	285909		Panel-Rear
3	3406725			Timer Assembly
4	3400859			Screw, Grounding
5	3398095			Switch, Push-To-Start
6	3391885			Connector, Edge
7	3395683			Receptacle, Multi-Terminal
8	8271359	279962		Endcap
"	8271362	279965		Endcap

9	8544897		Bracket, Control
10	3390646	W10139210	Screw, 8-18 X 5/16
11	8544937		Knob, Control
"	8544938		Knob, Control
12	388326		Screw, 8-18 X 1.25
14	3391018		Tie Cable
15	694419		Mini-Buzzer
16	3397269		Connector, Timer
17	693995		Screw, Hex Head
18	3347243		Block, Disconnect
19	8299958		Harness, Electric
20	8544957		Timer Knob Assembly
"	8544958		Timer Knob Assembly
21	8530152		Switch, Temperature
22	8318255	8568314	Strap, Console
23	357213		Nut, Push-In
24	8271399	3979278	Top
"	8271401	3979279	Top
25	3405156		Switch, Rotary
26	8271365	279962	Endcap
"	8271368	279965	Endcap
28	8317342	W10119283	Cover, Terminal Block
29	8558178		Control, Electronic
30	3390814	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
31	8546005		Panel, Control
"	8546006		Panel, Control
32	3400985		Medallion
33	8536939		Clip, Knob
34	3936144		Do-It-Yourself Repair Manuals
35	3390647	488729	Screw
37	3401144		Connector
41	3394427		Clip-Harness
44	94614		Terminal

