


Whirlpool LEQ9508PG1 02 - TOP AND CONSOLE PARTS

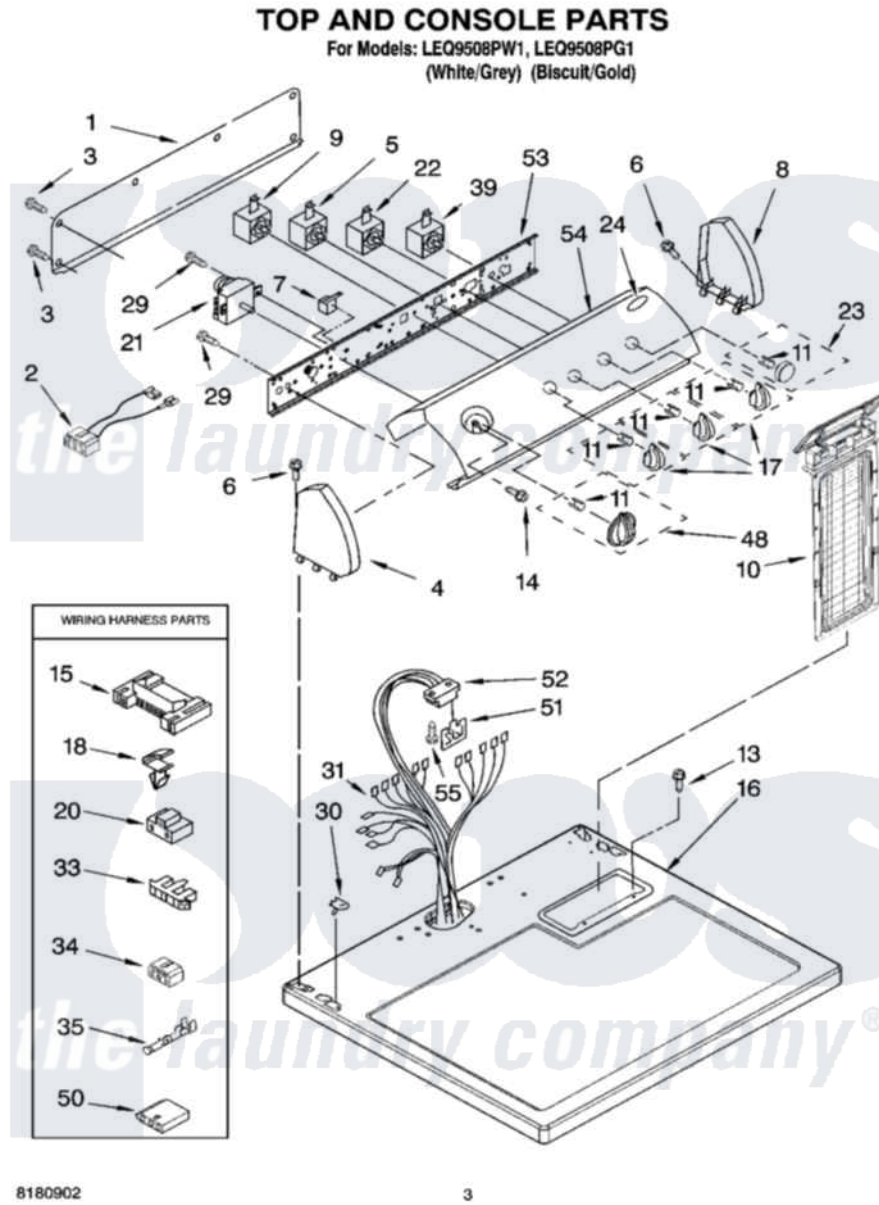

8180902

3

Whirlpool [Residential Whirlpool LEQ9508PG1 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3401695			Wire, Jumper Buzzer
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	3405154			Switch Rotary
6	388326			Screw, 8-18 X 1.25
7	694419			Mini-Buzzer
8	8271359	279962		Endcap
"	8271362	279965		Endcap
9	8528330			Switch, Temperature
10	8557857			Screen, Lint
"	8557858			Screen, Lint
11	8536939			Clip, Knob
13	688983	487240		Screw, For Mtg. Service Capacitor
14	8533951	3400859		Screw, Grounding

15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
"	8557931	8563986	Top
17	8544937		Knob, Control
"	8544938		Knob, Control
18	3394427		Clip-Harness
20	3401144		Connector
21	3406725		Timer Assembly
22	3405152		Switch, Wrinkle Shield
23	8544941		Knob, Push-To-Start
"	8544942		Knob, Push-To-Start
24	3400985		Medallion
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
30	357213		Nut, Push-In
31	8299889	8576506	Harness, Wiring
33	3397269		Connector, Timer
34	3347243		Block, Disconnect
35	94614		Terminal
39	3398094		Switch, Push To Start
48	8544957		Timer Knob Assembly
"	8544958		Timer Knob Assembly
50	3936144		Do-It-Yourself Repair Manuals
51	8558178		Control, Electronic
52	3391885		Connector, Edge
53	8544895		Bracket, Control
54	8545994		Panel, Control
"	8545995		Panel, Control
55	359625	487240	Screw, For Mtg. Service Capacitor

