


Whirlpool LER3622PQ0 03 - TOP AND CONSOLE PARTS, OPTIONAL PARTS (NOT INCLUDED)

TOP AND CONSOLE PARTS

For Model: LER3622PQ0
(Designer White)

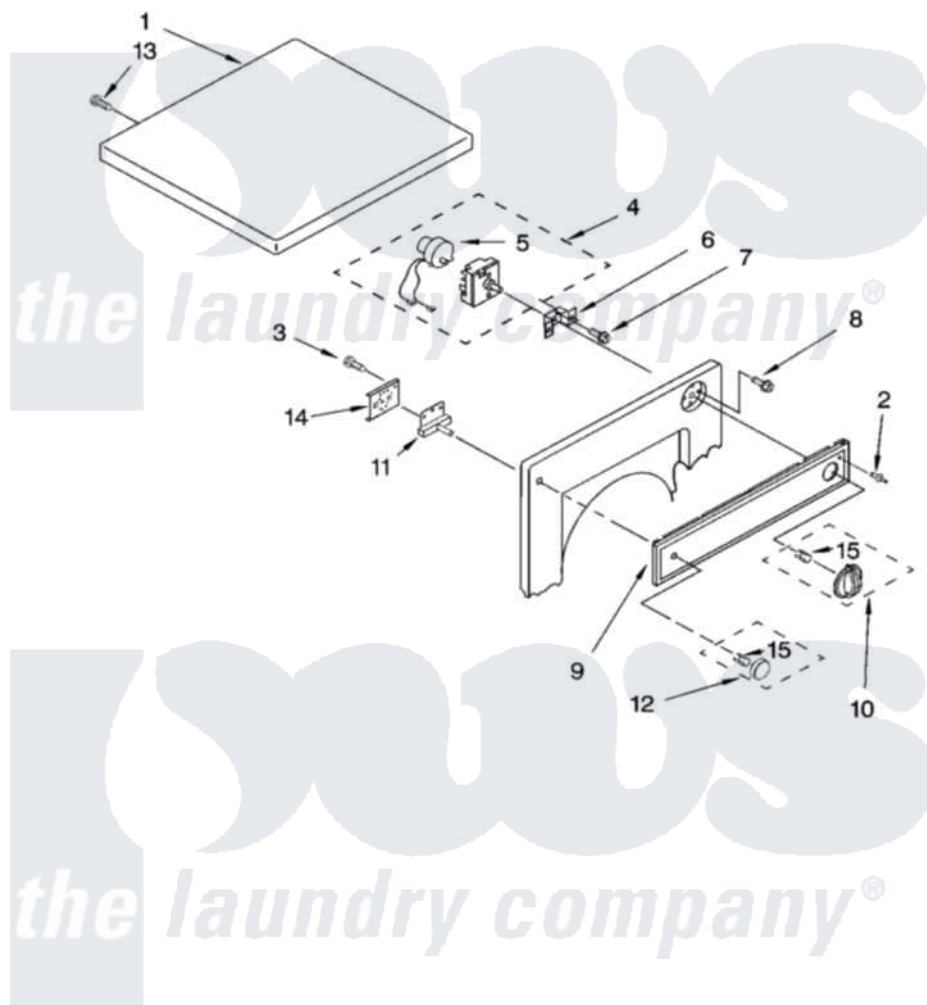

8180534

5

Whirlpool [Residential Whirlpool LER3622PQ0 Dryer Parts](#) Parts Diagram 03 - TOP AND CONSOLE PARTS, OPTIONAL PARTS (NOT INCLUDED)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	345703			Top
2	307563	311928		Rivet, Plastic
3	3390631			Screw, 10-16 X 3/8
4	8563882			Timer, 60 Hz
5	BLANK		Not Available	(Timer Motor Not Serviceable)
6	348171			Bracket, Timer
7	311865	486579		Screw
8	3390646	W10139210		Screw, 8-18 X 5/16
9	8562102			Panel, Control
10	8544955			Timer Knob Assembly
11	3977456			Switch, Push-To-Start
12	8544939			Knob, Push-To-Start
13	343641	681414		Screw, 10AB X 1/2
14	3406860			Bracket, Front Panel
15	8536939			Clip, Knob

[72017](#)

Paint, Touch-Up

" [350938](#)

Paint, Pressurized Spray B

" [350930](#)

Paint, Pressurized Spray B

" [799344](#)

Paint, Touch-Up)

