


# Whirlpool LER3622PQ1 02 - CABINET PARTS

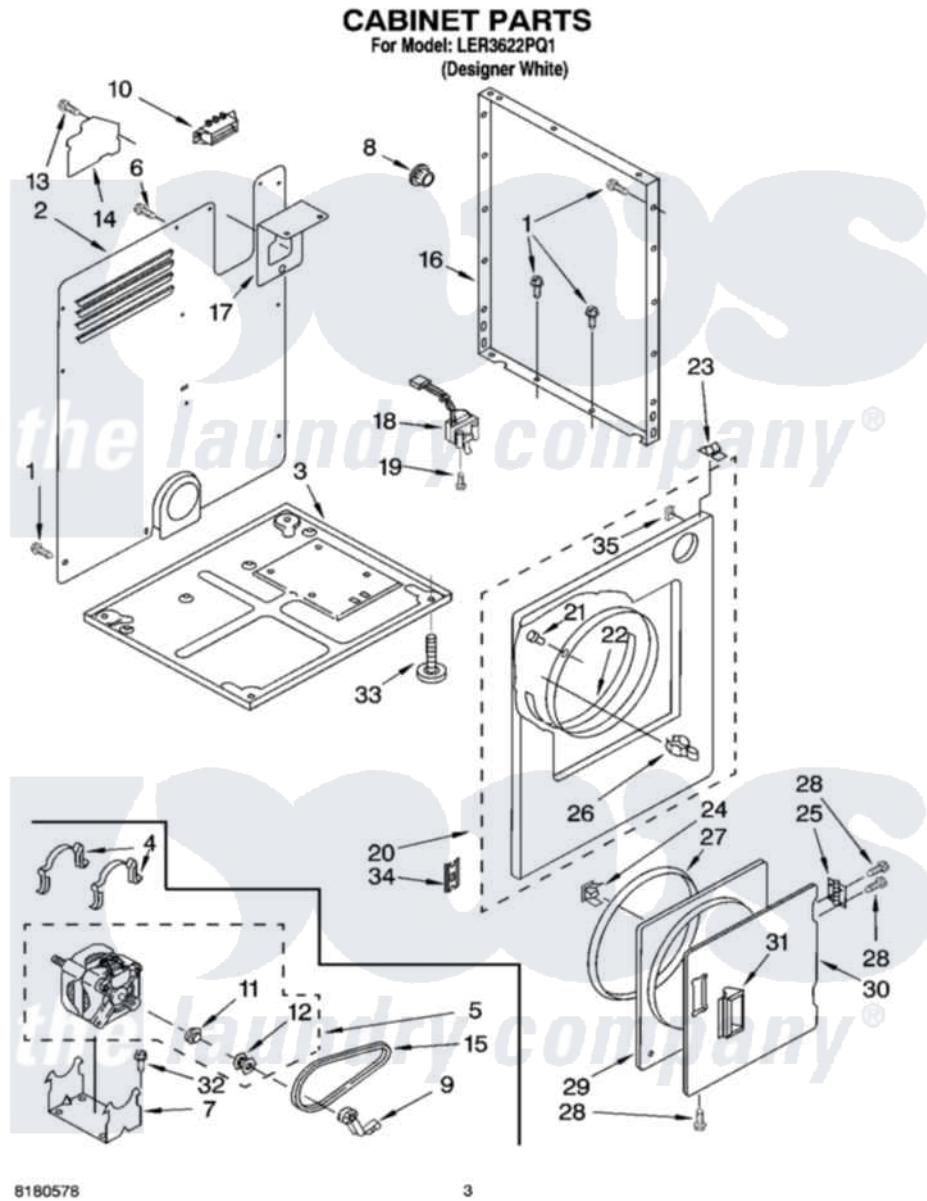

Whirlpool [Residential Whirlpool LER3622PQ1 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	343641	<a href="#">681414</a>		Screw, 10AB X 1/2
2	695201	<a href="#">280050</a>		Relief-Strain
3	<a href="#">348726</a>			Base Assembly
4	<a href="#">660658</a>			Clamp, Motor Mounting 343481 685441
5	8538265	<a href="#">8539558</a>		Motor-Drive
6	697776	<a href="#">4331106</a>		Screw, No.10-32 X 7/16
7	<a href="#">696541</a>			Bracket, Motor
8	<a href="#">8066084</a>			Bushing, Snap
9	<a href="#">691366</a>			Idler And Pulley Assembly
10	<a href="#">3397659</a>			Block, Terminal
11	<a href="#">3393657</a>			Restrainer, Belt
12	<a href="#">8066051</a>			Pulley, Motor
13	3393008	<a href="#">308685</a>		Side Trim )
14	<a href="#">3396795</a>			Cover, Terminal Block
15	8066064	<a href="#">3394652</a>		Belt, Drive
16	<a href="#">348705</a>			Panel, Side

17	690259	<a href="#">279304</a>	Block-Term
18	3406104	<a href="#">3406105</a>	Door Switch Assembly
19	697773	<a href="#">3395530</a>	Screw
20	693943	<a href="#">280044</a>	Panel
21	685203	<a href="#">279220</a>	Clip
22	8066123	<a href="#">279264</a>	Air Channel Box
23	<a href="#">345670</a>		Lock, Top
24	<a href="#">3389441</a>		Door Catch Assembly
25	<a href="#">348023</a>		Hinge And Pin Assembly
26	696144	<a href="#">279570</a>	Latch
27	<a href="#">3390734</a>		Seal, Door
28	<a href="#">694091</a>		Trim, Side Right Hand
29	695656	<a href="#">280077</a>	Door
30	<a href="#">348205</a>		Door, Front
31	<a href="#">8562104</a>		Handle, Door
32	<a href="#">3390631</a>		Screw, 10-16 X 3/8
33	<a href="#">233550</a>		Foot
34	<a href="#">3394083</a>		Clip, Front Panel
35	<a href="#">98234</a>		Clip, U-Bend

