


Whirlpool LER3622PQ1 03 - TOP AND CONSOLE PARTS, OPTIONAL PARTS (NOT INCLUDED)

TOP AND CONSOLE PARTS

For Model: LER3622PQ1  
(Designer White)

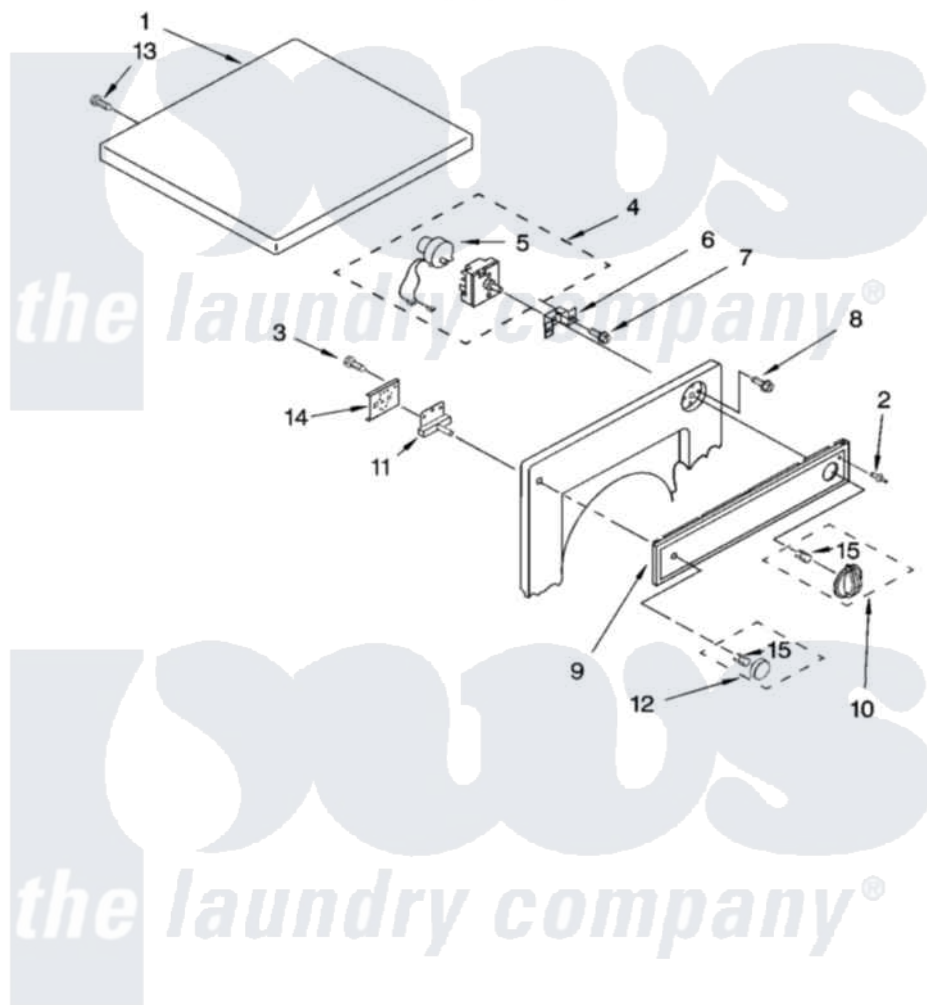

8180578

5

Whirlpool [Residential Whirlpool LER3622PQ1 Dryer Parts](#) Parts Diagram 03 - TOP AND CONSOLE PARTS, OPTIONAL PARTS (NOT INCLUDED)  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">345703</a>			Top
2	307563	<a href="#">311928</a>		Rivet, Plastic
3	<a href="#">3390631</a>			Screw, 10-16 X 3/8
4	<a href="#">8563882</a>			Timer, 60 Hz
5	BLANK		Not Available	(Timer Motor Not Serviceable)
6	<a href="#">348171</a>			Bracket, Timer
7	311865	<a href="#">486579</a>		Screw
8	3390646	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
9	<a href="#">8562102</a>			Panel, Control
10	<a href="#">8544955</a>			Timer Knob Assembly
11	<a href="#">3977456</a>			Switch, Push-To-Start
12	<a href="#">8544939</a>			Knob, Push-To-Start
13	343641	<a href="#">681414</a>		Screw, 10AB X 1/2
14	<a href="#">3406860</a>			Bracket, Front Panel
15	<a href="#">8536939</a>			Clip, Knob

[72017](#)

Paint, Touch-Up

" [350938](#)

Paint, Pressurized Spray B

" [350930](#)

Paint, Pressurized Spray B

" [799344](#)

Paint, Touch-Up )

