


# Whirlpool LER3622PQ2 03 - TOP AND CONSOLE PARTS

## TOP AND CONSOLE PARTS

For Model: LER3622PQ2  
(Designer White)

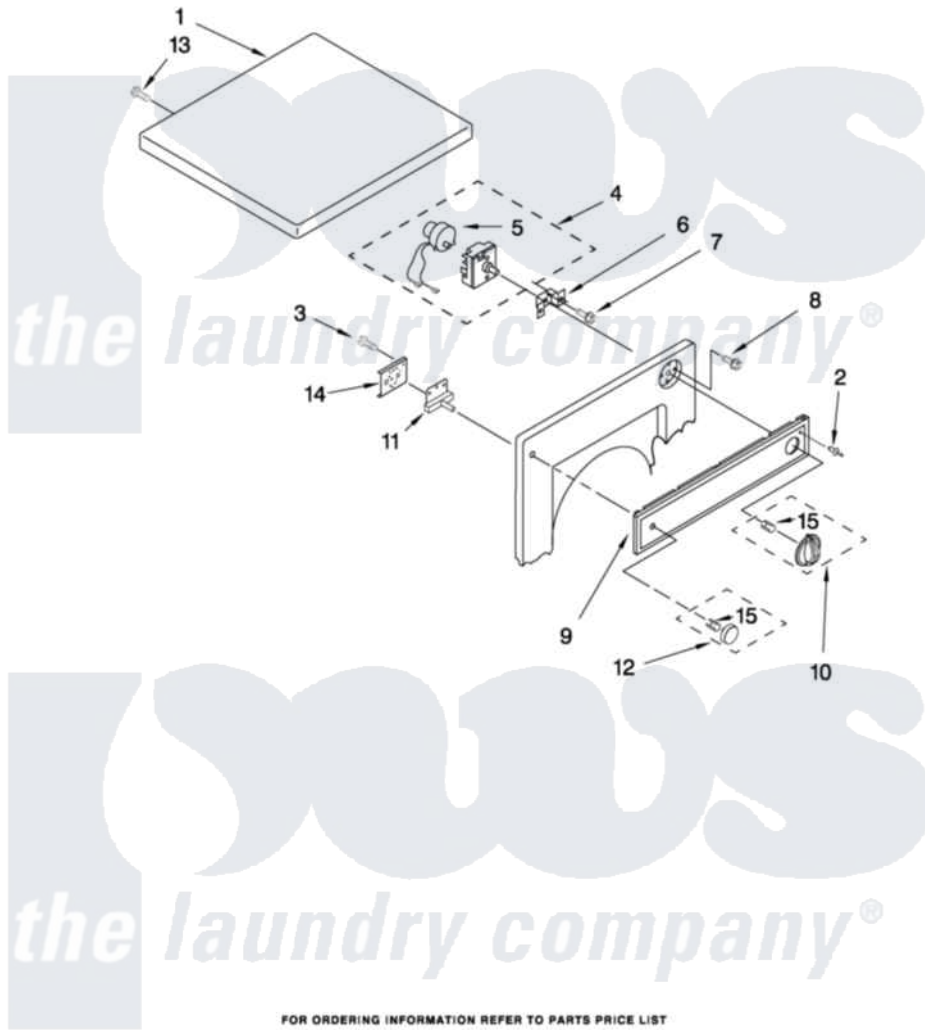

8180842

5

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Whirlpool [Residential Whirlpool LER3622PQ2 Dryer Parts](#) Parts Diagram 03 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">345703</a>			Top
2	307563	<a href="#">311928</a>		Rivet, Plastic
3	<a href="#">3390631</a>			Screw, 10-16 X 3/8
4	<a href="#">8563882</a>			Timer, 60 Hz
5	N/P		Not Available	TIMER MOTOR (NOT SERVICEABLE)
6	<a href="#">348171</a>			Bracket, Timer
7	311865	<a href="#">486579</a>		Screw
8	3390646	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
9	<a href="#">8562102</a>			Panel, Control
10	<a href="#">8544955</a>			Timer Knob Assembly
11	<a href="#">3977456</a>			Switch, Push-To-Start
12	<a href="#">8544939</a>			Knob, Push-To-Start
13	343641	<a href="#">681414</a>		Screw, 10AB X 1/2
14	<a href="#">3406860</a>			Bracket, Front Panel
15	<a href="#">8536939</a>			Clip, Knob