


# Whirlpool LER4634JQ2 01 - TOP AND CONSOLE PARTS

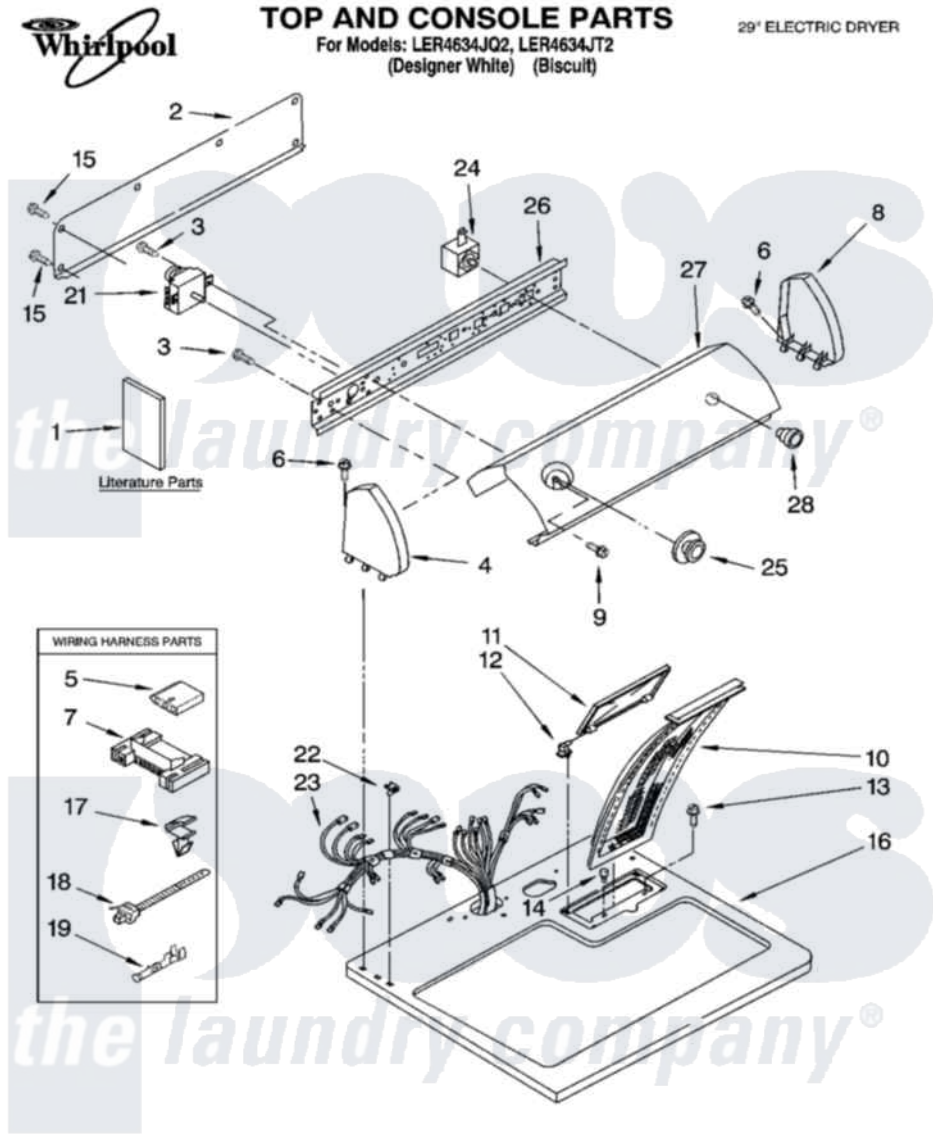

03-04 Litho in U.S.A. (djc)

1

Part No. 8180297

Whirlpool Residential Whirlpool LER4634JQ2 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8522243		Not Available	Literature Parts (Guide, Use & Care)
"	LIT8522245		Not Available	Literature Parts (Sheet, Cycle Feature (For Model LEQ5000KQ1))
"	LIT8535829		Not Available	Literature Parts (Instructions, Installation)
"	LIT8528187		Not Available	Literature Parts (Wiring Diagram)
"	N/A		Not Available	Following May Be Purchased
"	N/A		Not Available	DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	<a href="#">677818L</a>		Diy
2	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
3	3390646	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
4	8271365	<a href="#">279962</a>		Endcap
"	8271368	<a href="#">279965</a>		Endcap
5	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
6	<a href="#">388326</a>			Screw, 8-18 X 1.25

7	<a href="#">3395683</a>		Receptacle, Multi-Terminal
8	8271359	<a href="#">279962</a>	Endcap
"	8271362	<a href="#">279965</a>	Endcap
9	<a href="#">3400859</a>		Screw, Grounding
10	<a href="#">339392</a>		Screen, Lint
11	<a href="#">8283378</a>		Cover, Lint Screen
"	<a href="#">8283380</a>		Cover, Lint Screen
12	3978605	<a href="#">W10044470</a>	Hinge, RH
"	<a href="#">3978606</a>		Hinge, Lint Lid
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	297535	<a href="#">17258</a>	Bumper
15	<a href="#">693995</a>		Screw, Hex Head
16	8271390	<a href="#">8521918</a>	Top
"	8271392	<a href="#">8521920</a>	Top
17	<a href="#">3394427</a>		Clip-Harness
18	<a href="#">3391249</a>		Cable Tie, Push Mount
19	<a href="#">94614</a>		Terminal
21	<a href="#">8299778</a>		Timer, 60 Hz
22	<a href="#">357213</a>		Nut, Push-In
23	8299867	<a href="#">W10450292</a>	Harness, Wiring
24	<a href="#">3977456</a>		Switch, Push-To-Start
25	8312687	<a href="#">3957754</a>	Timer Knob Assembly
"	8271404	<a href="#">3957755</a>	Timer Knob Assembly
26	<a href="#">8271418</a>		Bracket, Control
27	<a href="#">3977815</a>		Panel, Control
"	<a href="#">3977816</a>		Panel, Control
28	8271341	<a href="#">3957804</a>	Knob, Push-To-Start
"	8271349	Not Available	Knob, Push To Start (Biscuit)
"	N/A	Not Available	ACCESSORY PARTS
"	279948	<a href="#">4392065</a>	Kit, Dryer Repair
"	<a href="#">8522199</a>		Accessory Parts
"	<a href="#">689790</a>		Dry Rack
"	<a href="#">72017</a>		Paint, Touch-Up
"	<a href="#">4392899</a>		Paint, Touch-Up
"	<a href="#">350930</a>		Paint, Pressurized Spray B
"	<a href="#">4392901</a>		Paint, Pressurized Spray
"	<a href="#">350938</a>		Paint, Pressurized Spray B
"	<a href="#">799344</a>		Paint, Touch-Up )
"	<a href="#">4392900</a>		Paint, Bulk )

*the laundry company*<sup>®</sup>