


Whirlpool LER4634PQ0 01 - TOP AND CONSOLE PARTS

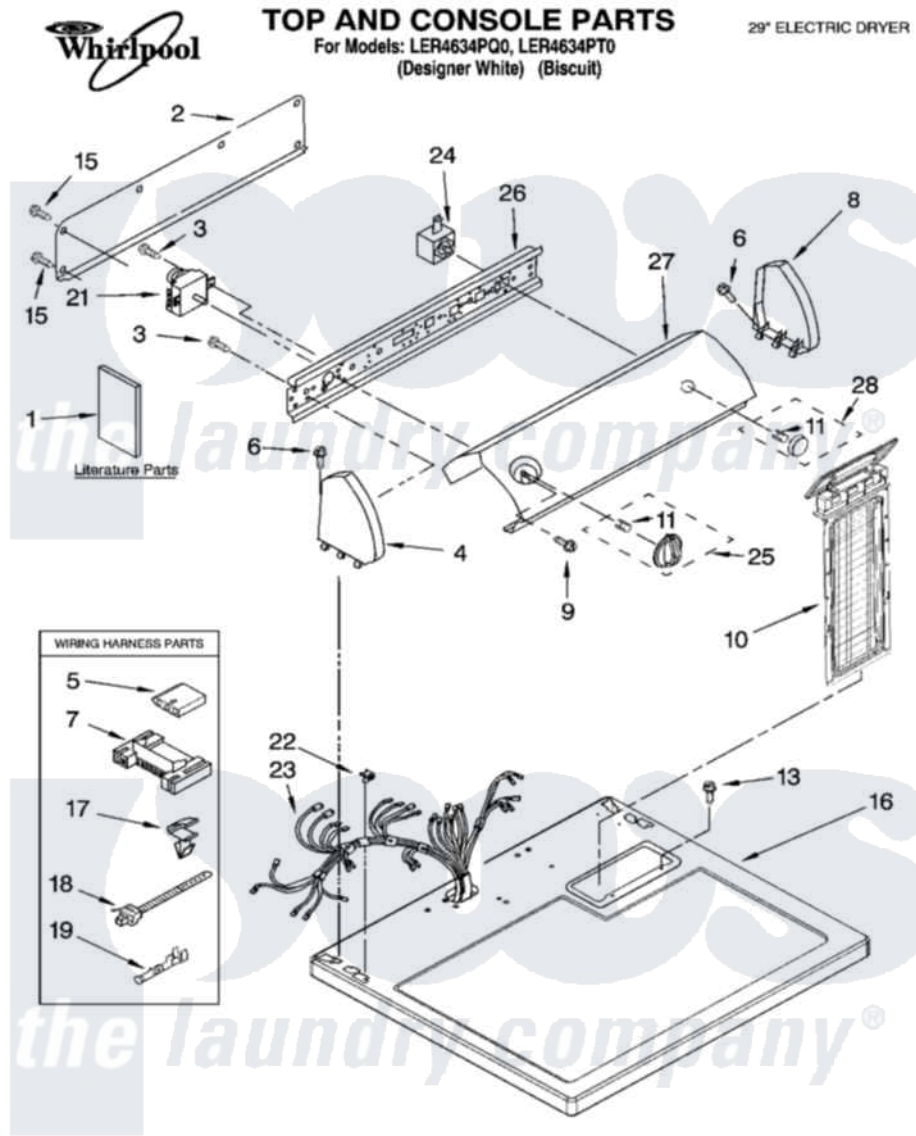

03-04 Litho in U.S.A. (djc)

1

Part No. 8180277

Whirlpool Residential Whirlpool LER4634PQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8522243		Not Available	Literature Parts (Guide, Use & Care)
"	LIT8535829		Not Available	Literature Parts (Instructions, Installation)
"	LIT8533770		Not Available	Literature Parts (Sheet, Cycle Feature)
"	LIT8528187		Not Available	Literature Parts (Wiring Diagram)
"	N/A		Not Available	Following May Be Purchased
"	N/A		Not Available	DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	8274261			Do-It-Yourself Repair Manuals
3	3390646	W10139210		Screw, 8-18 X 5/16
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25

7	3395683		Receptacle, Multi-Terminal
8	8271359	279962	Endcap
"	8271362	279965	Endcap
9	3400859		Screw, Grounding
10	8557861		Screen, Lint
"	8557862		Screen, Lint
11	8536939		Clip, Knob
13	688983	487240	Screw, For Mtg. Service Capacitor
15	693995		Screw, Hex Head
16	8557930	8563985	Top
"	8557931	8563986	Top
17	3394427		Clip-Harness
18	3391249		Cable Tie, Push Mount
19	94614		Terminal
21	8299778		Timer, 60 Hz
22	357213		Nut, Push-In
23	8299867	W10450292	Harness, Wiring
24	3977456		Switch, Push-To-Start
25	8544955		Timer Knob Assembly
"	8544956		Timer Knob Assembly
26	8271418		Bracket, Control
27	8545960		Panel, Control
"	8545970		Panel, Control
28	8544939		Knob, Push-To-Start
"	8544942		Knob, Push-To-Start
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	689790		Dry Rack
"	8522199		Accessory Parts
"	72017		Paint, Touch-Up
"	4392899		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	4392901		Paint, Pressurized Spray
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)
"	4392900		Paint, Bulk)

