


Whirlpool LER5620KQ2 02 - TOP AND CONSOLE PARTS

TOP AND CONSOLE PARTS

For Model: LER5620KQ2
(Designer White)

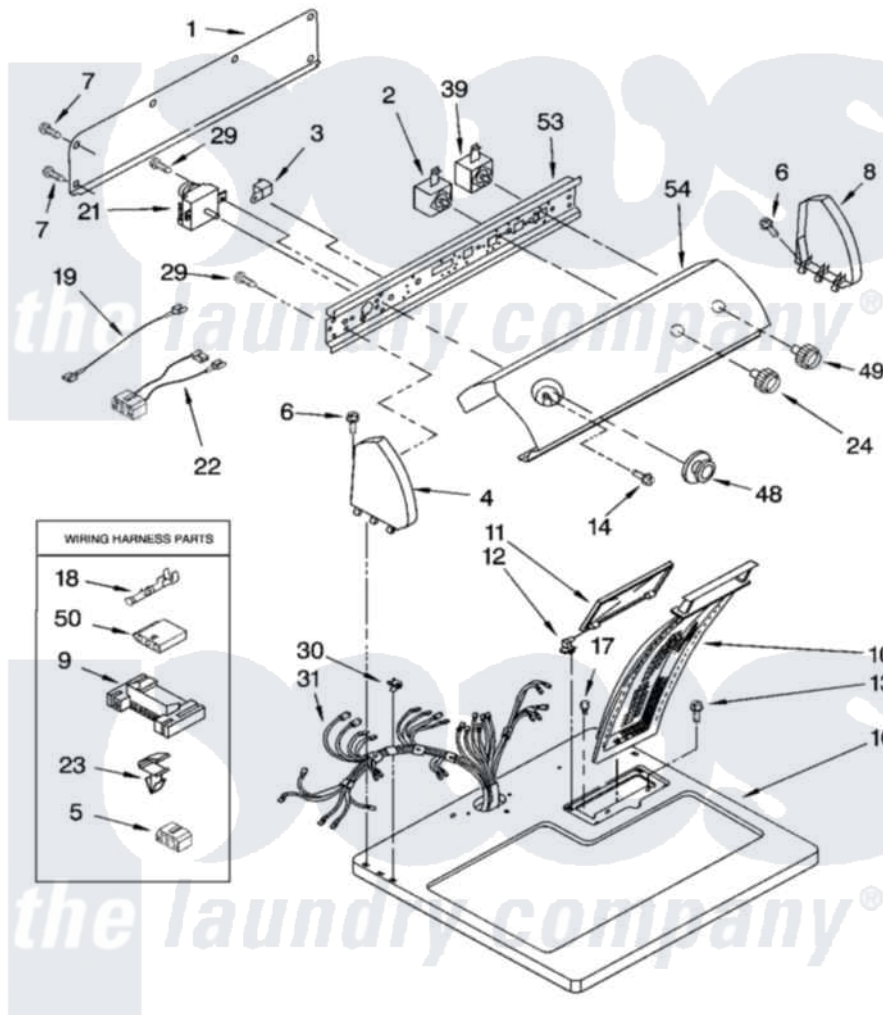

8180298

3

Whirlpool Residential Whirlpool LER5620KQ2 Dryer Parts Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3405152			Switch, Wrinkle Shield
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
5	3347243			Block, Disconnect
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8271359	279962		Endcap
9	3395683			Receptacle, Multi-Terminal
10	349639			HANDLE AND LINT SCREEN ASSEMBLY
11	8283378			Cover, Lint Screen
12	3978605	W10044470		Hinge, RH
"	3978606			Hinge, Lint Lid
13	688983	487240		Screw, For Mtg. Service Capacitor
14	3400859			Screw, Grounding

16	8271390	8521918	Top
17	297535	17258	Bumper
18	94614		Terminal
19	3401674		Wire, Jumper
21	8299778		Timer, 60 Hz
22	8283292	8283276	Wire, Jumper
23	3394427		Clip-Harness
24	8271339	3957799	Knob, Control
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299869	8576501	Harns-Wire
39	3977456		Switch, Push-To-Start
48	8312687	3957754	Timer Knob Assembly
49	8271341	3957804	Knob, Push-To-Start
50	3936144		Do-It-Yourself Repair Manuals
53	8271418		Bracket, Control
54	3977855		Panel, Control
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	8522199		Accessory Parts
"	3404351		Accessory Parts
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

the laundry company[®]

the laundry company[®]