


Whirlpool LER5636PT1 02 - TOP AND CONSOLE PARTS

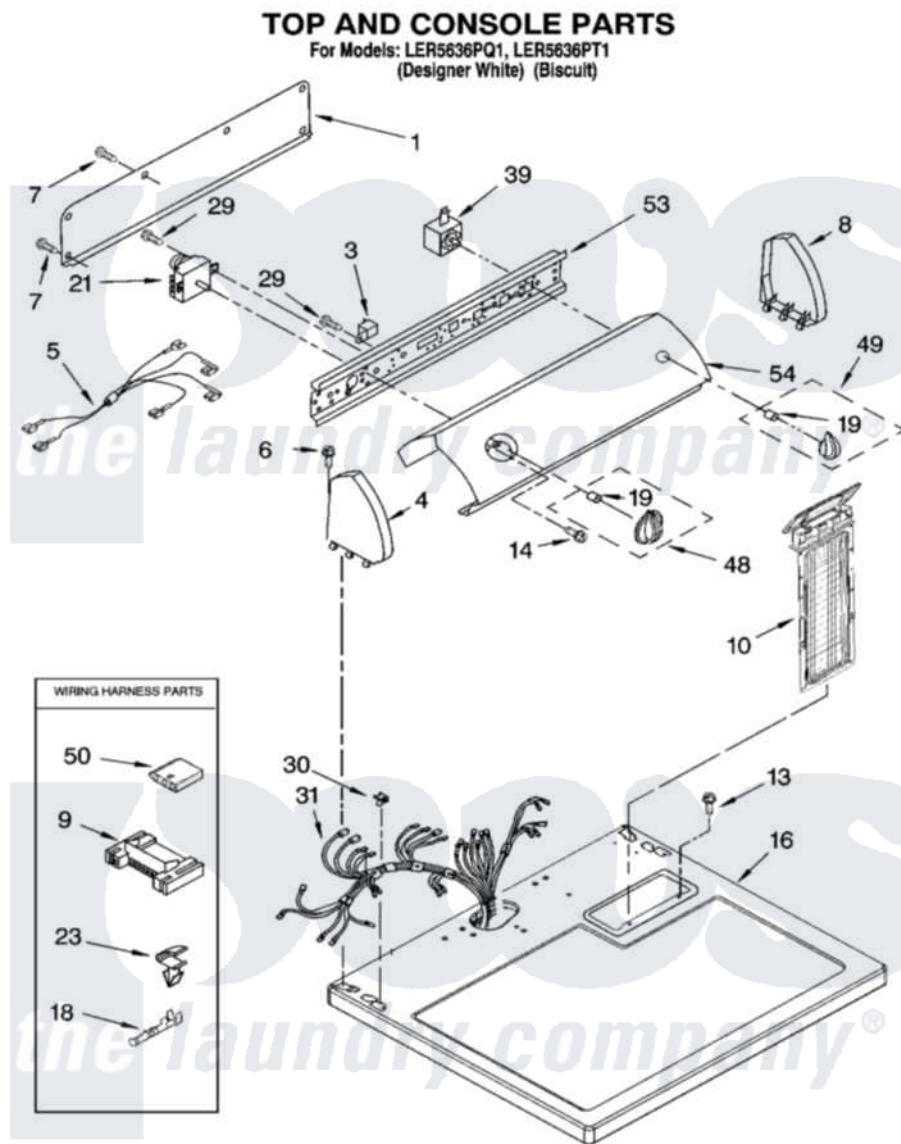

8180877

3

Whirlpool [Residential Whirlpool LER5636PT1 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	8539888			Jumper, Wire
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8271359	279962		Endcap
"	8271362	279965		Endcap
9	3395683			Receptacle, Multi-Terminal
10	8557857			Screen, Lint
"	8557858			Screen, Lint
13	688983	487240		Screw, For Mtg. Service Capacitor
14	8533951	3400859		Screw, Grounding
16	8557930	8563985		Top
"	8557931	8563986		Top

18	94614		Terminal
19	8536939		Clip, Knob
21	8299778		Timer, 60 Hz
23	3394427		Clip-Harness
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
30	357213		Nut, Push-In
31	8299867	W10450292	Harness, Wiring
39	8543274		Switch, Push-To-Start
48	8544955		Timer Knob Assembly
"	8544956		Timer Knob Assembly
49	8544935		Knob, Control
"	8544936		Knob, Control
50	3936144		Do-It-Yourself Repair Manuals [®]
53	8271418		Bracket, Control
54	8545964		Panel, Control
"	8545965		Panel, Control

