


Whirlpool LER5644PQ0 01 - TOP AND CONSOLE PARTS

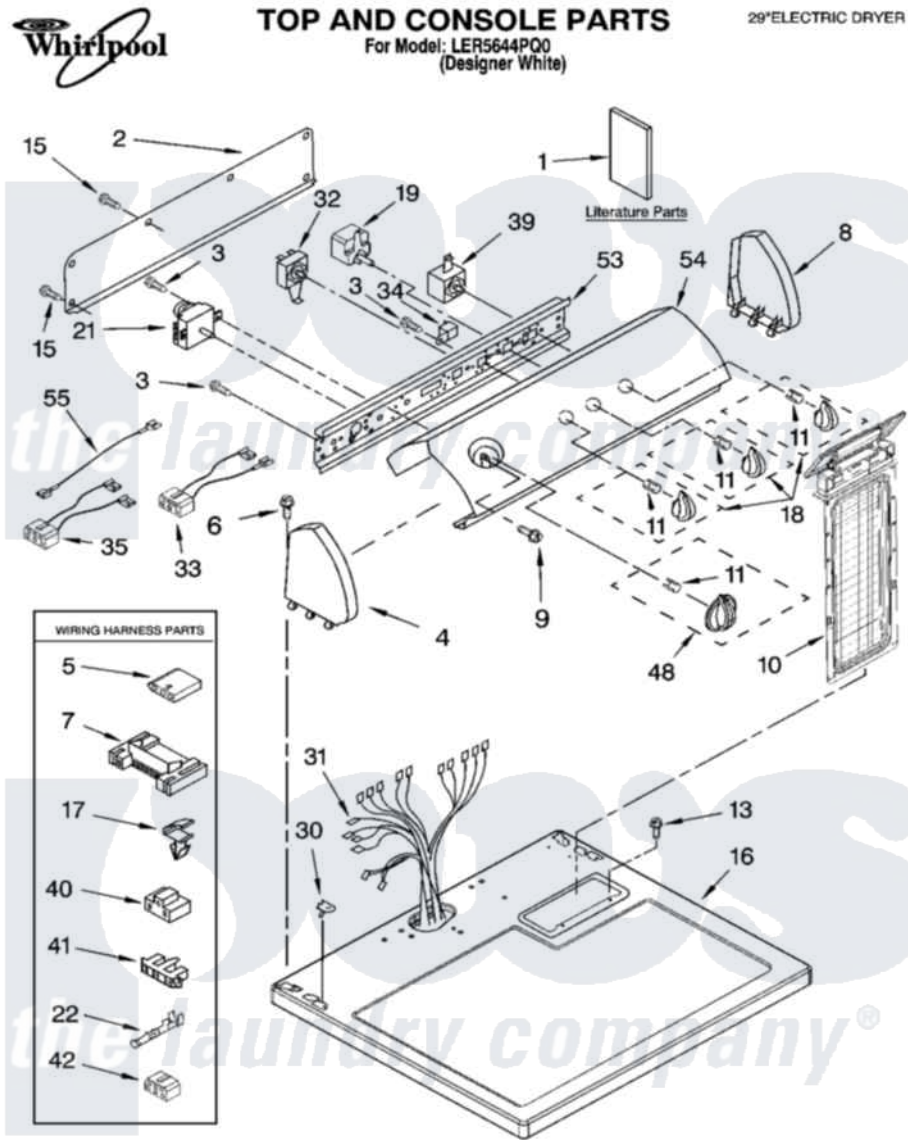

5-04 Litho in U.S.A. (djc)

1

Part No. 8180394

Whirlpool Residential Whirlpool LER5644PQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8522243		Not Available	Use And Care Guide
"	8533770		Not Available	Sheet, Cycle Feature
"	8535829		Not Available	Instructions, Installation
"	3979703		Not Available	Wiring Diagram
"	N/A		Not Available	Following May Be Purchased
"	N/A		Not Available	DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8274261			Do-It-Yourself Repair Manuals
3	3390646	W10139210		Screw, 8-18 X 5/16
4	8271365	279962		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	3395683			Receptacle, Multi-Terminal
8	8271359	279962		Endcap
9	3400859			Screw, Grounding

10	8557861		Screen, Lint
11	8536939		Clip, Knob
13	688983	487240	Screw, For Mtg. Service Capacitor
15	693995		Screw, Hex Head
16	8557930	8563985	Top
17	3394427		Clip-Harness
18	8544935		Knob, Control
19	3405156		Switch, Rotary
21	3979618		Timer Assembly
22	94614		Terminal
30	357213		Nut, Push-In
31	8299871	8576502	Harness, Wiring
32	3399639		Switch, Rotary Temperature
33	3397695		Wire, Jumper
34	694419		Mini-Buzzer
35	3396029	8539893	Wire, Jumper
39	3398095		Switch, Push-To-Start
40	3401144		Connector
41	3397269		Connector, Timer
42	3347243		Block, Disconnect
48	8544955		Timer Knob Assembly
53	8271418		Bracket, Control
54	8545976		Panel, Control
55	3401684		Jumper, Wire
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	8522199		Accessory Parts
"	689790		Dry Rack
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

