


Whirlpool LER6611LQ1 02 - TOP AND CONSOLE PARTS

TOP AND CONSOLE PARTS

For Model: LER6611LQ1
(Designer White)

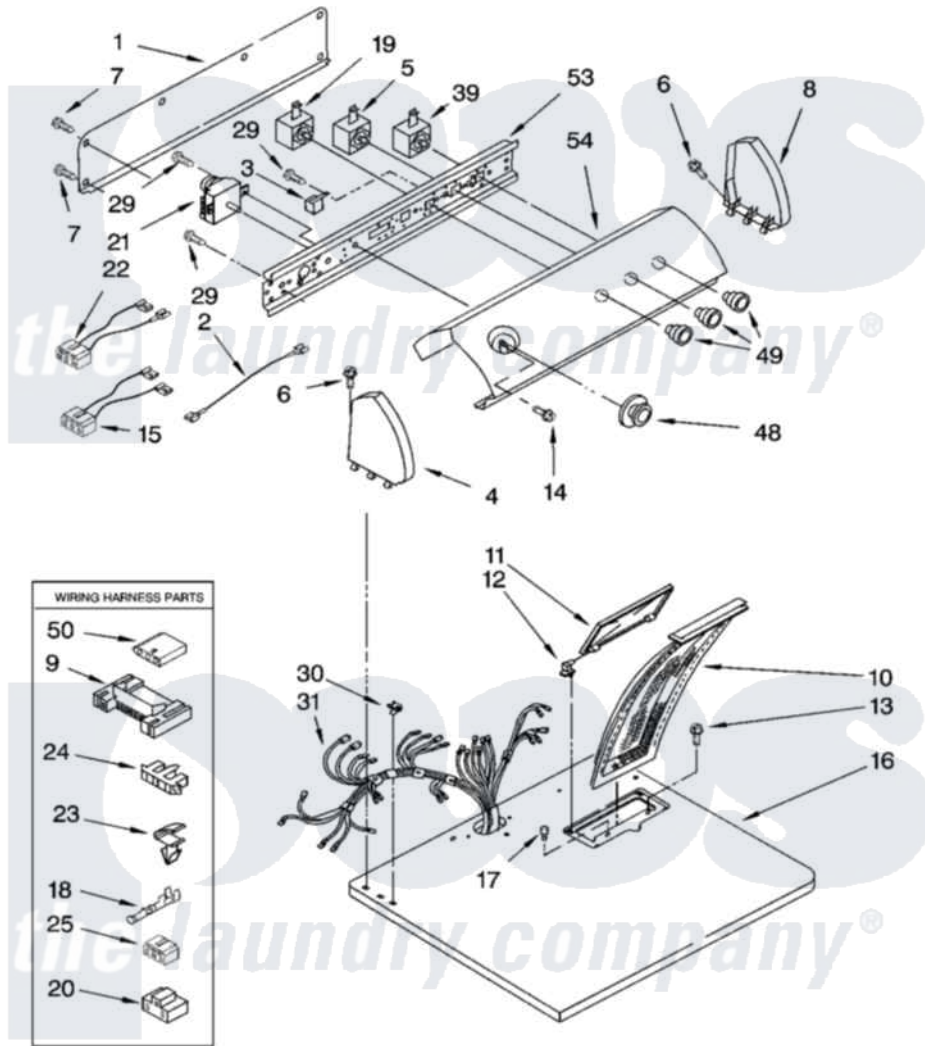

8180301

3

Whirlpool Residential Whirlpool LER6611LQ1 Dryer Parts Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3401684			Jumper, Wire
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
5	3405156			Switch, Rotary
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8271359	279962		Endcap
9	3395683			Receptacle, Multi-Terminal
10	349639			HANDLE AND LINT SCREEN ASSEMBLY
11	8283378			Cover, Lint Screen
12	3978605	W10044470		Hinge, RH
"	3978606			Hinge, Lint Lid
13	688983	487240		Screw, For Mtg. Service Capacitor
14	3400859			Screw, Grounding

15	3396029	8539893	Wire, Jumper
16	8271390	8521918	Top
17	297535	17258	Bumper
18	94614		Terminal
19	3399639		Switch, Rotary Temperature
20	3401144		Connector
21	3979618		Timer Assembly
22	3397695		Wire, Jumper
23	3394427		Clip-Harness
24	3397269		Connector, Timer
25	3347243		Block, Disconnect
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299873	8576503	Harness, Wiring
39	3398095		Switch, Push-To-Start
48	8312687	3957754	Timer Knob Assembly
49	8271339	3957799	Knob, Control
50	3936144		Do-It-Yourself Repair Manuals
53	8271418		Bracket, Control
54	8532621		Panel, Control
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	8522199		Accessory Parts
"	3404351		Accessory Parts
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

the laundry company[®]

the laundry company[®]