


Whirlpool LER6620PQ0 02 - TOP AND CONSOLE PARTS

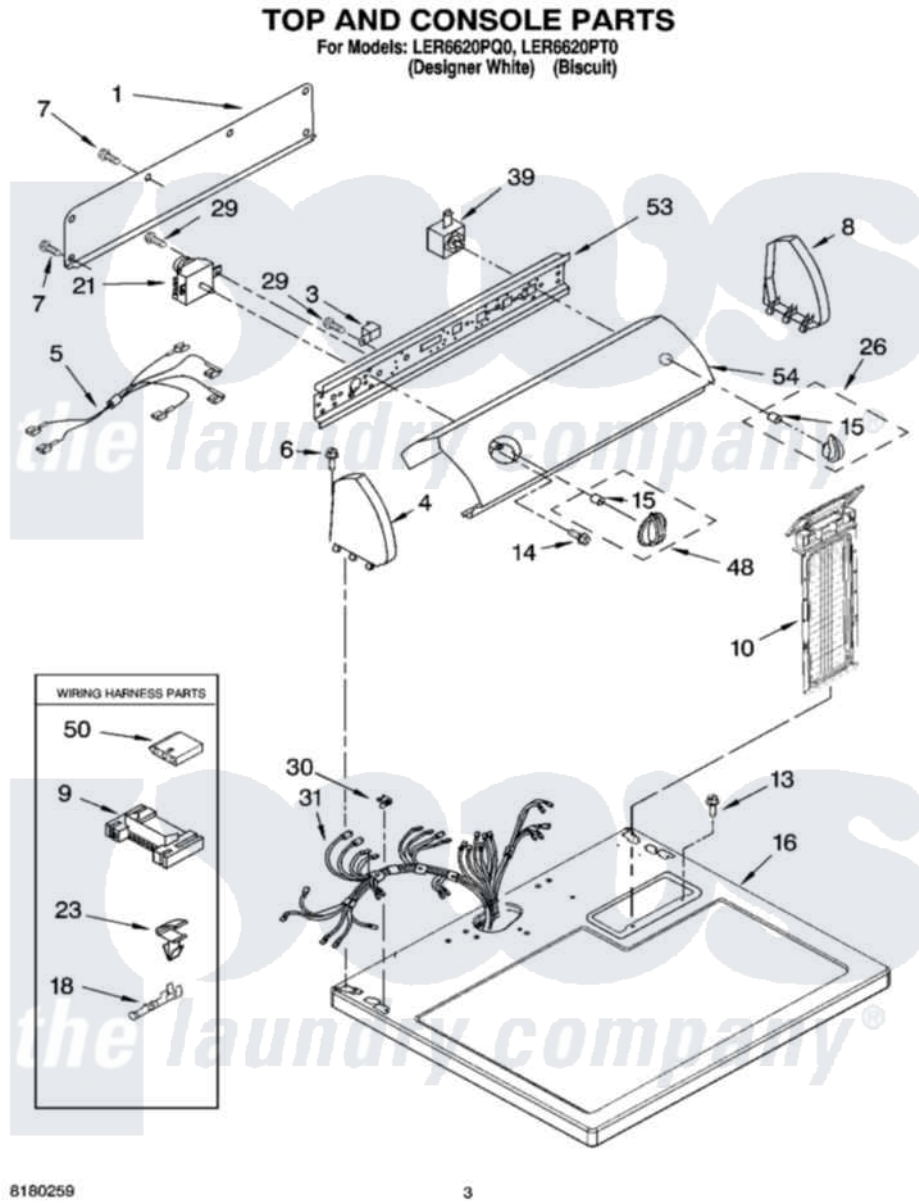

Whirlpool [Residential Whirlpool LER6620PQ0 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	8539888			Jumper, Wire
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8271359	279962		Endcap
"	8271362	279965		Endcap
9	3395683			Receptacle, Multi-Terminal
10	8557857			Screen, Lint
"	8557858			Screen, Lint
13	688983	487240		Screw, For Mtg. Service Capacitor
14	3400859			Screw, Grounding
15	8536939			Clip, Knob
16	8557930	8563985		Top

"	8557931	8563986	Top
18	94614		Terminal
21	8299778		Timer, 60 Hz
23	3394427		Clip-Harness
26	8544935		Knob, Control
"	8544936		Knob, Control
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299867	W10450292	Harness, Wiring
39	3404233		Switch, Push-To-Start
48	8544955		Timer Knob Assembly
"	8544956		Timer Knob Assembly
50	3936144		Do-It-Yourself Repair Manuals
53	8271418		Bracket, Control
54	8545966		Panel, Control
"	8546011		Panel, Control
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	3404351		Accessory Parts
"	8522199		Accessory Parts
"	72017		Paint, Touch-Up
"	4392899		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	4392901		Paint, Pressurized Spray
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)
"	4392900		Paint, Bulk)

the laundry company[®]

the laundry company[®]