


Whirlpool LER6646PW0 01 - TOP AND CONSOLE PARTS

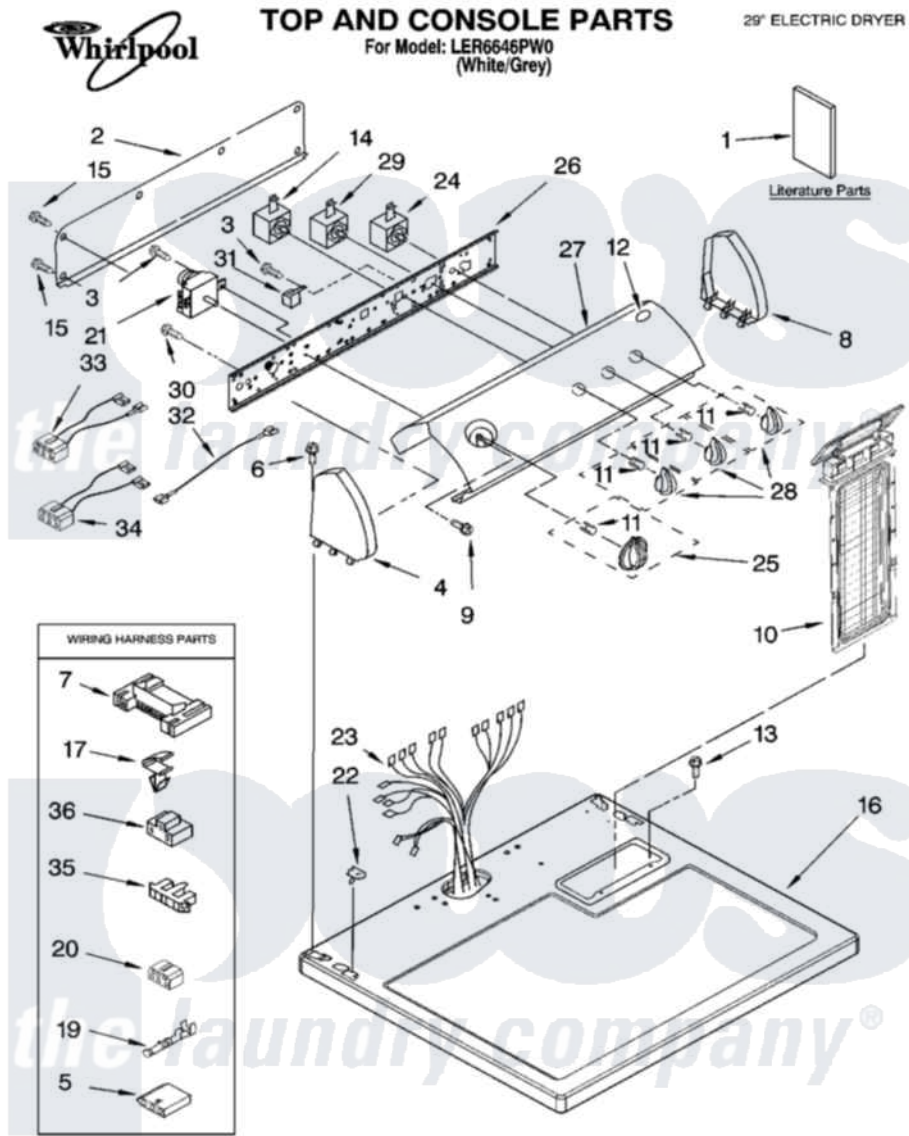

8-04 Litho in U.S.A. (djc)

1

Part No. 8180511

Whirlpool Residential Whirlpool LER6646PW0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8522243		Not Available	Use And Care Guide
"	8533770		Not Available	Sheet, Cycle Feature
"	8535829		Not Available	Instructions, Installation
"	3979703		Not Available	Wiring Diagram
"	N/A		Not Available	Following May Be Purchased
"	N/A		Not Available	DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8274261			Do-It-Yourself Repair Manuals
3	3390646	W10139210		Screw, 8-18 X 5/16
4	8271365	279962		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	3395683			Receptacle, Multi-Terminal
8	8271359	279962		Endcap
9	8533951	3400859		Screw, Grounding

10	8557857		Screen, Lint
11	8536939		Clip, Knob
12	3400985		Medallion
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3399639		Switch, Rotary Temperature
15	693995		Screw, Hex Head
16	8557930	8563985	Top
17	3394427		Clip-Harness
19	94614		Terminal
20	3347243		Block, Disconnect
21	3979618		Timer Assembly
22	357213		Nut, Push-In
23	8299873	8576503	Harness, Wiring
24	3398095		Switch, Push-To-Start
25	8544957		Timer Knob Assembly
26	8544895		Bracket, Control
27	8545998		Panel, Control
28	8544937		Knob, Control
29	3405156		Switch, Rotary
30	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
31	694419		Mini-Buzzer
32	3401684		Jumper, Wire
33	3397695		Wire, Jumper
34	3396029	8539893	Wire, Jumper
35	3397269		Connector, Timer
36	3401144		Connector

the laundry company[®]

the laundry company[®]