


Whirlpool LER7620LW1 02 - TOP AND CONSOLE PARTS

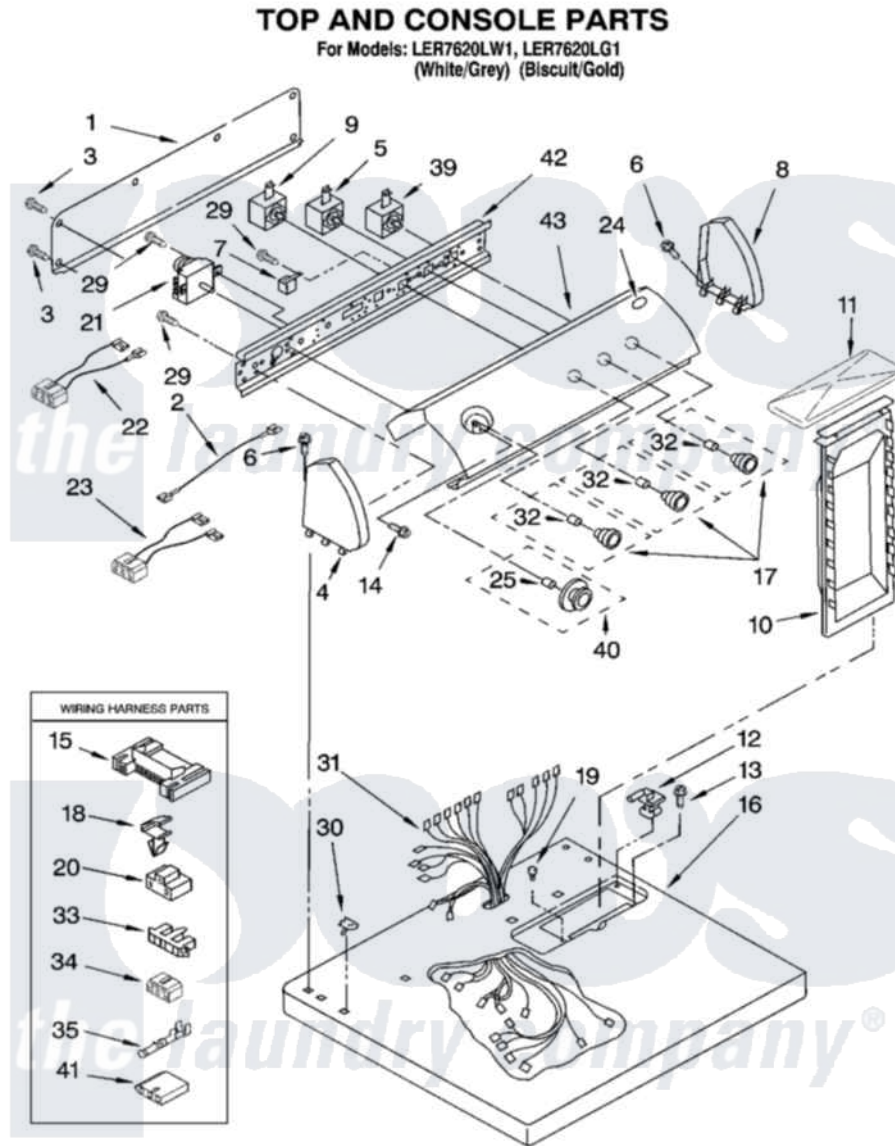

Whirlpool [Residential Whirlpool LER7620LW1 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3401684			Jumper, Wire
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	3405156			Switch, Rotary
6	388326			Screw, 8-18 X 1.25
7	694419			Mini-Buzzer
8	8271359	279962		Endcap
"	8271362	279965		Endcap
9	3399639			Switch, Rotary Temperature
10	349639			HAndle And Lint Screen Assembly
11	8283378			Cover, Lint Screen
"	8283380			Cover, Lint Screen
12	3978605	W10044470		Hinge, RH
"	3978606			Hinge, Lint Lid

13	688983	487240	Screw, For Mtg. Service Capacitor
14	3400859		Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8271390	8521918	Top
"	8271392	8521920	Top
17	8538957		Knob, Control
"	8538958		Knob, Control
18	3394427		Clip-Harness
19	297535	17258	Bumper
20	3401144		Connector
21	3979618		Timer Assembly
22	3397695		Wire, Jumper
23	3396029	8539893	Wire, Jumper
24	3955775	8303811	Badge, Assembly
25	688805		Clip, Spring Knob
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299873	8576503	Harness, Wiring
32	8536939		Clip, Knob
33	3397269		Connector, Timer
34	3347243		Block, Disconnect
35	94614		Terminal
39	3398095		Switch, Push-To-Start
40	8538953		Timer Knob Assembly
"	8538954		Timer Knob Assembly
41	3936144		Do-It-Yourself Repair Manuals
42	8271418		Bracket, Control
43	8532615		Panel, Control
"	8532616		Panel, Control

