


Whirlpool LER7648KT3 02 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)

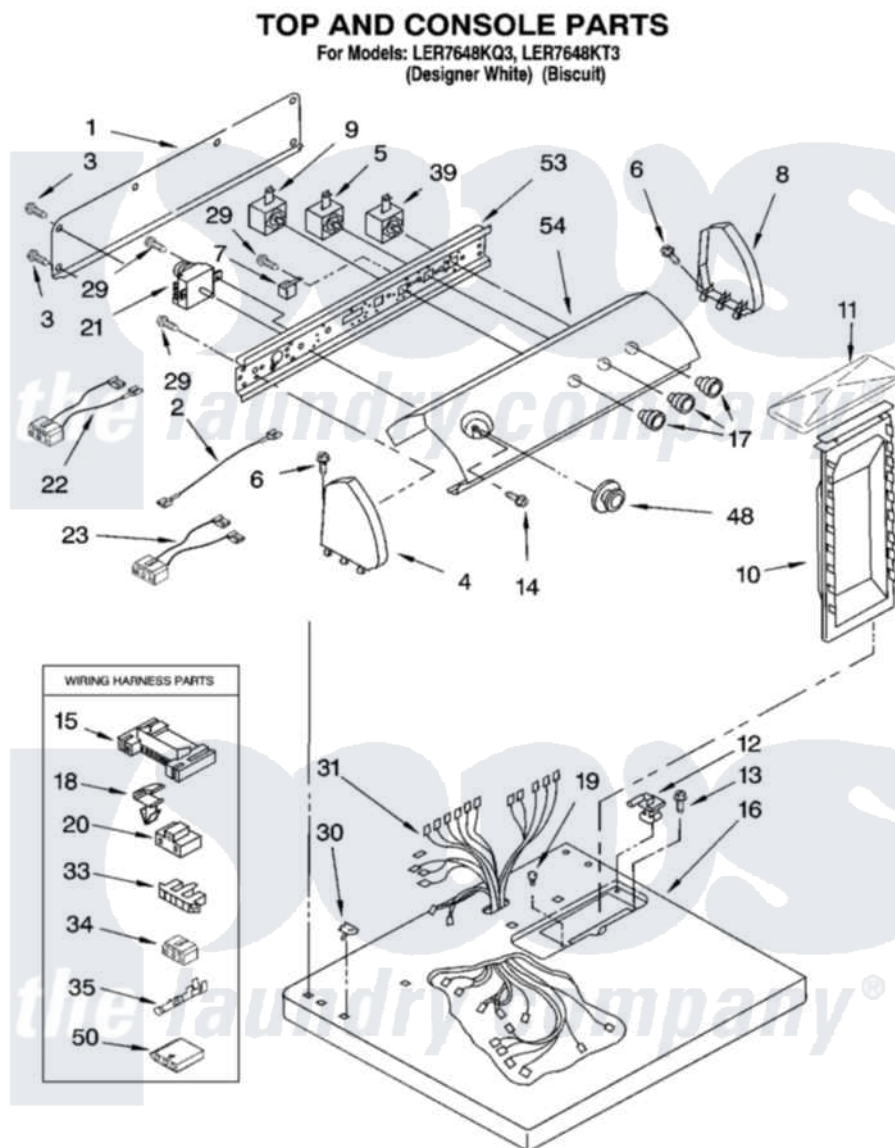

8180211

3

Whirlpool [Residential Whirlpool LER7648KT3 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3401684			Jumper, Wire
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	3405156			Switch, Rotary
6	388326			Screw, 8-18 X 1.25
7	694419			Mini-Buzzer
8	8271359	279962		Endcap
"	8271362	279965		Endcap
9	3399639			Switch, Rotary Temperature
10	349639			HAndle And Lint Screen Assembly
11	8283378			Cover, Lint Screen
"	8283380			Cover, Lint Screen

12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3400859		Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8271390	8521918	Top
"	8271392	8521920	Top
17	8271339	3957799	Knob, Control
"	8271348	3957797	Knob, Push-To-Start
18	3394427		Clip-Harness
19	297535	17258	Bumper
20	3401144		Connector
21	3979618		Timer Assembly
22	3397695		Wire, Jumper
23	3396029	8539893	Wire, Jumper
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299873	8576503	Harness, Wiring
33	3397269		Connector, Timer
34	3347243		Block, Disconnect
35	94614		Terminal
39	3398095		Switch, Push-To-Start
48	8312687	3957754	Timer Knob Assembly
"	8271404	3957755	Timer Knob Assembly
50	3936144		Do-It-Yourself Repair Manuals
53	8271418		Bracket, Control
54	3977851		Panel, Control
"	3977852		Panel, Control
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	3406839		Dry Rack Assembly
"	8522199		Accessory Parts
"	72017		Paint, Touch-Up
"	4392899		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	4392901		Paint, Pressurized Spray
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)
"	4392900		Paint, Bulk)

the laundry company[®]