


**Whirlpool LER8648PG0 02 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)**

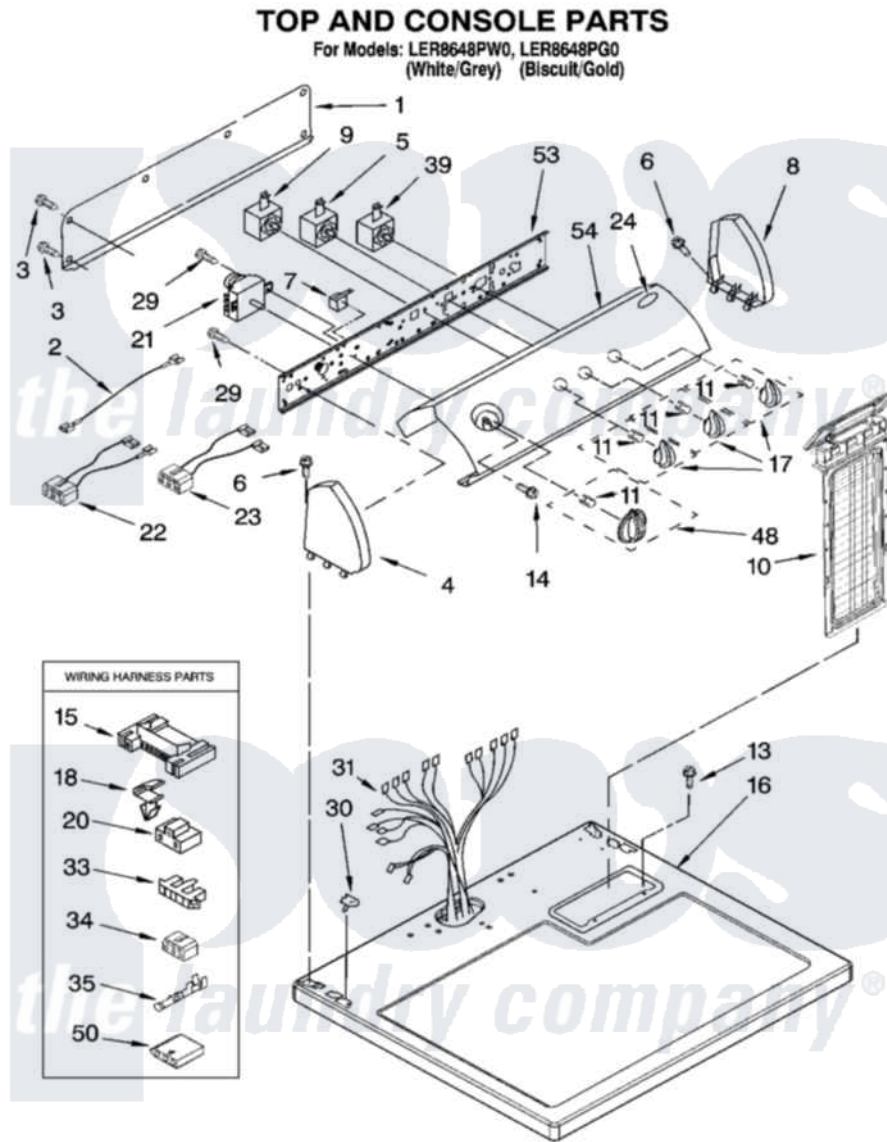

8180372

3

Whirlpool [Residential Whirlpool LER8648PG0 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
2	<a href="#">3401684</a>			Jumper, Wire
3	<a href="#">693995</a>			Screw, Hex Head
4	8271365	<a href="#">279962</a>		Endcap
"	8271368	<a href="#">279965</a>		Endcap
5	<a href="#">3405156</a>			Switch, Rotary
6	<a href="#">388326</a>			Screw, 8-18 X 1.25
7	<a href="#">694419</a>			Mini-Buzzer
8	8271359	<a href="#">279962</a>		Endcap
"	8271362	<a href="#">279965</a>		Endcap
9	<a href="#">3399639</a>			Switch, Rotary Temperature
10	<a href="#">8557857</a>			Screen, Lint
"	<a href="#">8557858</a>			Screen, Lint
11	<a href="#">8536939</a>			Clip, Knob
13	688082	<a href="#">487240</a>		Screw, For Mtg. Service

13	<a href="#">000903</a>	<a href="#">407440</a>	Capacitor
14	<a href="#">3400859</a>		Screw, Grounding
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	8557930	<a href="#">8563985</a>	Top
"	8557931	<a href="#">8563986</a>	Top
17	<a href="#">8544937</a>		Knob, Control
"	<a href="#">8544938</a>		Knob, Control
18	<a href="#">3394427</a>		Clip-Harness
20	<a href="#">3401144</a>		Connector
21	<a href="#">3979618</a>		Timer Assembly
22	<a href="#">3397695</a>		Wire, Jumper
23	3396029	<a href="#">8539893</a>	Wire, Jumper
24	<a href="#">3400985</a>		Medallion
29	3390646	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
30	<a href="#">357213</a>		Nut, Push-In
31	8299873	<a href="#">8576503</a>	Harness, Wiring
33	<a href="#">3397269</a>		Connector, Timer
34	<a href="#">3347243</a>		Block, Disconnect
35	<a href="#">94614</a>		Terminal
39	<a href="#">3398095</a>		Switch, Push-To-Start
48	<a href="#">8544957</a>		Timer Knob Assembly
"	<a href="#">8544958</a>		Timer Knob Assembly
50	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
53	<a href="#">8544895</a>		Bracket, Control
54	<a href="#">8545977</a>		Panel, Control
"	<a href="#">8545978</a>		Panel, Control
"	N/A	Not Available	ACCESSORY PARTS
"	279948	<a href="#">4392065</a>	Kit, Dryer Repair
"	<a href="#">3406839</a>		Dry Rack Assembly
"	<a href="#">8522199</a>		Accessory Parts
"	<a href="#">72017</a>		Paint, Touch-Up
"	<a href="#">4392899</a>		Paint, Touch-Up
"	<a href="#">350930</a>		Paint, Pressurized Spray B
"	<a href="#">4392901</a>		Paint, Pressurized Spray
"	<a href="#">350938</a>		Paint, Pressurized Spray B
"	<a href="#">799344</a>		Paint, Touch-Up )
"	<a href="#">4392900</a>		Paint, Bulk )

