


Whirlpool LGN2000PW1 01 - TOP AND CONSOLE PARTS

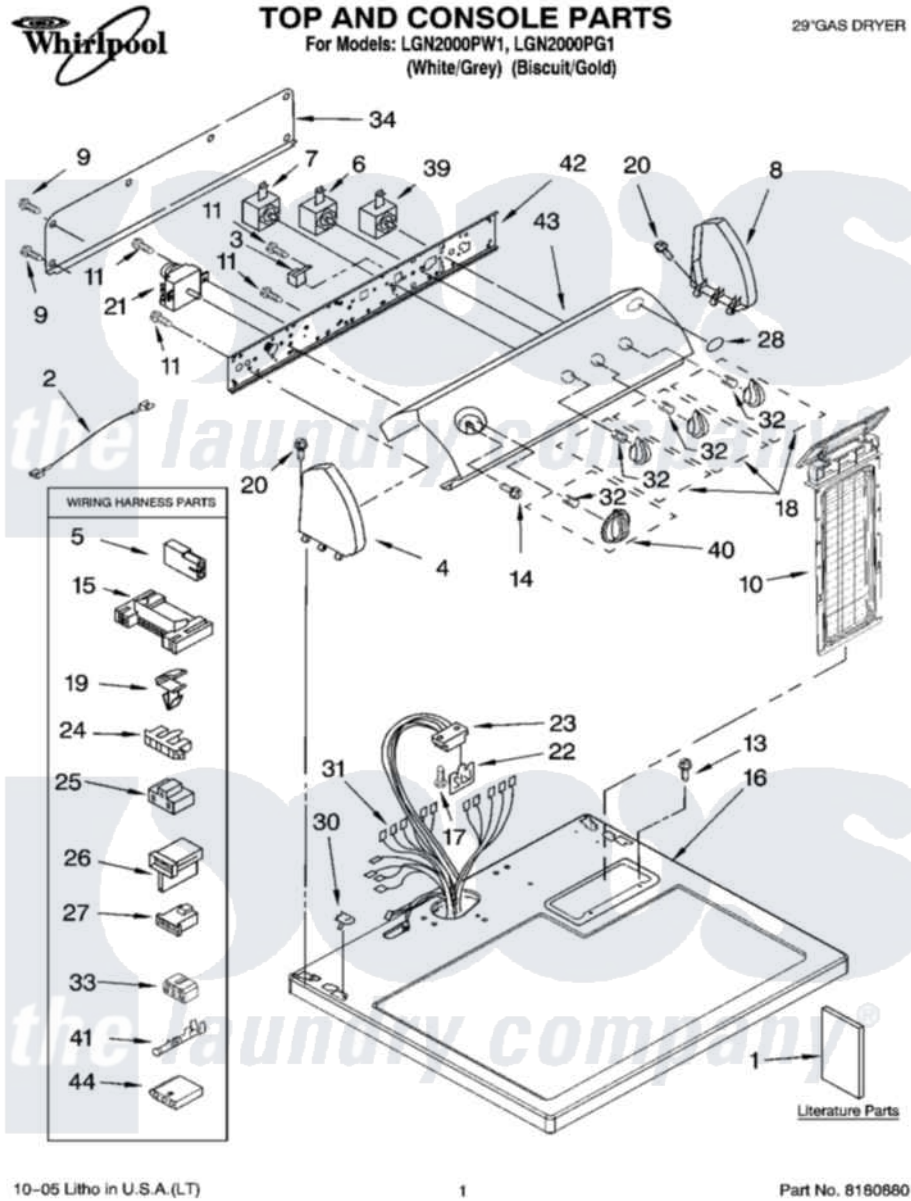

10-05 Litho in U.S.A.(LT)

1

Part No. 8160860

Whirlpool Residential Whirlpool LGN2000PW1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8533770		Not Available	Sheet, Cycle Feature
"	8562584		Not Available	Instructions, Installation
"	8578181		Not Available	Use & Care Guide
"	3406668		Not Available	Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	3401684			Jumper, Wire
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	717252			Receptacle, Terminal
6	3405154			Switch Rotary
7	8530169			Switch, Temperature
8	8271359	279962		Endcap

"	8271362	279965	Endcap
9	693995		Screw, Hex Head
10	8557857		Screen, Lint
"	8557858		Screen, Lint
11	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8533951	3400859	Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
"	8557931	8563986	Top
17	359625	487240	Screw, For Mtg. Service Capacitor
18	8544937		Knob, Control
"	8544938		Knob, Control
19	3394427		Clip-Harness
20	388326		Screw, 8-18 X 1.25
21	3406725		Timer Assembly
22	8558178		Control, Electronic
23	3391885		Connector, Edge
24	3397269		Connector, Timer
25	3401144		Connector
26	3403499		Connector, 2-Postion
27	3403498		Connector, 3-Position
28	3400985		Medallion
30	357213		Nut, Push-In
31	8299890		Harness, Wiring
32	8536939		Clip, Knob
33	3347243		Block, Disconnect
34	8274261		Do-It-Yourself Repair Manuals
39	3398095		Switch, Push-To-Start
40	8544957		Timer Knob Assembly
"	8544958		Timer Knob Assembly
41	94614		Terminal
42	8544895		Bracket, Control
43	8545988		Panel, Control
"	8545989		Panel, Control
44	3936144		Do-It-Yourself Repair Manuals

the laundry company®