


Whirlpool LGQ8611LG1 01 - TOP AND CONSOLE PARTS

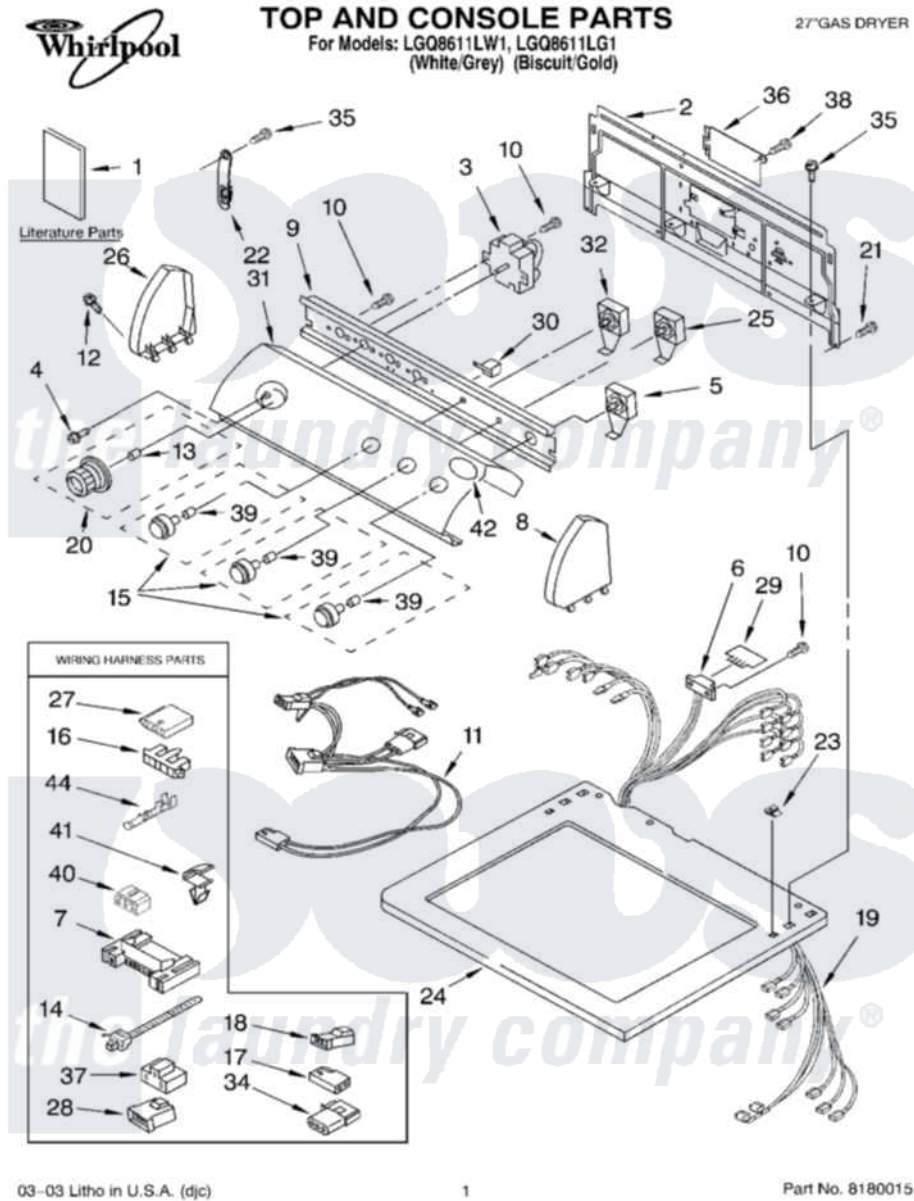

03-03 Litho in U.S.A. (djc)

1

Part No. 8180015

Whirlpool [Residential Whirlpool LGQ8611LG1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8541832		Not Available	Literature Parts (Wiring Diagram)
"	LIT8522243		Not Available	Literature Parts (Guide, Use & Care)
"	LIT8535834		Not Available	Literature Parts (Instructions, Installation)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	8317305	285909		Panel-Rear
3	3406725			Timer Assembly
4	3400859			Screw, Grounding
5	3398095			Switch, Push-To-Start
6	3391885			Connector, Edge
7	3395683			Receptacle, Multi-Terminal
8	8271359	279962		Endcap
"	8271362	279965		Endcap

9	8271316		Bracket, Control
10	3390646	W10139210	Screw, 8-18 X 5/16
11	3401850		Harness-Gas
12	388326		Screw, 8-18 X 1.25
13	688805		Clip, Spring Knob
14	3391018		Tie Cable
15	8538957		Knob, Control
"	8538958		Knob, Control
16	3397269		Connector, Timer
17	717252		Receptacle, Terminal
18	3403499		Connector, 2-Position
19	8299948		Harness, Wiring
20	8538953		Timer Knob Assembly
"	8538954		Timer Knob Assembly
21	693995		Screw, Hex Head
22	8318255	8568314	Strap, Console
23	357213		Nut, Push-In
24	8271399	3979278	Top
"	8271401	3979279	Top
25	3405156		Switch, Rotary
26	8271365	279962	Endcap
"	8271368	279965	Endcap
27	3936144		Do-It-Yourself Repair Manuals
28	3403498		Connector, 3-Position
29	3390537	8558178	Control, Electronic
30	694419		Mini-Buzzer
31	8532623		Panel, Control
"	8532624		Panel, Control
32	8530169		Switch, Temperature
34	697779		Plug, 3-Way
35	3390647	488729	Screw
36	8317340		Cover, Terminal Block
37	3401144		Connector
38	3390814	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
39	8536939		Clip, Knob
40	3347243		Block, Disconnect
41	3394427		Clip-Harness
42	3955775	8303811	Badge, Assembly
44	94614		Terminal