

Whirlpool LGQ8611PW1 04 - 8318276 BURNER ASSEMBLY, OPTIONAL PARTS (NOT INCLUDED)


8318276 BURNER ASSEMBLY

For Models: LGQ8611PW1, LGQ8611PG1

(White/Grey) (Biscuit/Gold)

USE WITH TYPE 1 - NATURAL

AND TYPE 4 LIQUEFIED PROPANE AND BUTANE GASES

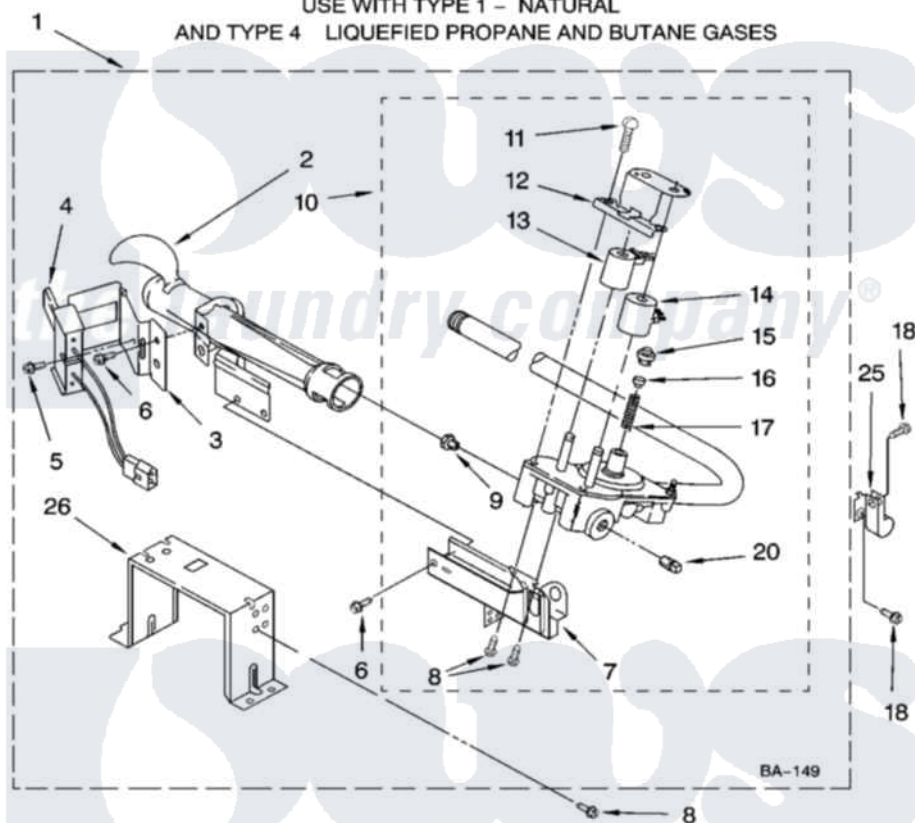

8180611

7

Whirlpool [Residential Whirlpool LGQ8611PW1 Dryer Parts](#) Parts Diagram 04 - 8318276 BURNER ASSEMBLY, OPTIONAL PARTS (NOT INCLUDED).
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8318276	280119		Burner-Gas
2	688617	693140		Burner
3	694298			Bracket, Ignitor
4	686590	279311		Ignitor
5	3393909			Screw, 8-32 X 7/8
6	343641	681414		Screw, 10AB X 1/2
7	3389871		Not Available	Base, Burner
8	3387057			Screw, 10-16 X 1/2 Orifice, Burner
9	234826			Orifice, Burner Type 1
"	229742			Orifice, Burner
"	234868			Orifice, Burner
10	8318281	W10480542		Valve-Gas
11	694421			Screw, Bracket Mounting
12	694538			Bracket, Shunt

13	694540		Coil, 60 Hz
14	694539		Coil, 60 Hz
15	694424		Leak, Limiter
16	694423		Screw, Regulator Adjustment
17	694422		Spring, Regulator
18	3390647	488729	Screw
20	239822	W10295523	Plug, Pipe
25	3387561		Clamp-Pipe
26	3389889		Bracket, Support
"	N/A	Not Available	FOLLOWING PARTS NOT ILLUSTRATED
"	694572	49572A	Conversion Kit To Type L.p.g.f
	4392067		Kit, Dryer Repair
"	3406911	8212450A	Dryer Rack
"	346764		Kit, Hold Down
"	8522199		Accessory Parts
"	72017		Paint, Touch-Up
"	4392899		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	4392901		Paint, Pressurized Spray
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)
"	4392900		Paint, Bulk)

