


Whirlpool LGQ9030PQ1 01 - TOP AND CONSOLE PARTS

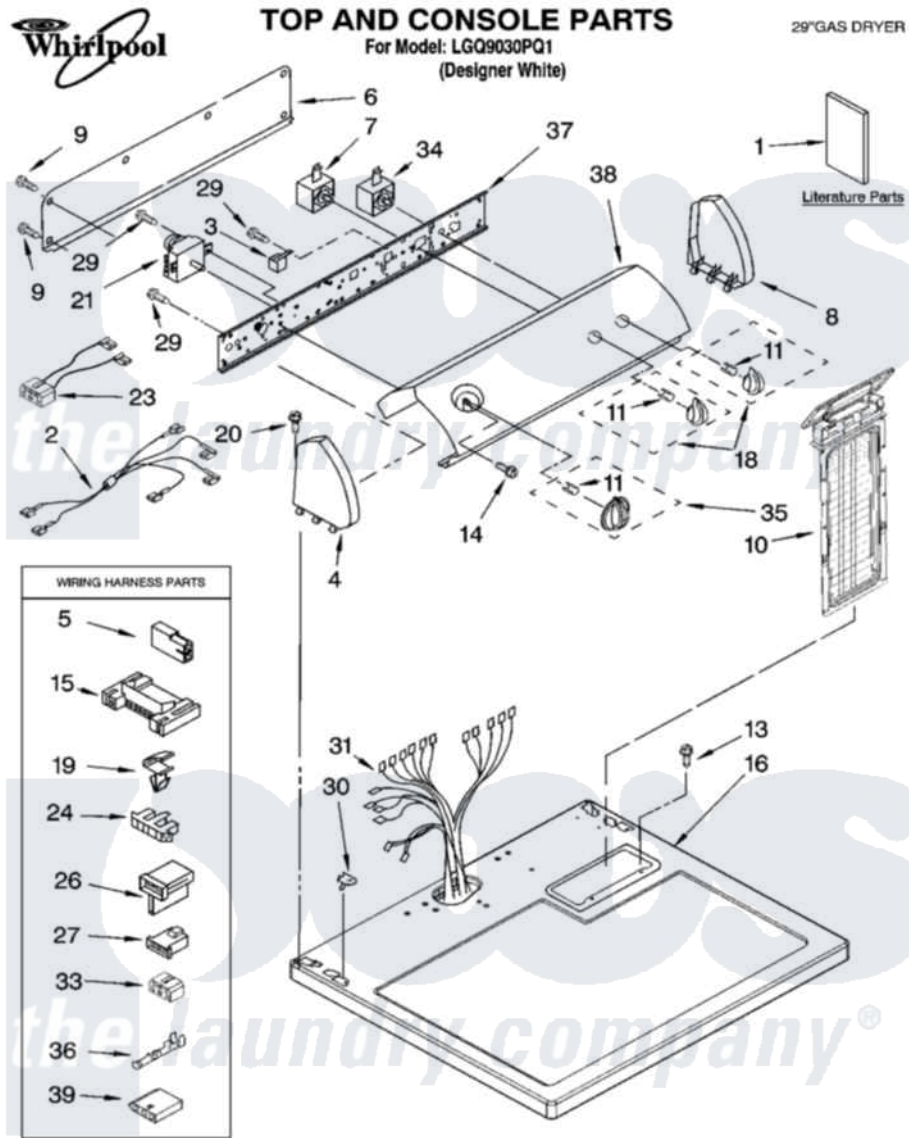

10-05 Litho in U.S.A. (LT)

1

Part No. 8180863

Whirlpool [Residential Whirlpool LGQ9030PQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8562582		Not Available	Instructions, Installation
"	8578183		Not Available	Use And Care Guide
"	3979703		Not Available	Wiring Diagram
"	8533770		Not Available	Sheet, Cycle Feature
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8539888			Jumper, Wire
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
5	717252			Receptacle, Terminal
6	8274261			Do-It-Yourself Repair Manuals
7	3399640			Switch, Rotary
8	8271359	279962		Endcap
9	693995			Screw, Hex Head

10	8557857		Screen, Lint
11	8536939		Clip, Knob
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8533951	3400859	Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
18	8544935		Knob, Control
19	3394427		Clip-Harness
20	388326		Screw, 8-18 X 1.25
21	3976575		Timer Assembly
23	3976562		Jumper, Wire
24	3397269		Connector, Timer
26	3403499		Connector, 2-Position
27	3403498		Connector, 3-Position
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
30	357213		Nut, Push-In
31	8299877		Harness, Wiring
33	3347243		Block, Disconnect
34	8543274		Switch, Push-To-Start
35	8544955		Timer Knob Assembly
36	94614		Terminal
37	8271418		Bracket, Control
38	8545969		Panel, Control
39	3936144		Do-It-Yourself Repair Manuals

the laundry company[®]

the laundry company[®]