


# Whirlpool LGQ9508LW1 01 - TOP AND CONSOLE PARTS

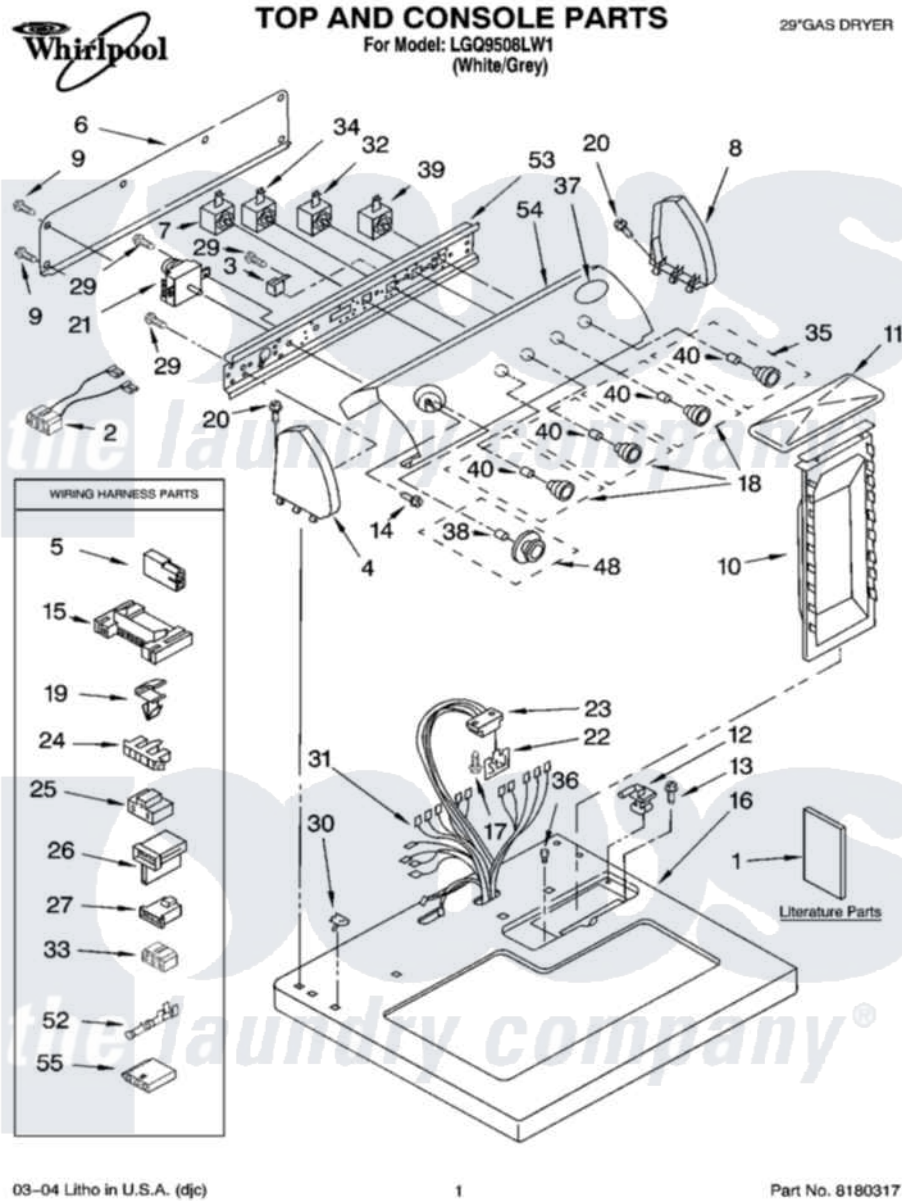

Whirlpool Residential Whirlpool LGQ9508LW1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8535830		Not Available	Literature Parts (Instructions, Installation)
"	LIT8535823		Not Available	Literature Parts (Sheet, Cycle Feature (For Model LEQ5000KW1))
"	LIT8522243		Not Available	Literature Parts (Guide, Use & Care)
"	LIT3406661		Not Available	Literature Parts (Wiring Diagram)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	<a href="#">677818L</a>		Diy
2	<a href="#">3401695</a>			Wire, Jumper Buzzer
3	<a href="#">694419</a>			Mini-Buzzer
4	8271365	<a href="#">279962</a>		Endcap
5	<a href="#">717252</a>			Receptacle, Terminal
6	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
7	<a href="#">3405155</a>			Switch, Temperature

8	8271359	<a href="#">279962</a>	Endcap
9	<a href="#">693995</a>		Screw, Hex Head
10	<a href="#">349639</a>		HANdle And Lint Screen Assembly
11	<a href="#">8283378</a>		Cover, Lint Screen
12	3978605	<a href="#">W10044470</a>	Hinge, RH
"	<a href="#">3978606</a>		Hinge, Lint Lid
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	<a href="#">3400859</a>		Screw, Grounding
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	8271390	<a href="#">8521918</a>	Top
17	343641	<a href="#">681414</a>	Screw, 10AB X 1/2
18	<a href="#">8538957</a>		Knob, Control
19	<a href="#">3394427</a>		Clip-Harness
20	<a href="#">388326</a>		Screw, 8-18 X 1.25
21	<a href="#">3406725</a>		Timer Assembly
22	3390537	<a href="#">8558178</a>	Control, Electronic
23	<a href="#">3391885</a>		Connector, Edge
24	<a href="#">3397269</a>		Connector, Timer
25	<a href="#">3401144</a>		Connector
26	<a href="#">3403499</a>		Connector, 2-Postion
27	<a href="#">3403498</a>		Connector, 3-Position
29	3390646	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
30	<a href="#">357213</a>		Nut, Push-In
31	<a href="#">8299891</a>		Harness, Wiring
32	<a href="#">3405152</a>		Switch, Wrinkle Shield
33	<a href="#">3347243</a>		Block, Disconnect
34	<a href="#">3405154</a>		Switch Rotary
35	<a href="#">8538959</a>		Knob, Push-To-Start
36	297535	<a href="#">17258</a>	Bumper
37	3955775	<a href="#">8303811</a>	Badge, Assembly
38	<a href="#">688805</a>		Clip, Spring Knob
39	<a href="#">3398094</a>		Switch, Push To Start
40	<a href="#">8536939</a>		Clip, Knob
48	<a href="#">8538953</a>		Timer Knob Assembly
52	<a href="#">94614</a>		Terminal
53	<a href="#">8271418</a>		Bracket, Control
54	<a href="#">8532617</a>		Panel, Control
55	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
"	N/A		Not Available
"	279948	<a href="#">4392065</a>	ACCESSORY PARTS
"	<a href="#">346764</a>		Kit, Dryer Repair
"	<a href="#">3406839</a>		Kit, Hold Down
"	<a href="#">3406839</a>		Dry Rack Assembly
"	<a href="#">8522199</a>		Accessory Parts
"	<a href="#">72017</a>		Paint, Touch-Up
"	<a href="#">350930</a>		Paint, Pressurized Spray B
"	<a href="#">350938</a>		Paint, Pressurized Spray B
"	<a href="#">799344</a>		Paint, Touch-Up )