


Whirlpool LGQ9857LG1 01 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)

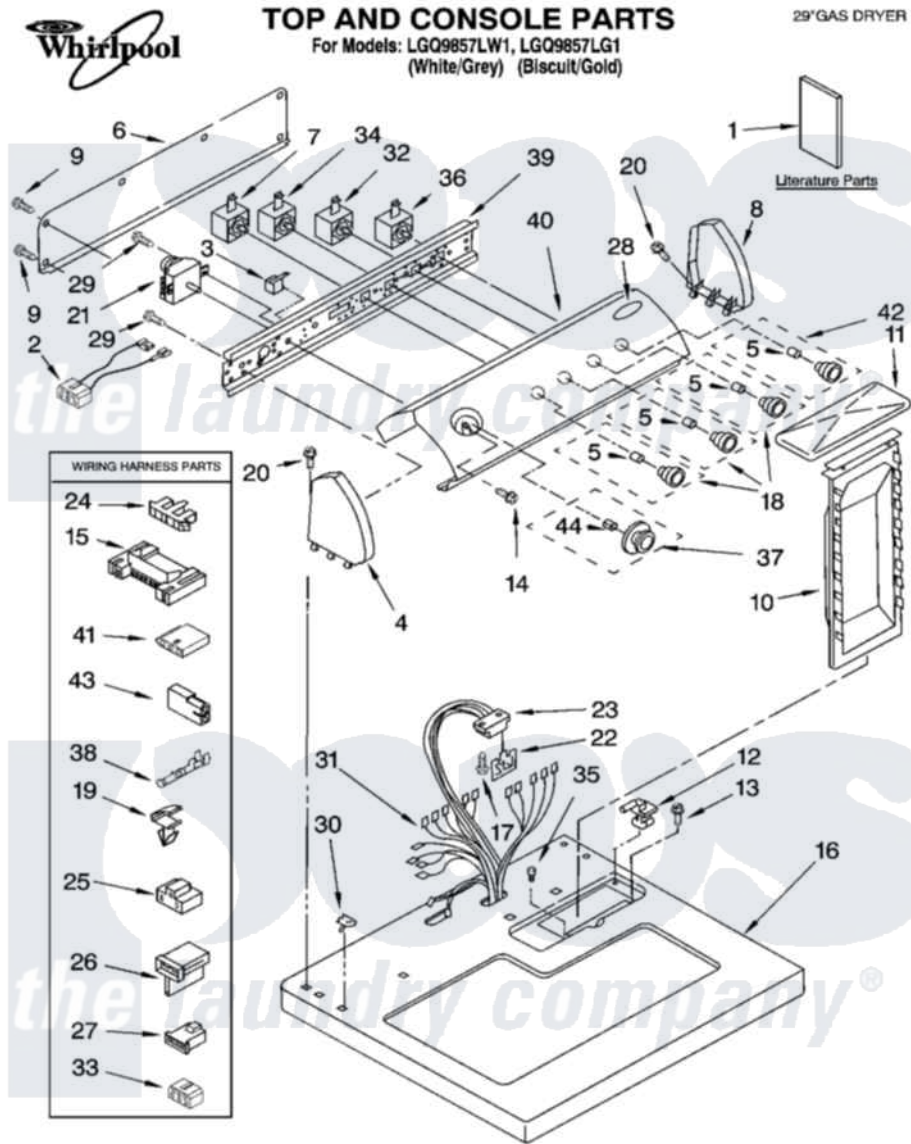

02-04 Litho in U.S.A. (djc)

1

Part No. 8180220

Whirlpool Residential Whirlpool LGQ9857LG1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8535832		Not Available	Literature Parts (Instructions, Installation)
"	LIT3979614		Not Available	Literature Parts (Use & Care Guide)
"	LIT3406668		Not Available	Literature Parts (Label, Wiring Diagram)
"	LIT8535823		Not Available	Literature Parts (Sheet, Cycle Feature (For Model LEQ5000KW1))
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	3401695			Wire, Jumper Buzzer
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
"	8271368	279965		Endcap

5	8536939		Clip, Knob
6	8274261		Do-It-Yourself Repair Manuals
7	3405155		Switch, Temperature
8	8271359	279962	Endcap
"	8271362	279965	Endcap
9	693995		Screw, Hex Head
10	349639		HANdle And Lint Screen Assembly
11	8283378		Cover, Lint Screen
"	8283380		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3400859		Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8271390	8521918	Top
"	8271392	8521920	Top
17	343641	681414	Screw, 10AB X 1/2
18	8538957		Knob, Control
"	8538958		Knob, Control
19	3394427		Clip-Harness
20	388326		Screw, 8-18 X 1.25
21	3406725		Timer Assembly
22	3390537	8558178	Control, Electronic
23	3391885		Connector, Edge
24	3397269		Connector, Timer
25	3401144		Connector
26	3403499		Connector, 2-Postion
27	3403498		Connector, 3-Position
28	3955775	8303811	Badge, Assembly
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299891		Harness, Wiring
32	3405152		Switch, Wrinkle Shield
33	3347243		Block, Disconnect
34	3405154		Switch Rotary
35	297535	17258	Bumper
36	3398094		Switch, Push To Start
37	8538953		Timer Knob Assembly
"	8538954		Timer Knob Assembly
38	94614		Terminal
39	8271418		Bracket, Control
40	8532631		Panel, Control
"	8532632		Panel, Control
41	3936144		Do-It-Yourself Repair Manuals
42	8538959		Knob, Push-To-Start
"	8538960		Knob, Push-To-Start
43	717252		Receptacle, Terminal
44	688805		Clip, Spring Knob
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	3406839		Dry Rack Assembly

"	8522199	Accessory Parts
"	346764	Kit, Hold Down
"	72017	Paint, Touch-Up
"	4392899	Paint, Touch-Up
"	350930	Paint, Pressurized Spray B
"	4392901	Paint, Pressurized Spray
"	350938	Paint, Pressurized Spray B
"	799344	Paint, Touch-Up)
"	4392900	Paint, Bulk)

