


Whirlpool LGQ9858LG1 01 - TOP AND CONSOLE PARTS

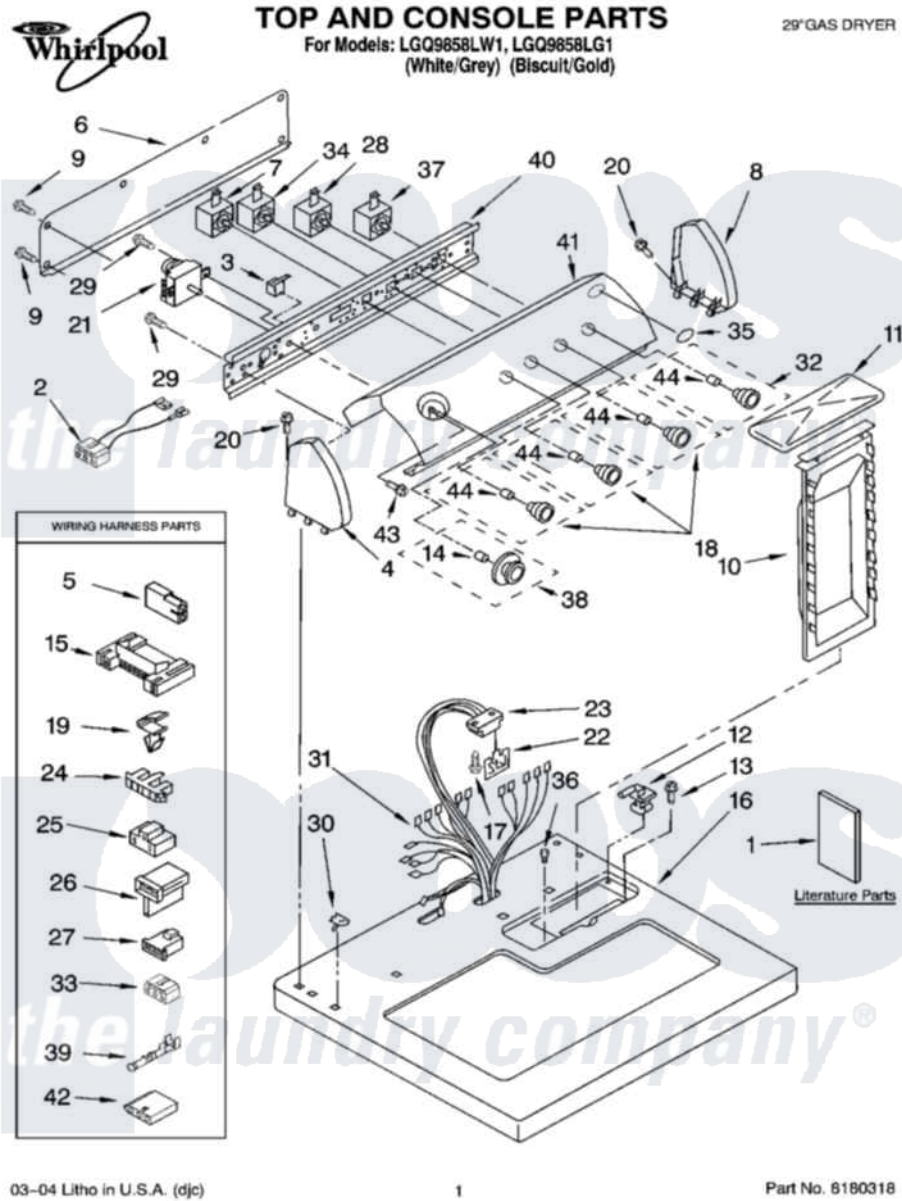

03-04 Litho in U.S.A. (djc)

1

Part No. 8180318

Whirlpool Residential Whirlpool LGQ9858LG1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8535830		Not Available	Literature Parts (Instructions, Installation)
"	LIT8535823		Not Available	Literature Parts (Sheet, Cycle Feature (For Model LEQ5000KW1))
"	LIT8522243		Not Available	Literature Parts (Guide, Use & Care)
"	LIT3406661		Not Available	Literature Parts (Wiring Diagram)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	3401695			Wire, Jumper Buzzer
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	717252			Receptacle, Terminal
6	8274261			Do-It-Yourself Repair Manuals

7	3405155		Switch, Temperature
8	8271359	279962	Endcap
"	8271362	279965	Endcap
9	693995		Screw, Hex Head
10	349639		HAndle And Lint Screen Assembly
11	8283378		Cover, Lint Screen
"	8283380		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	688805		Clip, Spring Knob
15	3395683		Receptacle, Multi-Terminal
16	8271390	8521918	Top
"	8271392	8521920	Top
17	343641	681414	Screw, 10AB X 1/2
18	8538957		Knob, Control
"	8538958		Knob, Control
19	3394427		Clip-Harness
20	388326		Screw, 8-18 X 1.25
21	3406725		Timer Assembly
22	3390537	8558178	Control, Electronic
23	3391885		Connector, Edge
24	3397269		Connector, Timer
25	3401144		Connector
26	3403499		Connector, 2-Position
27	3403498		Connector, 3-Position
28	3405152		Switch, Wrinkle Shield
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299891		Harness, Wiring
32	8538959		Knob, Push-To-Start
"	8538960		Knob, Push-To-Start
33	3347243		Block, Disconnect
34	3405154		Switch Rotary
35	3955775	8303811	Badge, Assembly
36	297535	17258	Bumper
37	3398094		Switch, Push To Start
38	8538953		Timer Knob Assembly
"	8538954		Timer Knob Assembly
39	94614		Terminal
40	8271418		Bracket, Control
41	8532631		Panel, Control
"	8532632		Panel, Control
42	3936144		Do-It-Yourself Repair Manuals
43	3400859		Screw, Grounding
44	8536939		Clip, Knob
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	346764		Kit, Hold Down
"	3406839		Dry Rack Assembly
"	8522199		Accessory Parts

"	72017	Paint, Touch-Up
"	4392899	Paint, Touch-Up
"	350930	Paint, Pressurized Spray B
"	4392901	Paint, Pressurized Spray
"	350938	Paint, Pressurized Spray B
"	799344	Paint, Touch-Up)
"	4392900	Paint, Bulk)

