


Whirlpool LGR3624JQ3 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Model: LGR3624JQ3
(Designer White)

29" GAS DRYER

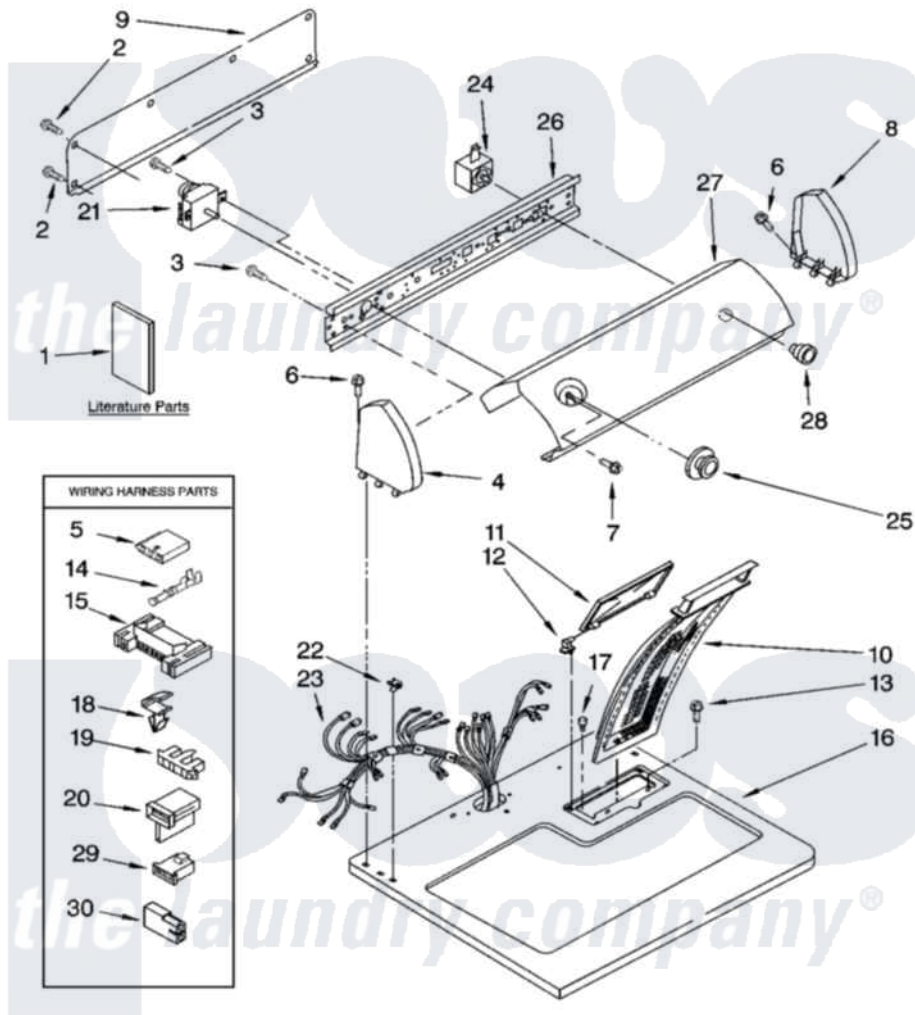

03-04 Litho in U.S.A. (djc)

1

Part No. 8180319

Whirlpool Residential Whirlpool LGR3624JQ3 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8522243		Not Available	Literature Parts (Guide, Use & Care)
"	LIT8535830		Not Available	Literature Parts (Instructions, Installation)
"	LIT8522245		Not Available	Literature Parts (Sheet, Cycle Feature (For Model LEQ5000KQ1))
"	LIT8528187		Not Available	Literature Parts (Wiring Diagram)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	693995			Screw, Hex Head
3	3390646	W10139210		Screw, 8-18 X 5/16
4	8271365	279962		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	3400859			Screw, Grounding

8	8271359	279962	Endcap
9	8274261		Do-It-Yourself Repair Manuals
10	339392		Screen, Lint
11	8283378		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	94614		Terminal
15	3395683		Receptacle, Multi-Terminal
16	8271390	8521918	Top
17	297535	17258	Bumper
18	3394427		Clip-Harness
19	3397269		Connector, Timer
20	3403499		Connector, 2-Postion
21	3976575		Timer Assembly
22	357213		Nut, Push-In
23	8299875		Harness, Wiring
24	3977456		Switch, Push-To-Start
25	8312687	3957754	Timer Knob Assembly
26	8271418		Bracket, Control
27	3977813		Panel, Control
28	8271341	3957804	Knob, Push-To-Start
29	3403498		Connector, 3-Position
30	717252		Receptacle, Terminal
"	N/A		Not Available
"	279948	4392065	ACCESSORY PARTS
"	8522199		Kit, Dryer Repair
"	346764		Accessory Parts
"	689790		Kit, Hold Down
"	72017		Dry Rack
"	350930		Paint, Touch-Up
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Pressurized Spray B
"			Paint, Touch-Up)

