


Whirlpool LGR4634PQ1 01 - TOP AND CONSOLE PARTS

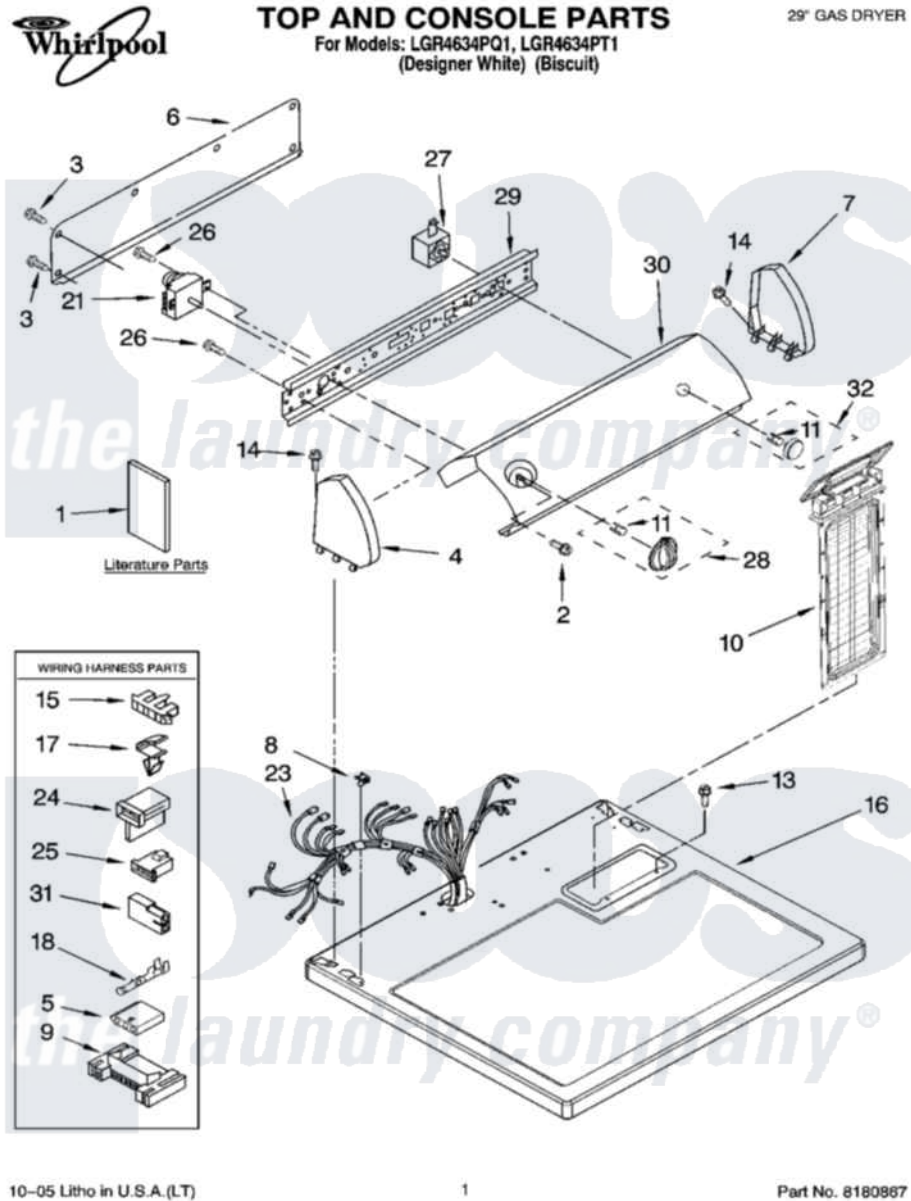

10-05 Litho in U.S.A.(LT)

1

Part No. 8180867

Whirlpool Residential Whirlpool LGR4634PQ1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8578181		Not Available	Use & Care Guide
"	8562584		Not Available	Instructions, Installation
"	8563884		Not Available	Wiring Diagram
"	8533770		Not Available	Sheet, Cycle Feature
"	N/A		Not Available	Following May Be Purchased
"	N/A		Not Available	DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8533951	3400859		Screw, Grounding
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	8274261			Do-It-Yourself Repair Manuals
7	8271359	279962		Endcap
"	8271362	279965		Endcap

8	357213		Nut, Push-In
9	3395683		Receptacle, Multi-Terminal
10	8557861		Screen, Lint
"	8557862		Screen, Lint
11	8536939		Clip, Knob
13	688983	487240	Screw, For Mtg. Service Capacitor
14	388326		Screw, 8-18 X 1.25
15	3397269		Connector, Timer
16	8557930	8563985	Top
"	8557931	8563986	Top
17	3394427		Clip-Harness
18	94614		Terminal
21	3976584		Timer Assembly
23	8299876		Harness, Wiring
24	3403499		Connector, 2-Postion
25	3403498		Connector, 3-Position
26	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
27	3977456		Switch, Push-To-Start
28	8544955		Timer Knob Assembly
"	8544956		Timer Knob Assembly
29	8271418		Bracket, Control
30	8545960		Panel, Control
"	8545970		Panel, Control
31	717252		Receptacle, Terminal
32	8544939		Knob, Push-To-Start
"	8544942		Knob, Push-To-Start

the laundry company[®]

the laundry company[®]