


# Whirlpool LGR5636LQ1 01 - TOP AND CONSOLE PARTS



## TOP AND CONSOLE PARTS

29" GAS DRYER

For Models: LGR5636LQ1, LGR5636LT1  
(Designer White) (Biscuit)

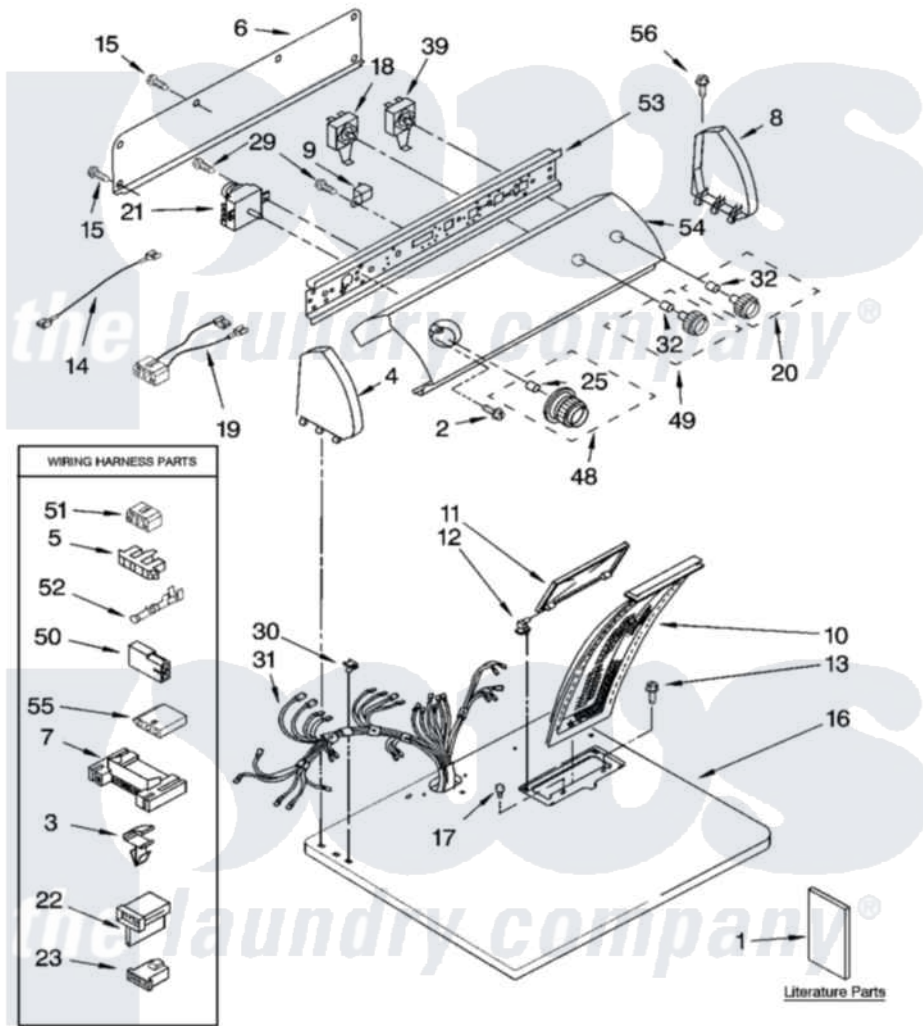

04-04 Litho in U.S.A. (djc)

1

Part No. 8180327

Whirlpool Residential Whirlpool LGR5636LQ1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8535830		Not Available	Literature Parts (Instructions, Installation)
"	LIT8522243		Not Available	Literature Parts (Guide, Use & Care)
"	LIT8528187		Not Available	Literature Parts (Wiring Diagram)
"	LIT8522245		Not Available	Literature Parts (Sheet, Cycle Feature (For Model LEQ5000KQ1))
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	<a href="#">677818L</a>		Diy
2	<a href="#">3400859</a>			Screw, Grounding
3	<a href="#">3394427</a>			Clip-Harness
4	8271365	<a href="#">279962</a>		Endcap
"	8271368	<a href="#">279965</a>		Endcap
5	<a href="#">3397269</a>			Connector, Timer
6	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals

7	<a href="#">3395683</a>		Receptacle, Multi-Terminal
8	8271359	<a href="#">279962</a>	Endcap
"	8271362	<a href="#">279965</a>	Endcap
9	<a href="#">694419</a>		Mini-Buzzer
10	<a href="#">349639</a>		HANdle And Lint Screen Assembly
11	<a href="#">8283378</a>		Cover, Lint Screen
"	<a href="#">8283380</a>		Cover, Lint Screen
12	3978605	<a href="#">W10044470</a>	Hinge, RH
"	<a href="#">3978606</a>		Hinge, Lint Lid
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	<a href="#">3401674</a>		Wire, Jumper
15	<a href="#">693995</a>		Screw, Hex Head
16	8271390	<a href="#">8521918</a>	Top
"	8271392	<a href="#">8521920</a>	Top
17	297535	<a href="#">17258</a>	Bumper
18	<a href="#">3405152</a>		Switch, Wrinkle Shield
19	8283292	<a href="#">8283276</a>	Wire, Jumper
20	8271341	<a href="#">3957804</a>	Knob, Push-To-Start
"	8271349		Not Available Knob, Push To Start (Biscuit)
21	<a href="#">3976584</a>		Timer Assembly
22	<a href="#">3403499</a>		Connector, 2-Position
23	<a href="#">3403498</a>		Connector, 3-Position
25	<a href="#">688805</a>		Clip, Spring Knob
29	3390646	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
30	<a href="#">357213</a>		Nut, Push-In
31	<a href="#">8299877</a>		Harness, Wiring
32	<a href="#">8536939</a>		Clip, Knob
39	<a href="#">3977456</a>		Switch, Push-To-Start
48	8312687	<a href="#">3957754</a>	Timer Knob Assembly
"	8271404	<a href="#">3957755</a>	Timer Knob Assembly
49	8271339	<a href="#">3957799</a>	Knob, Control
"	8271348	<a href="#">3957797</a>	Knob, Push-To-Start
50	<a href="#">717252</a>		Receptacle, Terminal
51	<a href="#">3347243</a>		Block, Disconnect
52	<a href="#">94614</a>		Terminal
53	<a href="#">8271418</a>		Bracket, Control
54	<a href="#">8532635</a>		Panel, Control
"	<a href="#">8532636</a>		Panel, Control
55	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
56	<a href="#">388326</a>		Screw, 8-18 X 1.25

*the laundry company*<sup>®</sup>