


Whirlpool LGR5644JQ3 01 - TOP AND CONSOLE PARTS

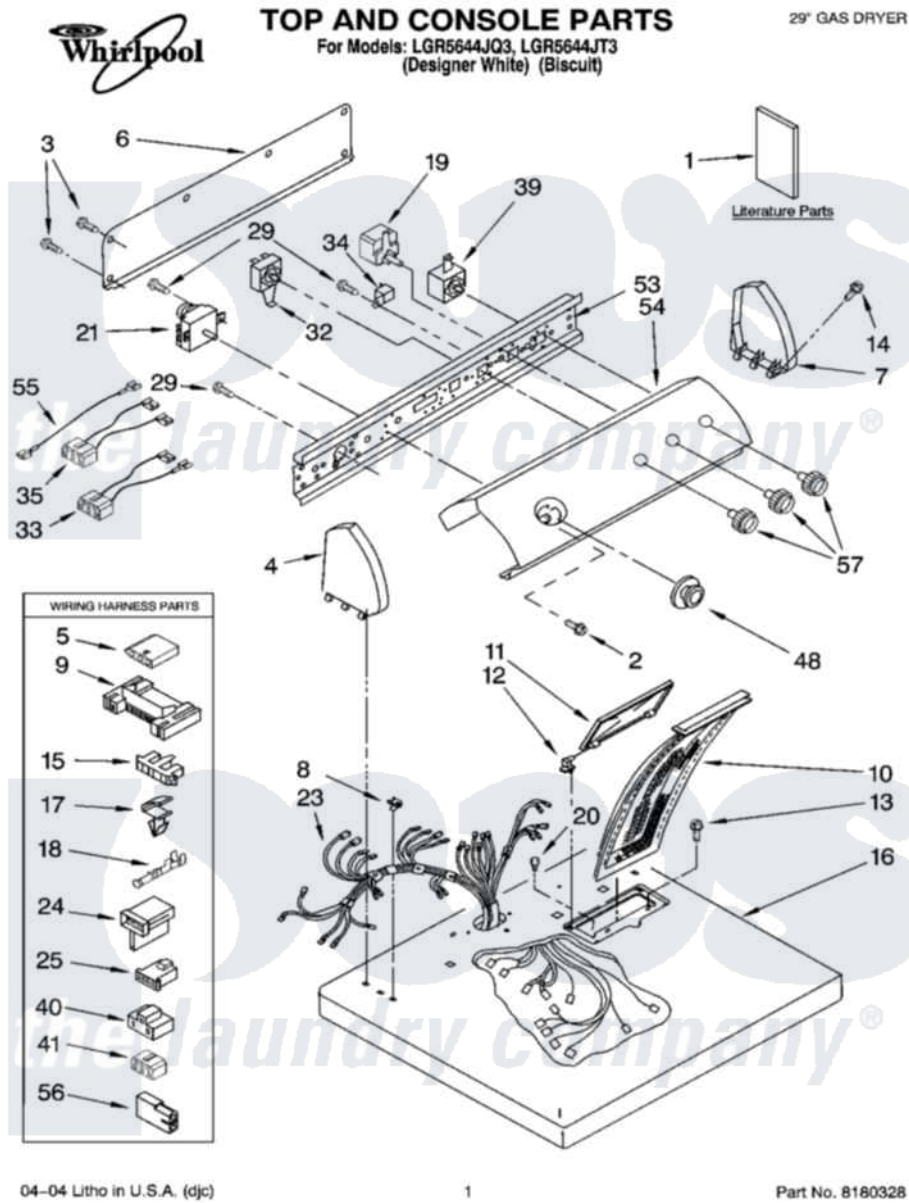

04-04 Litho in U.S.A. (djc)

1

Part No. 8180328

Whirlpool Residential Whirlpool LGR5644JQ3 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8522243		Not Available	Literature Parts (Guide, Use & Care)
"	LIT8535830		Not Available	Literature Parts (Instructions, Installation)
"	LIT3979703		Not Available	Literature Parts (Label, Wiring Diagram)
"	LIT8522245		Not Available	Literature Parts (Sheet, Cycle Feature (For Model LEQ5000KQ1))
"	N/A		Not Available	Following May Be Purchased
"	N/A		Not Available	DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	3400859			Screw, Grounding
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	8274261			Do-It-Yourself Repair Manuals

7	8271359	279962	Endcap
"	8271362	279965	Endcap
8	357213		Nut, Push-In
9	3395683		Receptacle, Multi-Terminal
10	339392		Screen, Lint
11	8283378		Cover, Lint Screen
"	8283380		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	388326		Screw, 8-18 X 1.25
15	3397269		Connector, Timer
16	8271390	8521918	Top
"	8271392	8521920	Top
17	3394427		Clip-Harness
18	94614		Terminal
19	3405156		Switch, Rotary
20	297535	17258	Bumper
21	8299766		Timer Assembly
23	8299878		Harness, Wiring
24	3403499		Connector, 2-Postion
25	3403498		Connector, 3-Position
29	3390646	W10139210	Screw, 8-18 X 5/16
32	3399639		Switch, Rotary Temperature
33	3397695		Wire, Jumper
34	694419		Mini-Buzzer
35	3396029	8539893	Wire, Jumper
39	3398095		Switch, Push-To-Start
40	3401144		Connector
41	3347243		Block, Disconnect
48	8312687	3957754	Timer Knob Assembly
"	8271404	3957755	Timer Knob Assembly
53	8271418		Bracket, Control
54	3977819		Panel, Control
"	3977820		Panel, Control
55	3401684		Jumper, Wire
56	717252		Receptacle, Terminal
57	8271339	3957799	Knob, Control
"	8271348	3957797	Knob, Push-To-Start
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	346764		Kit, Hold Down
"	689790		Dry Rack
"	8522199		Accessory Parts
"	72017		Paint, Touch-Up
"	4392899		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	4392901		Paint, Pressurized Spray
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)
"	4392900		Paint, Bulk)