


Whirlpool LGR5644PQ0 01 - TOP AND CONSOLE PARTS

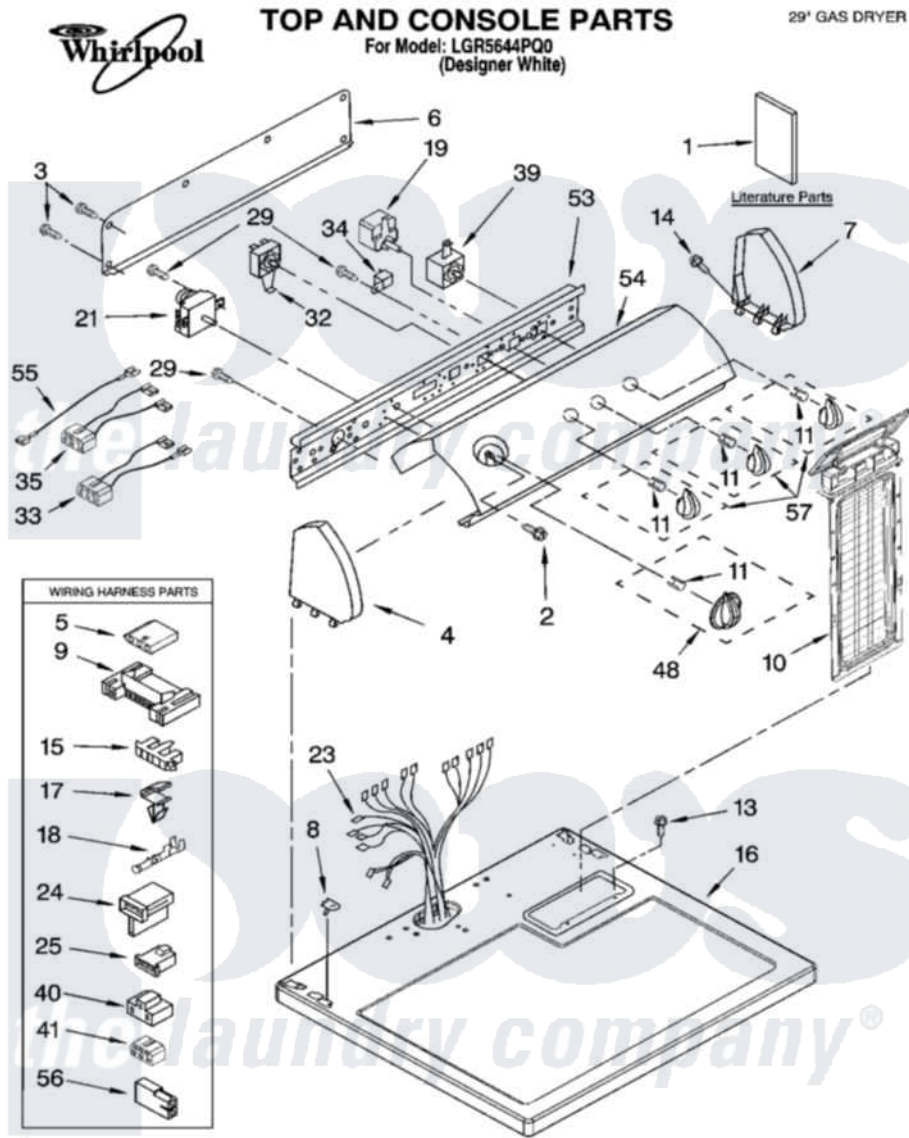

5-04 Litho in U.S.A. (djc)

1

Part No. 8180395

Whirlpool Residential Whirlpool LGR5644PQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8522243		Not Available	Use And Care Guide
"	8535830		Not Available	Installation Instructions
"	3979703		Not Available	Wiring Diagram
"	8533770		Not Available	Sheet, Cycle Feature
"	N/A		Not Available	Following May Be Purchased
"	N/A		Not Available	DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	3400859			Screw, Grounding
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	8274261			Do-It-Yourself Repair Manuals
7	8271359	279962		Endcap
8	357213			Nut, Push-In
9	3395683			Receptacle, Multi-Terminal

10	8557861		Screen, Lint
11	8536939		Clip, Knob
13	688983	487240	Screw, For Mtg. Service Capacitor
14	388326		Screw, 8-18 X 1.25
15	3397269		Connector, Timer
16	8557930	8563985	Top
17	3394427		Clip-Harness
18	94614		Terminal
19	3405156		Switch, Rotary
21	8299766		Timer Assembly
23	8299878		Harness, Wiring
24	3403499		Connector, 2-Position
25	3403498		Connector, 3-Position
29	3390646	W10139210	Screw, 8-18 X 5/16
32	3399639		Switch, Rotary Temperature
33	3397695		Wire, Jumper
34	694419		Mini-Buzzer
35	3396029	8539893	Wire, Jumper
39	3398095		Switch, Push-To-Start
40	3401144		Connector
41	3347243		Block, Disconnect
48	8544955		Timer Knob Assembly
53	8271418		Bracket, Control
54	8545976		Panel, Control
55	3401684		Jumper, Wire
56	717252		Receptacle, Terminal
57	8544935		Knob, Control
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	346764		Kit, Hold Down
"	689790		Dry Rack
"	8522199		Accessory Parts
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

