


Whirlpool LGR6621PQ0 01 - TOP AND CONSOLE PARTS

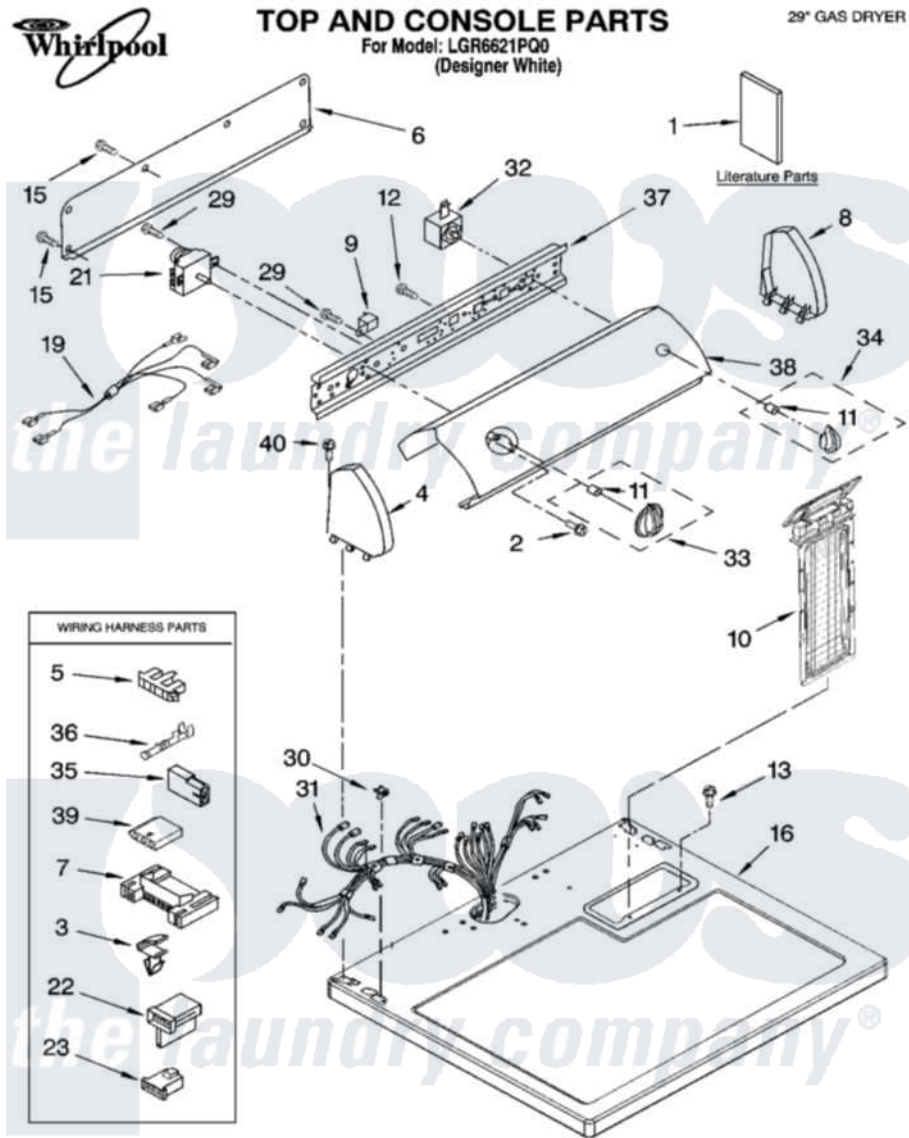

5-04 Lith0 in U.S.A. (djc)

1

Part No. 8180449

Whirlpool Residential Whirlpool LGR6621PQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8562582		Not Available	Instructions, Installation
"	8522243		Not Available	Use And Care Guide
"	8528187			Wiring Diagram
"	8533770		Not Available	Sheet, Cycle Feature
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8533951	3400859		Screw, Grounding
3	3394427			Clip-Harness
4	8271365	279962		Endcap
5	3397269			Connector, Timer
6	8274261			Do-It-Yourself Repair Manuals
7	3395683			Receptacle, Multi-Terminal
8	8271359	279962		Endcap
9	694419			Mini-Buzzer

10	8557857		Screen, Lint
11	8536939		Clip, Knob
12	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240	Screw, For Mtg. Service Capacitor
15	693995		Screw, Hex Head
16	8557930	8563985	Top
19	8539888		Jumper, Wire
21	3976584		Timer Assembly
22	3403499		Connector, 2-Position
23	3403498		Connector, 3-Position
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299877		Harness, Wiring
32	3404233		Switch, Push-To-Start
33	8544955		Timer Knob Assembly
34	8544935		Knob, Control
35	717252		Receptacle, Terminal
36	94614		Terminal
37	8271418		Bracket, Control
38	8545983		Panel, Control
39	3936144		Do-It-Yourself Repair Manuals
40	388326		Screw, 8-18 X 1.25
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	346764		Kit, Hold Down
"	8522199		Accessory Parts
"	3404351		Accessory Parts
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

