


Whirlpool LGR6636PW0 01 - TOP AND CONSOLE PARTS

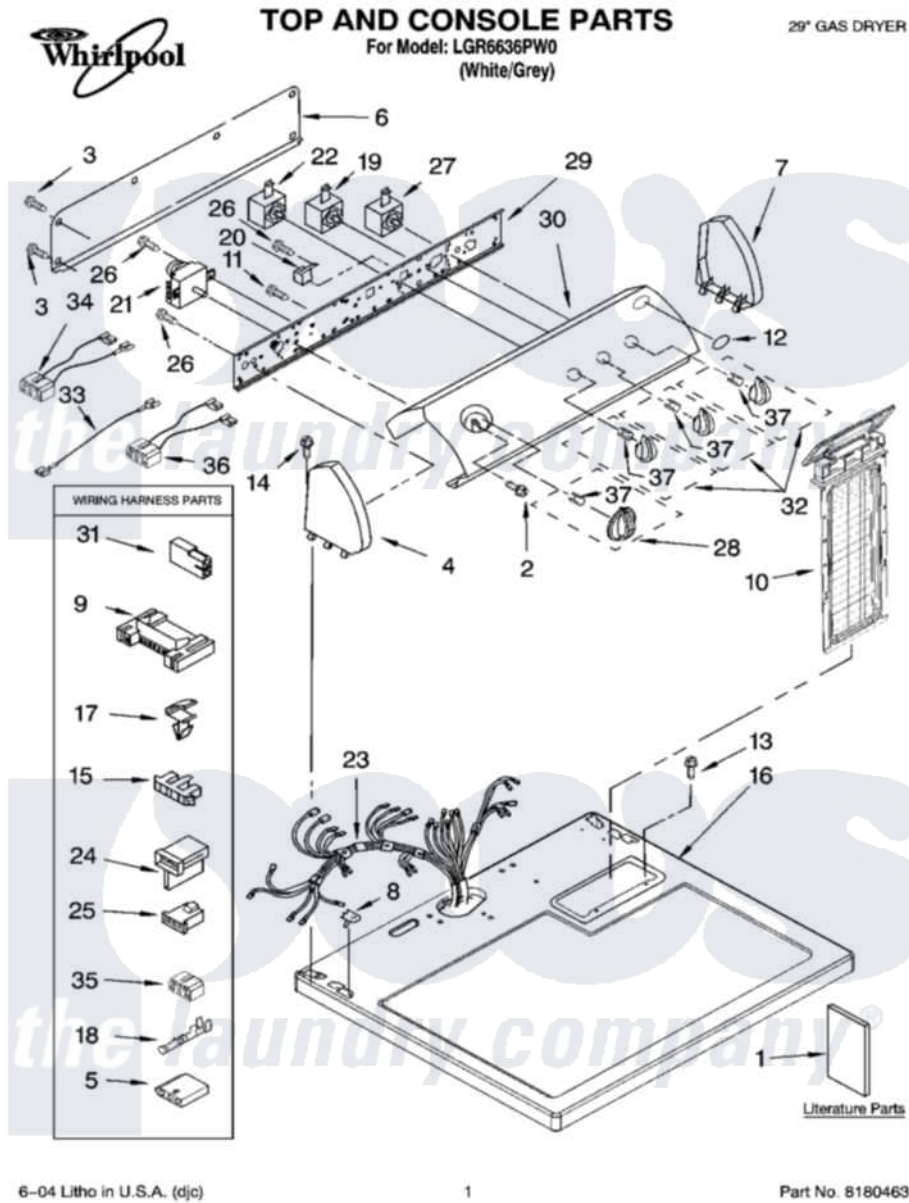

Whirlpool Residential Whirlpool LGR6636PW0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8522243		Not Available	Use And Care Guide
"	8562582		Not Available	Instructions, Installation
"	8533770		Not Available	Sheet, Cycle Feature
"	3979703		Not Available	Wiring Diagram
"	N/A		Not Available	Following May Be Purchased
"	N/A		Not Available	DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8533951	3400859		Screw, Grounding
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	8274261			Do-It-Yourself Repair Manuals
7	8271359	279962		Endcap
8	357213			Nut, Push-In
9	3395683			Receptacle, Multi-Terminal

10	8557857		Screen, Lint
11	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
12	3400985		Medallion
13	688983	487240	Screw, For Mtg. Service Capacitor
14	388326		Screw, 8-18 X 1.25
15	3397269		Connector, Timer
16	8557930	8563985	Top
17	3394427		Clip-Harness
18	94614		Terminal
19	3405156		Switch, Rotary
20	694419		Mini-Buzzer
21	8299766		Timer Assembly
22	3399639		Switch, Rotary Temperature
23	8299879		Harness, Wiring
24	3403499		Connector, 2-Postion
25	3403498		Connector, 3-Position
26	3390646	W10139210	Screw, 8-18 X 5/16
27	3398095		Switch, Push-To-Start
28	8544957		Timer Knob Assembly
29	8544895		Bracket, Control
30	8545967		Panel, Control
31	717252		Receptacle, Terminal
32	8544937		Knob, Control
33	3401684		Jumper, Wire
34	3397695		Wire, Jumper
35	3347243		Block, Disconnect
36	3396029	8539893	Wire, Jumper
37	8536939		Clip, Knob
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	346764		Kit, Hold Down
"	8522199		Accessory Parts
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

