


# Whirlpool LGR7648KQ2 01 - TOP AND CONSOLE PARTS

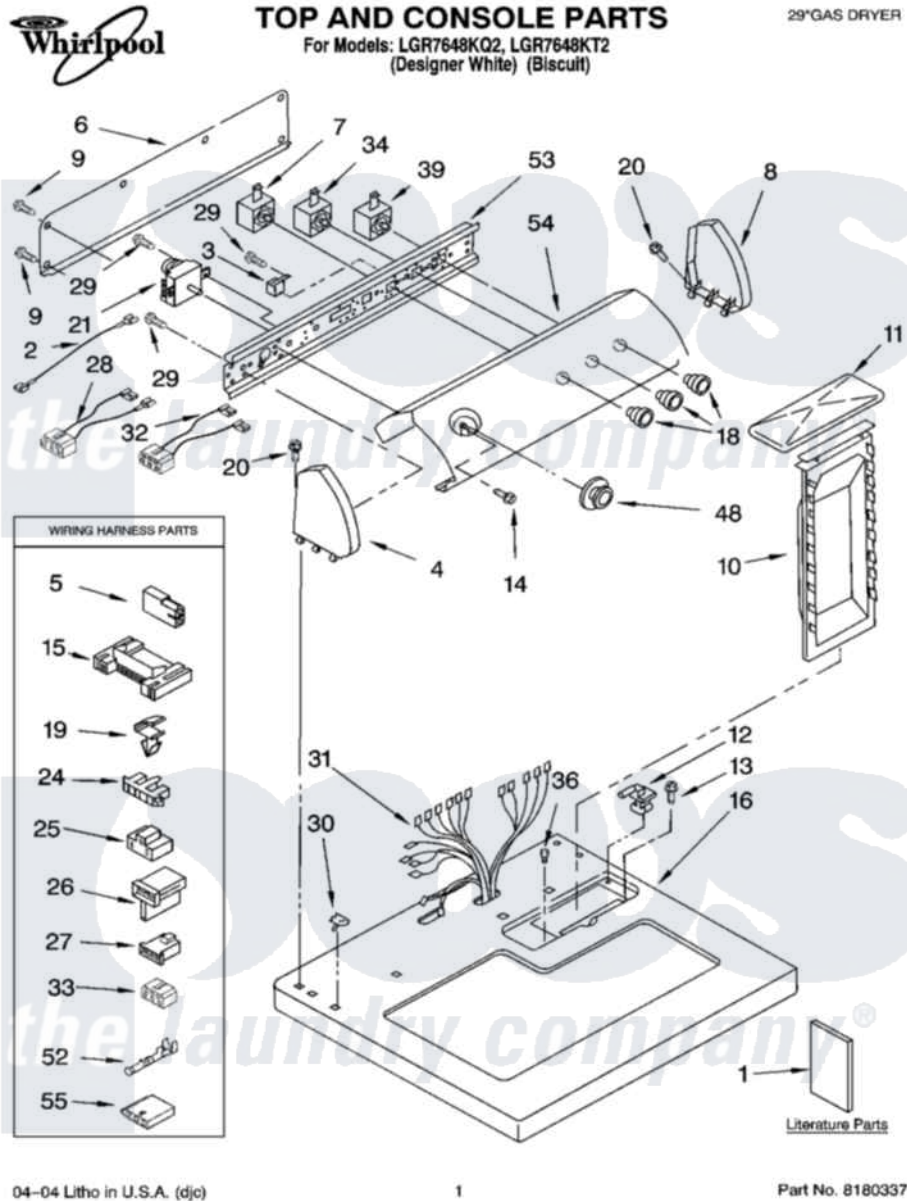

Whirlpool Residential Whirlpool LGR7648KQ2 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8535830		Not Available	Literature Parts (Instructions, Installation)
"	LIT8522243		Not Available	Literature Parts (Guide, Use & Care)
"	LIT3979703		Not Available	Literature Parts (Label, Wiring Diagram)
"	LIT8522245		Not Available	Literature Parts (Sheet, Cycle Feature (For Model LEQ5000KQ1))
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	<a href="#">677818L</a>		Diy
2	<a href="#">3401684</a>			Jumper, Wire
3	<a href="#">694419</a>			Mini-Buzzer
4	8271365	<a href="#">279962</a>		Endcap
"	8271368	<a href="#">279965</a>		Endcap
5	<a href="#">717252</a>			Receptacle, Terminal
6	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals

7	<a href="#">3399639</a>		Switch, Rotary Temperature
8	8271359	<a href="#">279962</a>	Endcap
"	8271362	<a href="#">279965</a>	Endcap
9	<a href="#">693995</a>		Screw, Hex Head
10	<a href="#">349639</a>		HAndle And Lint Screen Assembly
11	<a href="#">8283378</a>		Cover, Lint Screen
"	<a href="#">8283380</a>		Cover, Lint Screen
12	3978605	<a href="#">W10044470</a>	Hinge, RH
"	<a href="#">3978606</a>		Hinge, Lint Lid
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	<a href="#">3400859</a>		Screw, Grounding
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	8271390	<a href="#">8521918</a>	Top
"	8271392	<a href="#">8521920</a>	Top
18	8271339	<a href="#">3957799</a>	Knob, Control
"	8271348	<a href="#">3957797</a>	Knob, Push-To-Start
19	<a href="#">3394427</a>		Clip-Harness
20	<a href="#">388326</a>		Screw, 8-18 X 1.25
21	<a href="#">8299766</a>		Timer Assembly
24	<a href="#">3397269</a>		Connector, Timer
25	<a href="#">3401144</a>		Connector
26	<a href="#">3403499</a>		Connector, 2-Postion
27	<a href="#">3403498</a>		Connector, 3-Position
28	<a href="#">3397695</a>		Wire, Jumper
29	3390646	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
30	<a href="#">357213</a>		Nut, Push-In
31	<a href="#">8299879</a>		Harness, Wiring
32	3396029	<a href="#">8539893</a>	Wire, Jumper
33	<a href="#">3347243</a>		Block, Disconnect
34	<a href="#">3405156</a>		Switch, Rotary
36	297535	<a href="#">17258</a>	Bumper
39	<a href="#">3398095</a>		Switch, Push-To-Start
48	8312687	<a href="#">3957754</a>	Timer Knob Assembly
"	8271404	<a href="#">3957755</a>	Timer Knob Assembly
52	<a href="#">94614</a>		Terminal
53	<a href="#">8271418</a>		Bracket, Control
54	<a href="#">3977851</a>		Panel, Control
"	<a href="#">3977852</a>		Panel, Control
55	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
"	N/A	Not Available	ACCESSORY PARTS
"	279948	<a href="#">4392065</a>	Kit, Dryer Repair
"	<a href="#">346764</a>		Kit, Hold Down
"	<a href="#">8522199</a>		Accessory Parts
"	<a href="#">3406839</a>		Dry Rack Assembly
"	<a href="#">72017</a>		Paint, Touch-Up
"	<a href="#">4392899</a>		Paint, Touch-Up
"	<a href="#">350930</a>		Paint, Pressurized Spray B
"	<a href="#">4392901</a>		Paint, Pressurized Spray
"	<a href="#">350938</a>		Paint, Pressurized Spray B
"	<a href="#">799344</a>		Paint, Touch-Up )
"	<a href="#">4392900</a>		Paint, Bulk )