


Whirlpool LGR8620PG1 01 - TOP AND CONSOLE PARTS

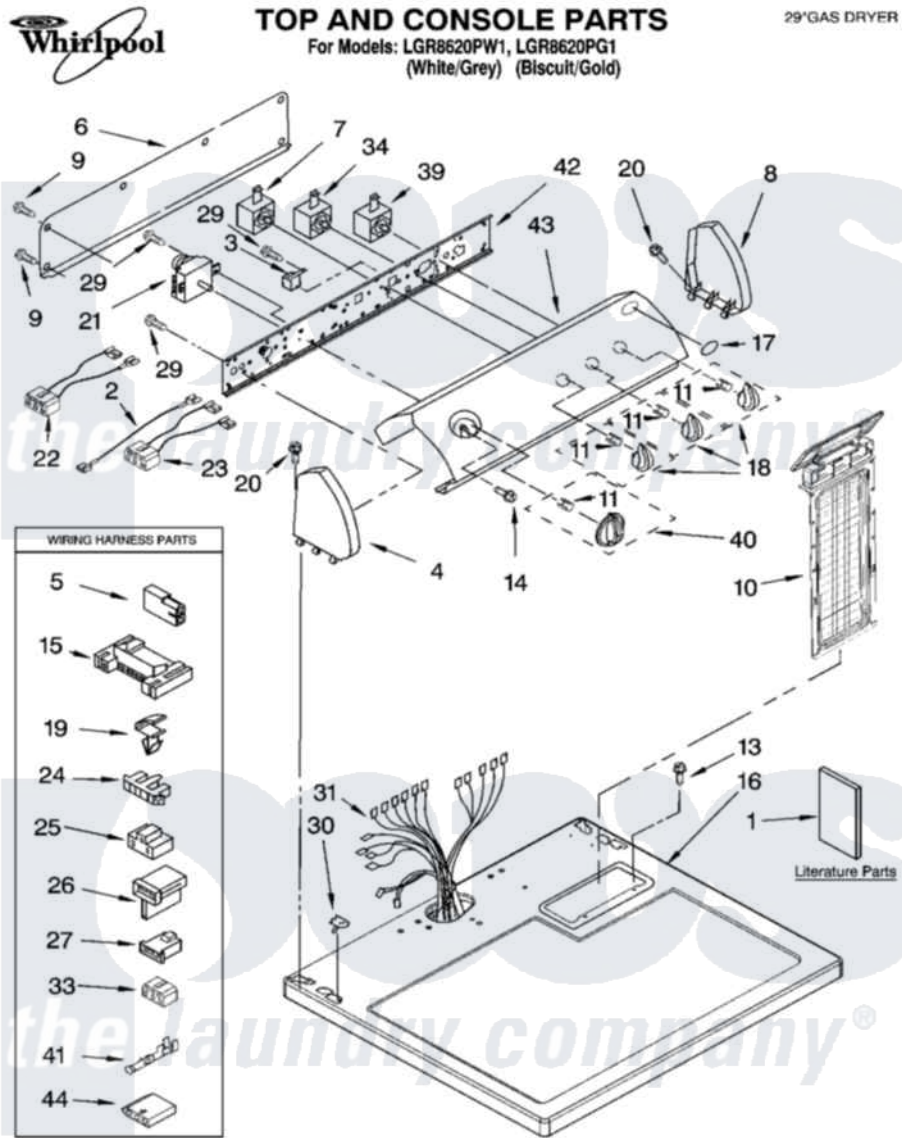

10-05 Litho in U.S.A.(LT)

1

Part No. 8160696

[Whirlpool Residential Whirlpool LGR8620PG1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8562582		Not Available	Instructions, Installation
"	8533770		Not Available	Sheet, Cycle Feature
"	8578183		Not Available	Use And Care Guide
"	3979703		Not Available	Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	3401684			Jumper, Wire
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	717252			Receptacle, Terminal
6	8274261			Do-It-Yourself Repair Manuals
7	3399639			Switch, Rotary Temperature
8	8271359	279962		Endcap

"	8271362	279965	Endcap
9	693995		Screw, Hex Head
10	8557857		Screen, Lint
"	8557858		Screen, Lint
11	8536939		Clip, Knob
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8533951	3400859	Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
"	8557931	8563986	Top
17	3400985		Medallion
18	8544937		Knob, Control
"	8544938		Knob, Control
19	3394427		Clip-Harness
20	388326		Screw, 8-18 X 1.25
21	8299766		Timer Assembly
22	3397695		Wire, Jumper
23	3396029	8539893	Wire, Jumper
24	3397269		Connector, Timer
25	3401144		Connector
26	3403499		Connector, 2-Position
27	3403498		Connector, 3-Position
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
30	357213		Nut, Push-In
31	8299879		Harness, Wiring
33	3347243		Block, Disconnect
34	3405156		Switch, Rotary
39	3398095		Switch, Push-To-Start
40	8544957		Timer Knob Assembly
"	8544958		Timer Knob Assembly
41	94614		Terminal
42	8544895		Bracket, Control
43	8545979		Panel, Control
"	8545980		Panel, Control
44	3936144		Do-It-Yourself Repair Manuals

