


Whirlpool LGV4634JQ3 01 - TOP AND CONSOLE PARTS

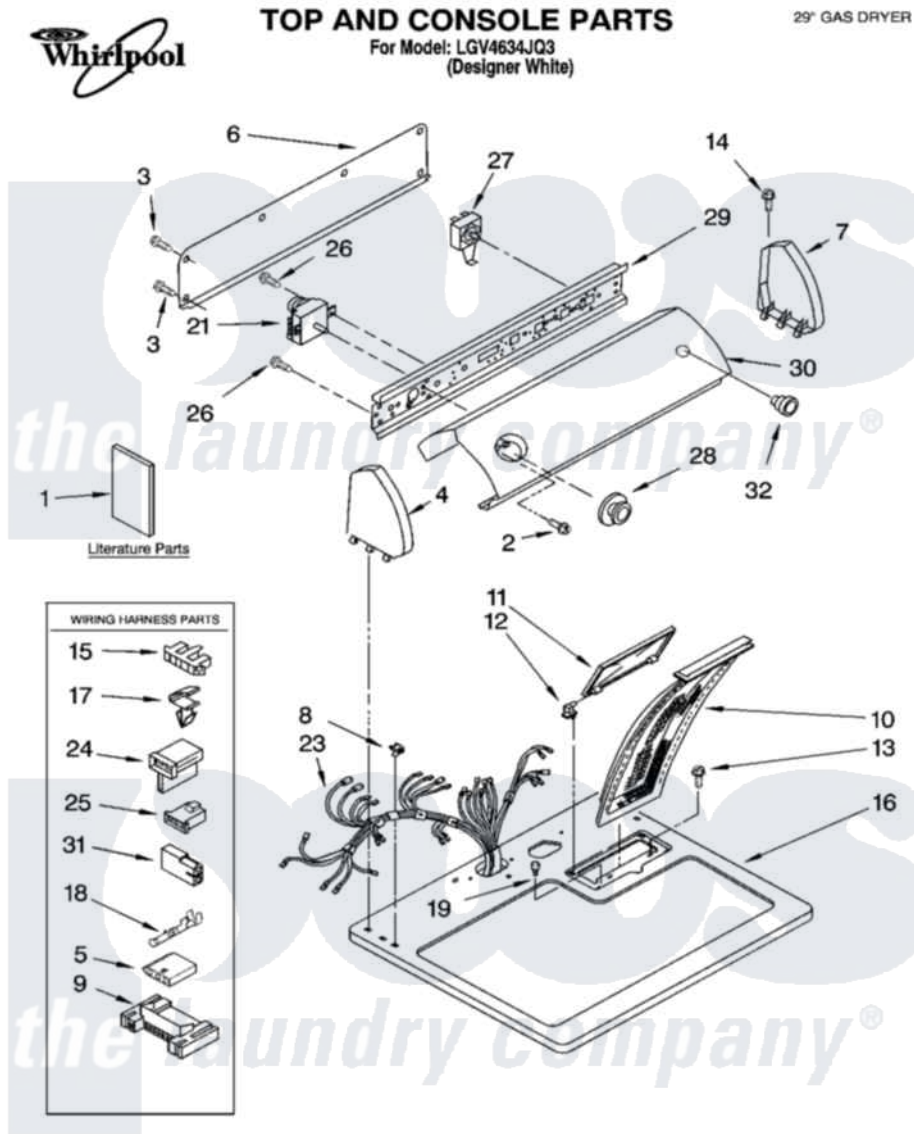

04-04 Litho in U.S.A. (djc)

1

Part No. 8180339

Whirlpool Residential Whirlpool LGV4634JQ3 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT3979614		Not Available	Literature Parts (Use & Care Guide)
"	LIT8535900		Not Available	Literature Parts (Installation Instructions)
"	LIT8528189		Not Available	Literature Parts (Label, Wiring Diagram)
"	LIT8535828		Not Available	Literature Parts (Sheet, Cycle Feature (For Model YLEQ5000KQ1))
"	N/A		Not Available	Following May Be Purchased
"	N/A		Not Available	DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	3400859			Screw, Grounding
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	8274261			Do-It-Yourself Repair Manuals
7	8271359	279962		Endcap

8	357213		Nut, Push-In
9	3395683		Receptacle, Multi-Terminal
10	339392		Screen, Lint
11	8283378		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	388326		Screw, 8-18 X 1.25
15	3397269		Connector, Timer
16	8271390	8521918	Top
17	3394427		Clip-Harness
18	94614		Terminal
19	297535	17258	Bumper
21	3976584		Timer Assembly
23	8299876		Harness, Wiring
24	3403499		Connector, 2-Postion
25	3403498		Connector, 3-Position
26	3390646	W10139210	Screw, 8-18 X 5/16
27	3977456		Switch, Push-To-Start
28	8312687	3957754	Timer Knob Assembly
29	8271418		Bracket, Control
30	3977815		Panel, Control
31	717252		Receptacle, Terminal
32	8271341	3957804	Knob, Push-To-Start
"	N/A	Not Available	ACCESSORY PARTS
"	4392065		Kit, Dryer Repair
"	346764		Kit, Hold Down
"	689790		Dry Rack
"	8522199		Accessory Parts
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

