


# Whirlpool LSB6200KQ1 03 - AGITATOR, BASKET AND TUB PARTS

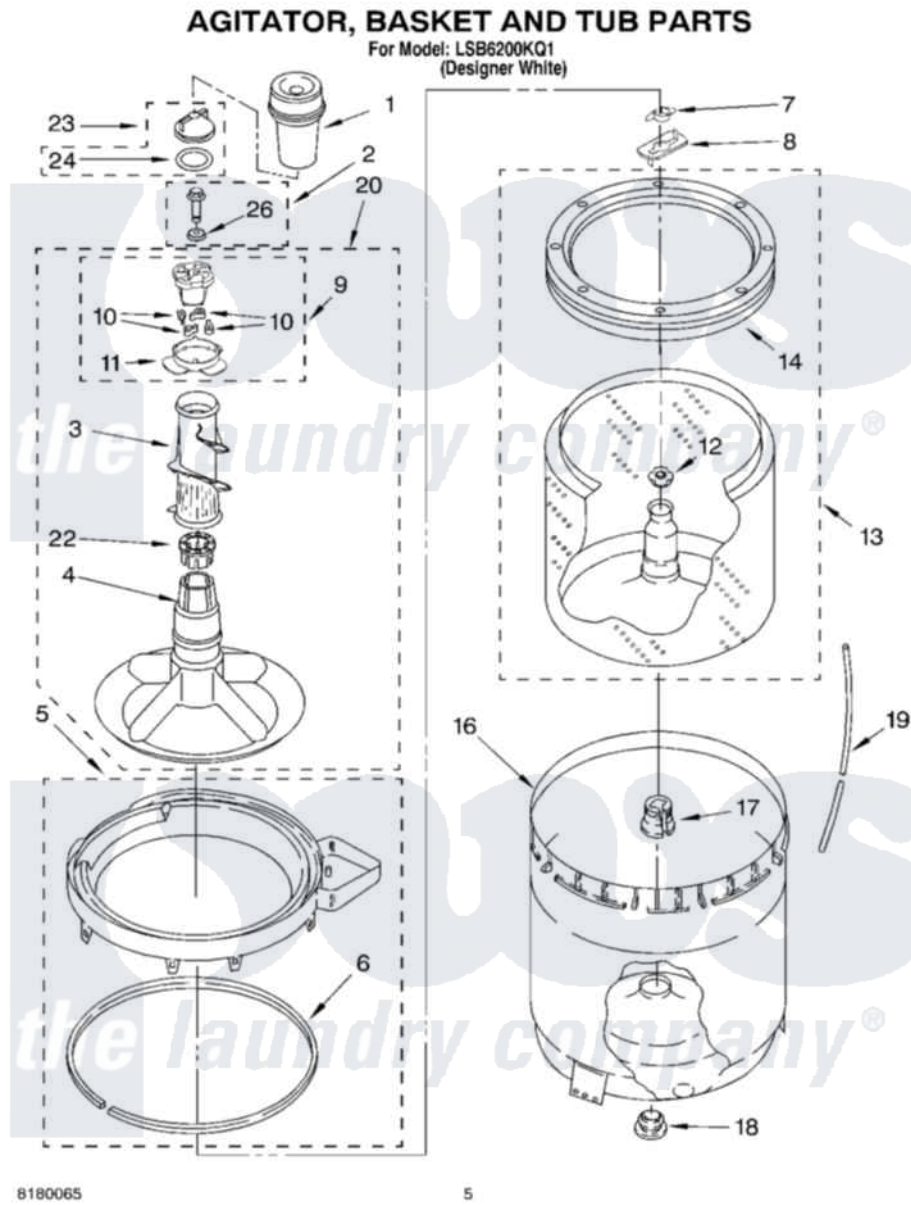

Whirlpool Residential Whirlpool LSB6200KQ1 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

| Item | Original Part Number    | Replaced By               | Status | Part Description            |
|------|-------------------------|---------------------------|--------|-----------------------------|
| 1    | <a href="#">63580</a>   |                           |        | Dispenser, Fabric Softener  |
| 2    | <a href="#">358237</a>  |                           |        | Screw And Washer            |
| 3    | <a href="#">3363003</a> |                           |        | Mover, Clothes              |
| 4    | <a href="#">3951632</a> |                           |        | Agitator                    |
| 5    | 8528150                 | <a href="#">W10445870</a> |        | Ring-Tub                    |
| 6    | <a href="#">3976308</a> |                           |        | Gasket, Tub Ring            |
| 7    | <a href="#">3354845</a> |                           |        | Clip, Agitator              |
| 8    | 3355921                 | <a href="#">8543666</a>   |        | Washer, Agitator            |
| 9    | 3951682                 | <a href="#">285809</a>    |        | Cam-Agitator                |
| 10   | 3366877                 | <a href="#">80040</a>     |        | Dog-Agitator                |
| 11   | <a href="#">3952374</a> |                           |        | Bearing, Driven Cam         |
| 12   | <a href="#">21366</a>   |                           |        | Nut, Spanner                |
| 13   | 8526017                 | <a href="#">W10389329</a> |        | Clothes Container, Assembly |
| 14   | 8519788                 | <a href="#">387240</a>    |        | Ring, Balance               |
| 16   | <a href="#">63849</a>   |                           |        | Strain Relief, Power Cord   |
| 17   | <a href="#">389140</a>  |                           |        | Tub Block, Basket Drive     |

|    |                         |                           |                       |
|----|-------------------------|---------------------------|-----------------------|
| 18 | <a href="#">383727</a>  |                           | Gasket, Centerpodt    |
| 19 | 3347780                 | <a href="#">353244</a>    | Hose, Pressure Switch |
| 20 | <a href="#">3951744</a> |                           | Agitator Assembly     |
| 22 | <a href="#">3951608</a> |                           | Spacer, Thrust        |
| 23 | 3354733                 | <a href="#">W10074580</a> | Cap, Barrier          |
| 24 | 3348855                 | <a href="#">W10072840</a> | Fabric Softener       |
| 26 | <a href="#">3949550</a> |                           | Washer                |

