


Whirlpool LSB6300PW0 02 - CONTROLS AND REAR PANEL PARTS

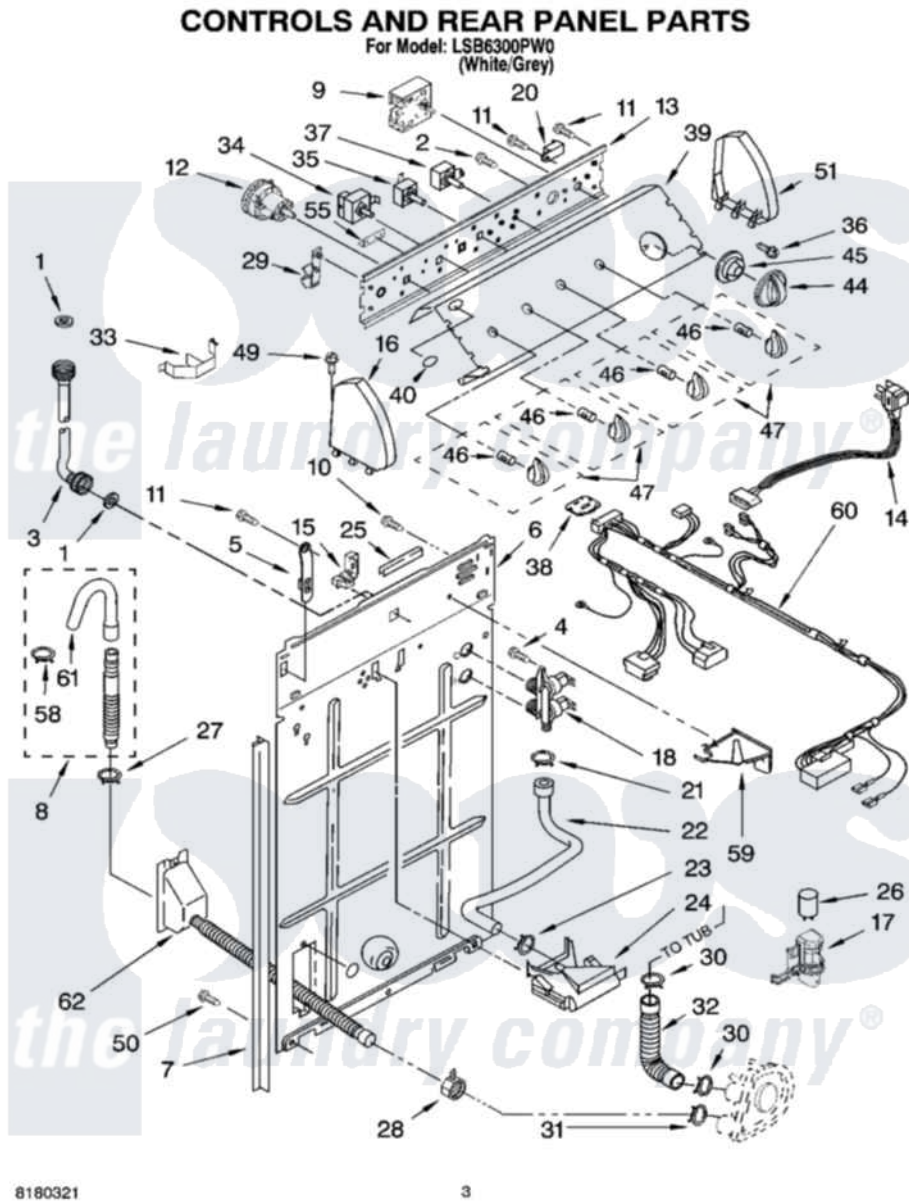

Whirlpool Residential Whirlpool LSB6300PW0 Washer Parts Parts Diagram 02 - CONTROLS AND REAR PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3976300	16123		Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
2	3400073			Screw, Ground
3	3949374	89503		Hose-Inlet
"	3949375	89503		Hose-Inlet
4	9740848			Screw, Mixing Valve Mounting
5	8318255	8568314		Strap, Console
6	3357978			Panel, Rear
7	62747			Pad, Rear Panel
8	3951609	285664		Hose
"	661577	285666		Hose
"	3357090	285702		Hose
9	8557301			Timer, Control
10	3351614			Screw, Gearcase Cover Mounting
11	90767			Screw, 8A X 3/8 HeX Washer Head Tapping

12	3366845	W10339326	Switch-WL
13	8544893		Bracket, Control
14	661661	285800	Cord-Power
15	3952821	285777	Relief-Str
16	8271365	279962	Endcap
17	8318046		Clip, Capacitor
18	3979347	3979346	Valve, Water Inlet And Thermistor Assembly
20	694419		Mini-Buzzer
21	301958	596669	Clamp, Manifold
22	8317974	8317926	Hose, Vacuum Break
23	370450	596669	Clamp, Manifold
24	387606	3360977	Break-Vac
25	303294	3367669	Protector, Edge
26	661606	8572717	Capacitor, Motor Start
27	3366912	356138	Clamp, Hose
28	3976395		Restraint, Hose
29	8317975		Restraint, Harness
30	3363366	616099	Clamp
31	8317496	285655	Clamp, Hose
32	3951449	285871	Hose
33	8055003		Clip, Harness And Pressure Switch
34	8557892		Switch, Water Temperature
35	3949180	W10168257	Switch, Rotary
36	3400818		Screw, Timer Mounting
37	3949187	W10168262	Switch, Rotary
38	8539879	3955728	Control, Etc
39	3956590		Panel, Console
40	3400985		Medallion
44	8544945		Knob, Timer
45	8544947		Dial, Timer
46	8536939		Clip, Knob
47	8544937		Knob, Control
49	388326		Screw, 8-18 X 1.25
50	62863	3390631	Screw, 10-16 X 3/8
51	8271359	279962	Endcap
55	8316039		Shield, Atc
58	3366913	3357331	Clamp, Drain
59	8539874		Shield, Suds
60	3957016		Harness, Wiring
61	3357027		Nozzle, Hose Drain
62	8317940	W10358149	Drain Hose Assembly