


Whirlpool LSQ9600LG1 01 - TOP AND CABINET PARTS



TOP AND CABINET PARTS

For Models: LSQ9600LW1, LSQ9600LG1
(White/Grey) (Biscuit/Gold)

AUTOMATIC
WASHER

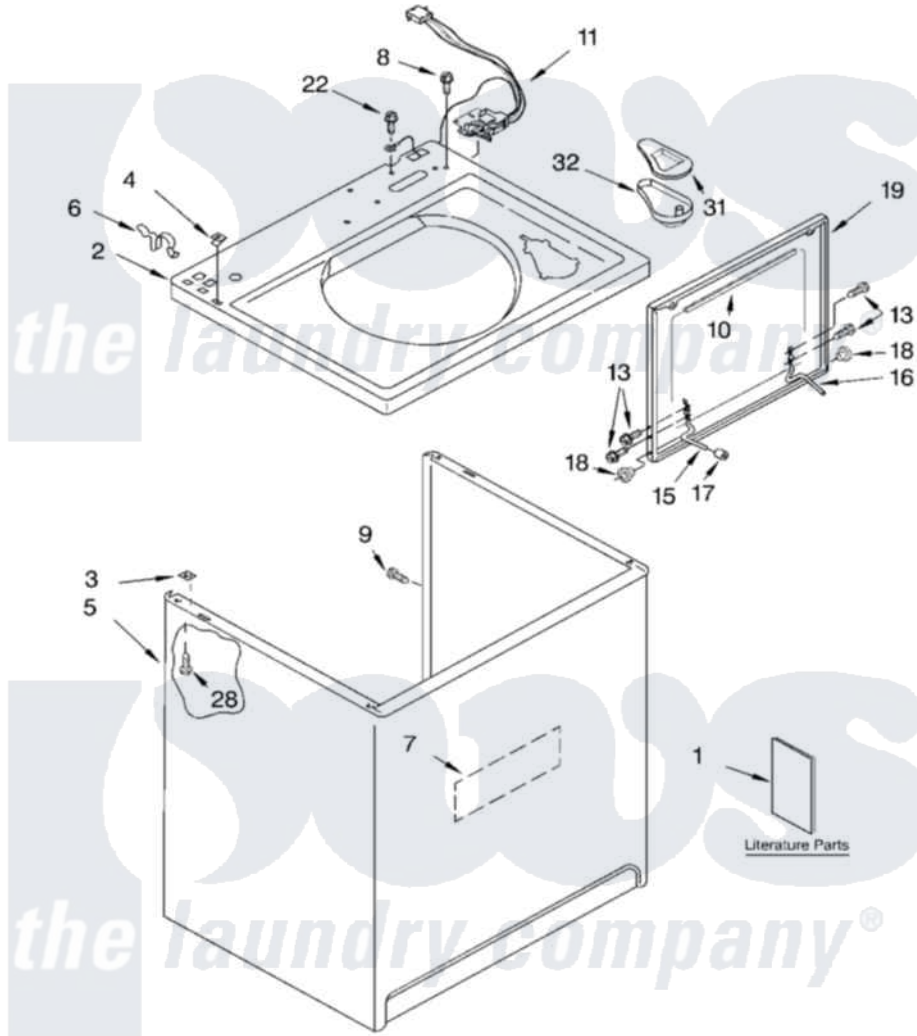

7-03 Litho in U.S.A. (drd)

1

Part No. 8180072

[Whirlpool Residential Whirlpool LSQ9600LG1 Washer Parts](#) Parts Diagram 01 - TOP AND CABINET PARTS

[Click on the part number to view part](#)

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|----------------------------|-------------------------|---------------|--|
| 1 | LIT3956025 | | Not Available | Literature Parts (Installation Instructions) |
| " | LIT3955869 | | | Literature Parts |
| " | LIT3955904 | | Not Available | Literature Parts (Feature Sheet) |
| " | LIT3956338 | | Not Available | Literature Parts (Energy Guide) |
| " | LIT8541693 | | Not Available | Literature Parts (Wiring Diagram) |
| " | N/A | | Not Available | Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS |
| " | LIT4313896 | 4313896 | | Do-It-Yourself Repair Manuals |
| 2 | 3955792 | | | Top |
| " | 3955793 | | | Top |
| 3 | 62750 | | | Spacer, Cabinet To Top (4) |
| 4 | 357213 | | | Nut, Push-In |
| 5 | 63424 | | | Cabinet |
| " | 3954357 | | | Cabinet |

| | | | |
|----|-------------------------|---------------------------|--------------------------------------|
| 6 | 62780 | | Clip, Top And Cabinet And Rear Panel |
| 7 | 3976348 | | Absorber, Sound |
| 8 | 3400611 | | Screw And Washer, Lid Switch |
| 9 | 3357011 | 308685 | Side Trim) |
| 10 | 8054939 | | Seal, Lid |
| 11 | 8054980 | | Switch, Lid |
| 13 | 355274 | W10119828 | Screw, Lid Hinge Mounting |
| 15 | 8055257 | | Hinge, Lid |
| 16 | 8055256 | | Hinge, Lid |
| 17 | 19119 | | Bumper, Lid Hinge |
| 18 | 8319539 | | Bearing, Lid Hinge |
| 19 | 3956016 | 3957547 | Lid |
| " | 3956017 | 3957548 | Lid |
| 22 | 3351614 | | Screw, Gearcase Cover Mounting |
| 28 | 3390631 | | Screw, 10-16 X 3/8 |
| 31 | 3955788 | | Cover, Dispenser |
| 32 | 8519517 | | Dispenser, Bleach |

