


# Whirlpool LSQ9610LG0 03 - AGITATOR, BASKET AND TUB PARTS

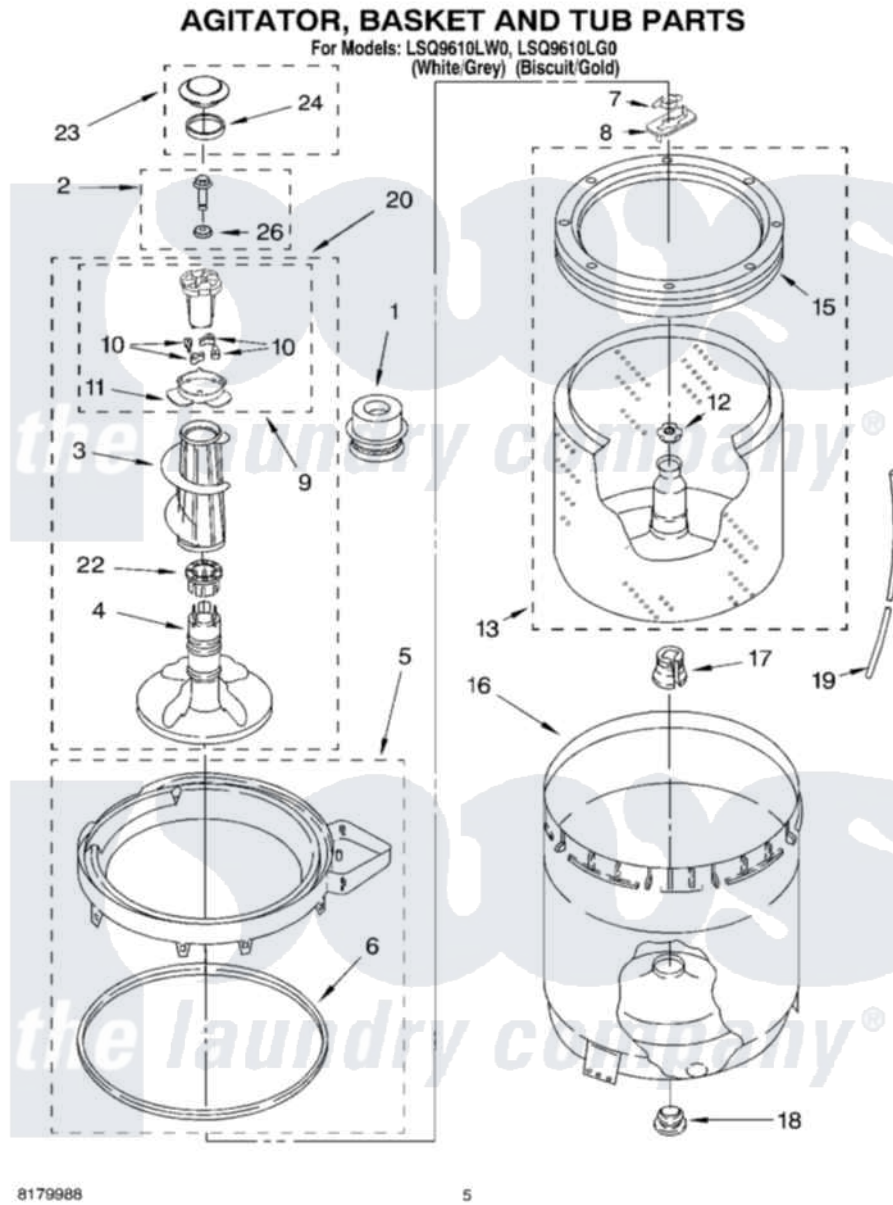

Whirlpool Residential Whirlpool LSQ9610LG0 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

| Item | Original Part Number    | Replaced By               | Status | Part Description            |
|------|-------------------------|---------------------------|--------|-----------------------------|
| 1    | <a href="#">63594</a>   |                           |        | Dispenser, Fabric Softener  |
| 2    | <a href="#">358237</a>  |                           |        | Screw And Washer            |
| 3    | 389141                  | <a href="#">3360824</a>   |        | Auger, Agitator             |
| 4    | <a href="#">389386</a>  |                           |        | Agitator                    |
| 5    | 8528150                 | <a href="#">W10445870</a> |        | Ring-Tub                    |
| 6    | <a href="#">3976308</a> |                           |        | Gasket, Tub Ring            |
| 7    | <a href="#">3354845</a> |                           |        | Clip, Agitator              |
| 8    | 3355921                 | <a href="#">8543666</a>   |        | Washer, Agitator            |
| 9    | 3363662                 | <a href="#">285748</a>    |        | Cam-Agitator                |
| 10   | 3366877                 | <a href="#">80040</a>     |        | Dog-Agitator                |
| 11   | <a href="#">3363661</a> |                           |        | Bearing, Driven Cam         |
| 12   | <a href="#">21366</a>   |                           |        | Nut, Spanner                |
| 13   | 8526016                 | <a href="#">W10389328</a> |        | Clothes Container, Assembly |
| 15   | 8519788                 | <a href="#">387240</a>    |        | Ring, Balance               |
| 16   | <a href="#">63849</a>   |                           |        | Strain Relief, Power Cord   |
| 17   | <a href="#">389140</a>  |                           |        | Tub Block, Basket Drive     |

|    |                         |                         |                       |
|----|-------------------------|-------------------------|-----------------------|
| 18 | <a href="#">383727</a>  |                         | Gasket, Centerpodt    |
| 19 | 3347780                 | <a href="#">353244</a>  | Hose, Pressure Switch |
| 20 | 3347674                 | <a href="#">285727</a>  | Agitator              |
| 22 | 3350389                 | <a href="#">285587</a>  | Washer                |
| 23 | 63973                   | <a href="#">3362061</a> | Cap                   |
| 24 | <a href="#">358912</a>  |                         | Seal, Agitator Cap    |
| 26 | <a href="#">3949550</a> |                         | Washer                |

