


Whirlpool LSQ9650PW4 03 - AGITATOR, BASKET AND TUB PARTS

AGITATOR, BASKET AND TUB PARTS

For Models: LSQ9650PW4, LSQ9650PG4
(White/Grey) (Biscuit/Gold)

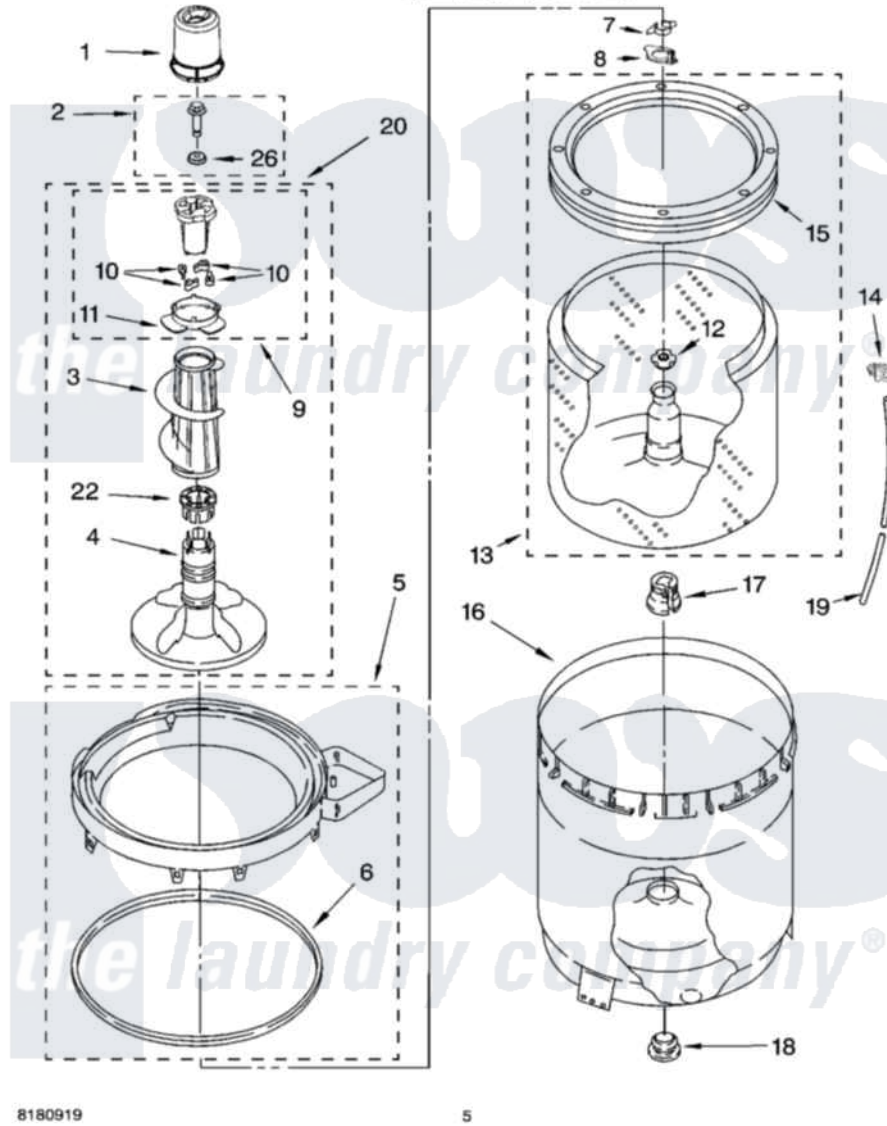

8180919

5

Whirlpool Residential Whirlpool LSQ9650PW4 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|---------------------------|--------|-----------------------------|
| 1 | 8559760 | | | Dispenser, Fabric Softener |
| 2 | 358237 | | | Screw And Washer |
| 3 | 389141 | 3360824 | | Auger, Agitator |
| 4 | 389386 | | | Agitator |
| 5 | 8528150 | W10445870 | | Ring-Tub |
| 6 | 3976308 | | | Gasket, Tub Ring |
| 7 | 3354845 | | | Clip, Agitator |
| 8 | 8543666 | | | Washer, Agitator |
| 9 | 3363662 | 285748 | | Cam-Agitator |
| 10 | 3366877 | 80040 | | Dog-Agitator |
| 11 | 3363661 | | | Bearing, Driven Cam |
| 12 | 21366 | | | Nut, Spanner |
| 13 | 8526016 | W10389328 | | Clothes Container, Assembly |
| 14 | 2219077 | | | Clip, Pressure Switch Hose |
| 15 | 8519788 | 387240 | | Ring, Balance |
| 16 | 63849 | | | Strain Relief, Power Cord |

| | | | |
|----|-------------------------|------------------------|-------------------------|
| 17 | 389140 | | Tub Block, Basket Drive |
| 18 | 383727 | | Gasket, Centerpodt |
| 19 | 3347780 | 353244 | Hose, Pressure Switch |
| 20 | 3347674 | 285727 | Agitator |
| 22 | 3350389 | 285587 | Washer |
| 26 | 3949550 | | Washer |

