


Whirlpool LSQ9660PW1 01 - TOP AND CABINET PARTS



TOP AND CABINET PARTS

For Models: LSQ9660PW1, LSQ9660PG1
(White/Grey) (Biscuit/Gold)

AUTOMATIC
WASHER

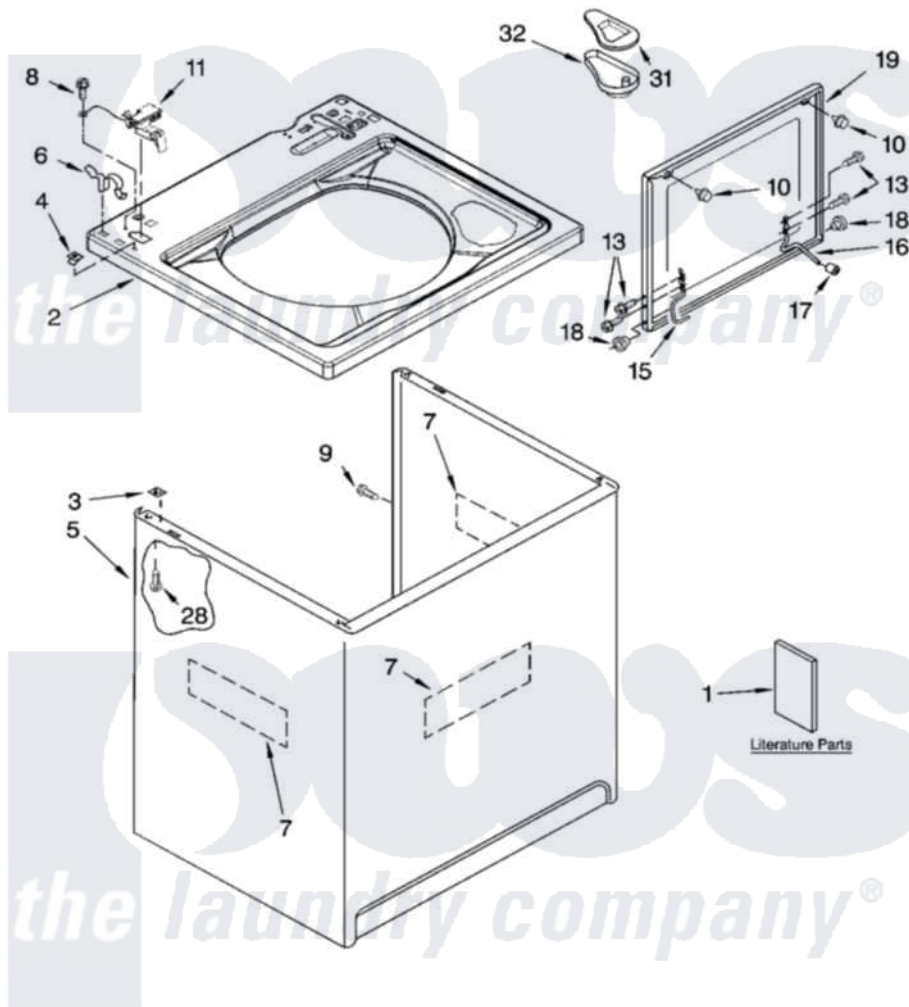

8-04 Litho in U.S.A. (dtd)

1

Part No. 8180518

Whirlpool [Residential Whirlpool LSQ9660PW1 Washer Parts](#) Parts Diagram 01 - TOP AND CABINET PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3956025		Not Available	Installation Instructions
"	3955869		Not Available	Use & Care Guide
"	3955907		Not Available	Feature Sheet
"	3956920		Not Available	Energy Guide
"	8541272		Not Available	Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	4313896			Do-It-Yourself Repair Manuals
2	8543451	8543447		Top
"	8543452	8543448		Top
3	62750			Spacer, Cabinet To Top (4)
4	357213			Nut, Push-In
5	63424			Cabinet
"	3954357			Cabinet
6	62780			Clip, Top And Cabinet And Rear Panel

7	3976348		Absorber, Sound
8	3351614		Screw, Gearcase Cover Mounting
9	3357011	308685	Side Trim)
10	9724509		Bumper, Lid
11	8318084		Switch, Lid
13	355274	W10119828	Screw, Lid Hinge Mounting
15	8559336	W10225136	Hinge 7 Pad Assembly
16	54583		Hinge, Lid
17	19119		Bumper, Lid Hinge
18	8319539		Bearing, Lid Hinge
19	8558398	W10193861	Lid
"	8558399	W10193862	Lid
28	3390631		Screw, 10-16 X 3/8
31	3955788		Cover, Dispenser
32	8519517		Dispenser, Bleach

