


Whirlpool LSR5132PQ3 02 - CONTROLS AND REAR PANEL PARTS

CONTROLS AND REAR PANEL PARTS

For Model: LSR5132PQ3
(Designer White)

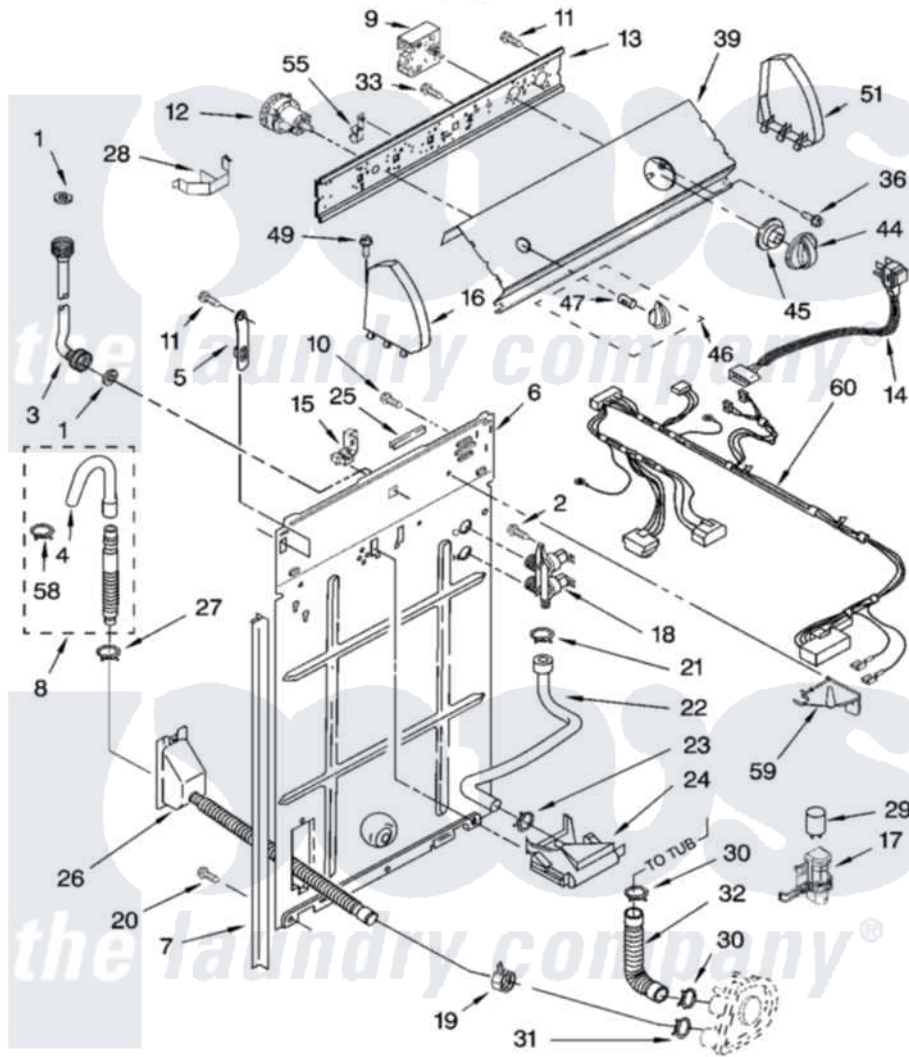

8180833

3

Whirlpool Residential Whirlpool LSR5132PQ3 Washer Parts Parts Diagram 02 - CONTROLS AND REAR PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3976300	16123		Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
2	9740848			Screw, Mixing Valve Mounting
3	8571377	89503		Hose-Inlet
"	8571378	89503		Hose-Inlet
4	3357027			Nozzle, Hose Drain
5	8568314			Strap, Console
6	3357978			Panel, Rear
7	62747			Pad, Rear Panel
8	3951609	285664		Hose
"	661577	285666		Hose
"	3357090	285702		Hose
9	8546681			Timer, Control
10	3351614			Screw, Gearcase Cover Mounting
11	90767			Screw, 8A X 3/8 HeX Washer Head Tapping

12	3366849	W10339228	Switch-WL
13	3948608		Bracket, Control
14	661661	285800	Cord-Power
15	3952821	285777	Relief-Str
16	8271365	279962	Endcap
17	8318046		Clip, Capacitor
18	3952164	285805	Valve-Inlet
19	3976395		Restraint, Hose
20	62863	3390631	Screw, 10-16 X 3/8
21	301958	596669	Clamp, Manifold
22	8541607	3357328	Hose, Vacuum Break
23	370450	596669	Clamp, Manifold
24	387606	3360977	Break-Vac
25	303294	3367669	Protector, Edge
26	8317940	W10358149	Drain Hose Assembly
27	3366912	356138	Clamp, Hose
28	8055003		Clip, Harness And Pressure Switch
29	8572717		Capacitor, Motor Start
30	3363366	616099	Clamp
31	8317496	285655	Clamp, Hose
32	3951449	285871	Hose
33	3400073		Screw, Ground
36	3400818		Screw, Timer Mounting
39	3956553	Not Available	Panel, Console
44	8544943		Knob, Timer
45	8544947		Dial, Timer
46	8544935		Knob, Control
47	8536939		Clip, Knob
49	388326		Screw, 8-18 X 1.25
51	8271359	279962	Endcap
55	8317975		Restraint, Harness
58	3366913	3357331	Clamp, Drain
59	8539874		Shield, Suds
60	3957020		Harness, Wiring
"	N/A	Not Available	FOLLOWING PARTS NOT ILLUSTRATED
"	3976263	285654	Parts-Misc

the laundry company[®]