


Whirlpool LSR7133KQ1 02 - CONTROLS AND REAR PANEL PARTS

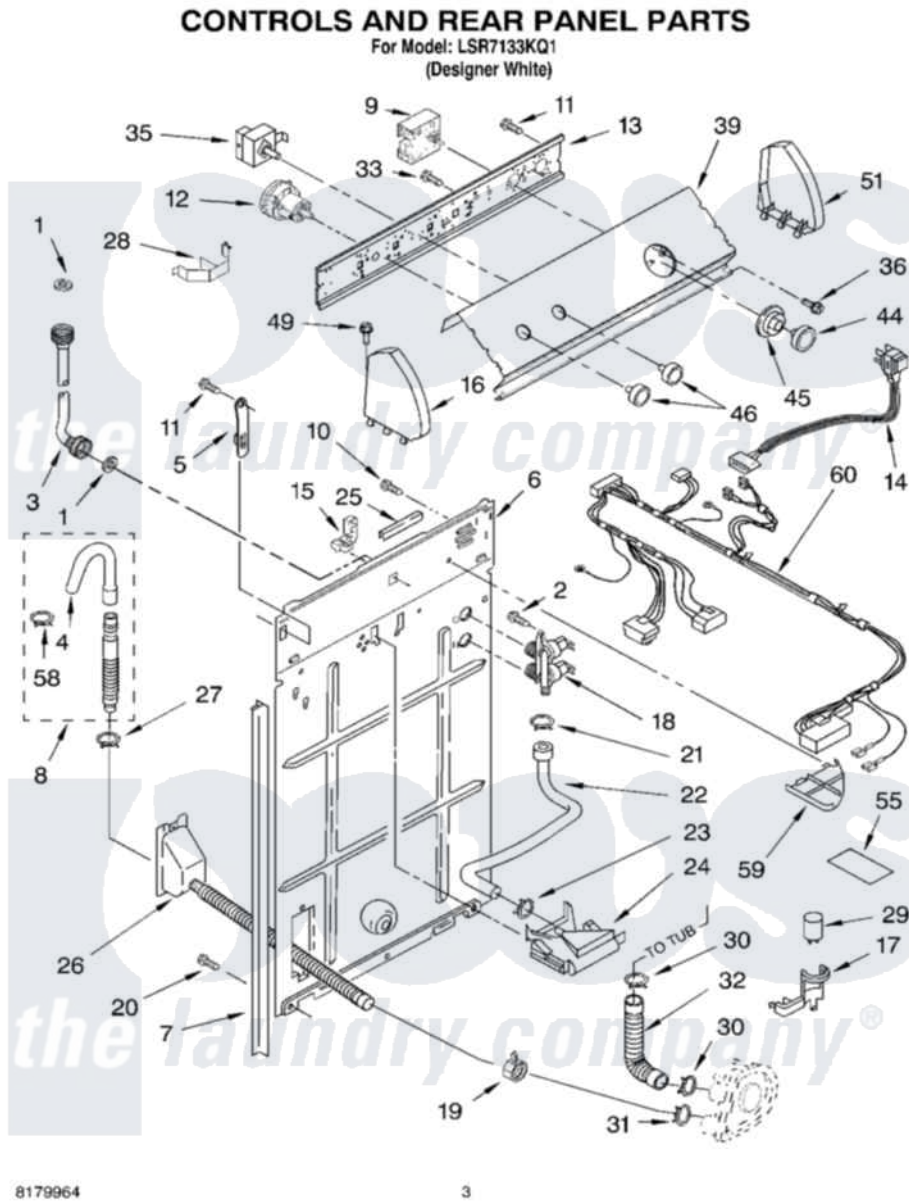

Whirlpool Residential Whirlpool LSR7133KQ1 Washer Parts Parts Diagram 02 - CONTROLS AND REAR PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3976300	16123		Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
2	9740848			Screw, Mixing Valve Mounting
3	3949374	89503		Hose-Inlet
"	3949375	89503		Hose-Inlet
4	3357027			Nozzle, Hose Drain
5	8318255	8568314		Strap, Console
6	3357978			Panel, Rear
7	62747			Pad, Rear Panel
8	3951609	285664		Hose
"	661577	285666		Hose
"	3357090	285702		Hose
9	3948323			Timer, Control
10	3351614			Screw, Gearcase Cover Mounting
11	90767			Screw, 8A X 3/8 HeX Washer Head Tapping

12	3366848	W10339229	Switch-WL
13	3948608		Bracket, Control
14	661661	285800	Cord-Power
15	3952821	285777	Relief-Str
16	8271365	279962	Endcap
17	8318201	8318046	Clip, Capacitor
18	3952164	285805	Valve-Inlet
19	3976395		Restraint, Hose
20	62863	3390631	Screw, 10-16 X 3/8
21	370451	596669	Clamp, Manifold
22	3357328		Hose, Vacuum Break
23	371503	596669	Clamp, Manifold
24	387606	3360977	Break-Vac
25	303294	3367669	Protector, Edge
26	8317940	W10358149	Drain Hose Assembly
27	3366912	356138	Clamp, Hose
28	8055003		Clip, Harness And Pressure Switch
29	661606	8572717	Capacitor, Motor Start
30	3363366	616099	Clamp
31	8317496	285655	Clamp, Hose
32	3951449	285871	Hose
33	3400073		Screw, Ground
35	661612	W10168256	Switch, Water Temperature
36	3400064		Screw, Timer Mounting
39	3955360		Panel, Console
44	8274290	3364291	Knob, Timer
45	8274331	Not Available	Dial, Timer
46	8271339	3957799	Knob, Control
49	388326		Screw, 8-18 X 1.25
51	8271359	279962	Endcap
55	3976286		Shield, Capacitor
58	3366913	3357331	Clamp, Drain
59	3348424	8539874	Shield, Suds
60	3954932		Harness, Wiring

