


Whirlpool LSR7300PQ0 03 - AGITATOR, BASKET AND TUB PARTS

AGITATOR, BASKET AND TUB PARTS

For Model: LSR7300PQ0
(Designer White)

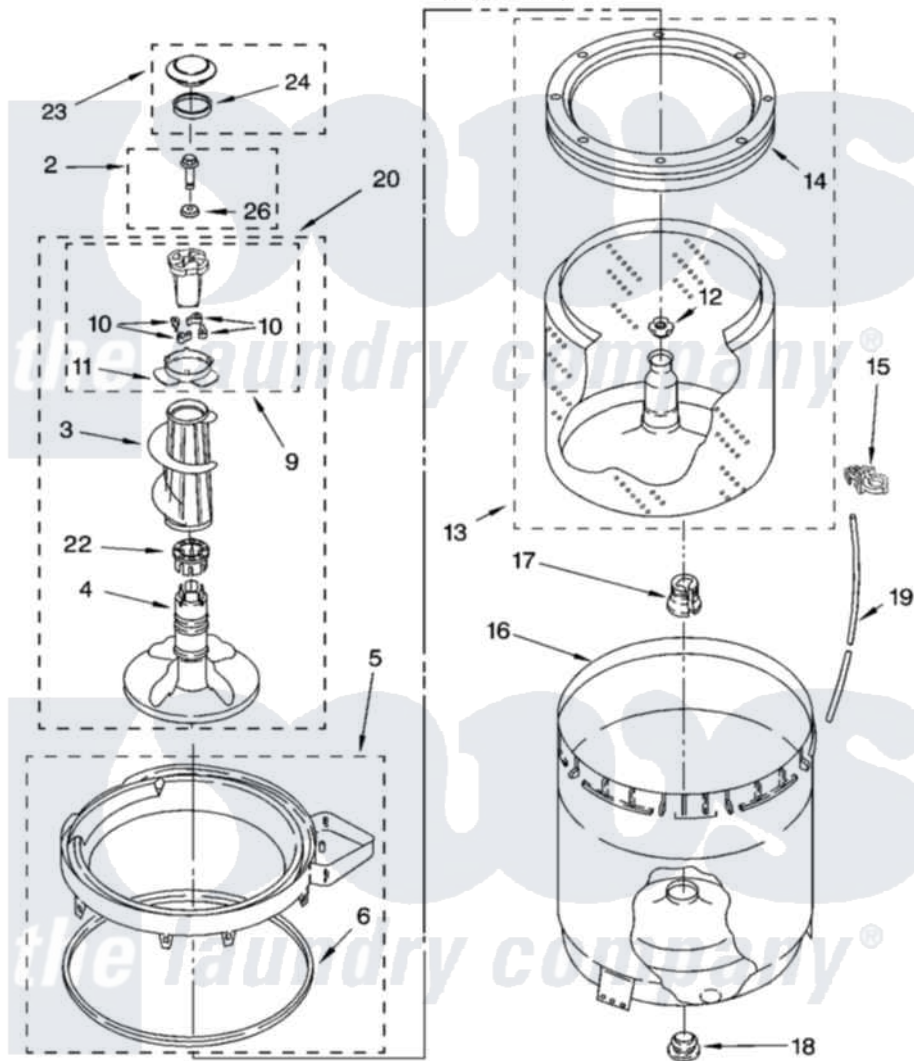

8180401

5

Whirlpool [Residential Whirlpool LSR7300PQ0 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
2	358237			Screw And Washer
3	389141	3360824		Auger, Agitator
4	389386			Agitator
5	8528150	W10445870		Ring-Tub
6	3976308			Gasket, Tub Ring
9	3363662	285748		Cam-Agitator
10	3366877	80040		Dog-Agitator
11	3363661			Bearing, Driven Cam
12	21366			Nut, Spanner
13	8526017	W10389329		Clothes Container, Assembly
14	8519788	387240		Ring, Balance
15	2219077			Clip, Pressure Switch Hose
16	63849			Strain Relief, Power Cord
17	389140			Tub Block, Basket Drive
18	383727			Gasket, Centerpod
19	3347780	353244		Hose, Pressure Switch

20	3347674	285727	Agitator
22	3350389	285587	Washer
23	63973	3362061	Cap
24	358912		Seal, Agitator Cap
26	3949550		Washer

