


Whirlpool LSR7333PQ4 01 - TOP AND CABINET PARTS

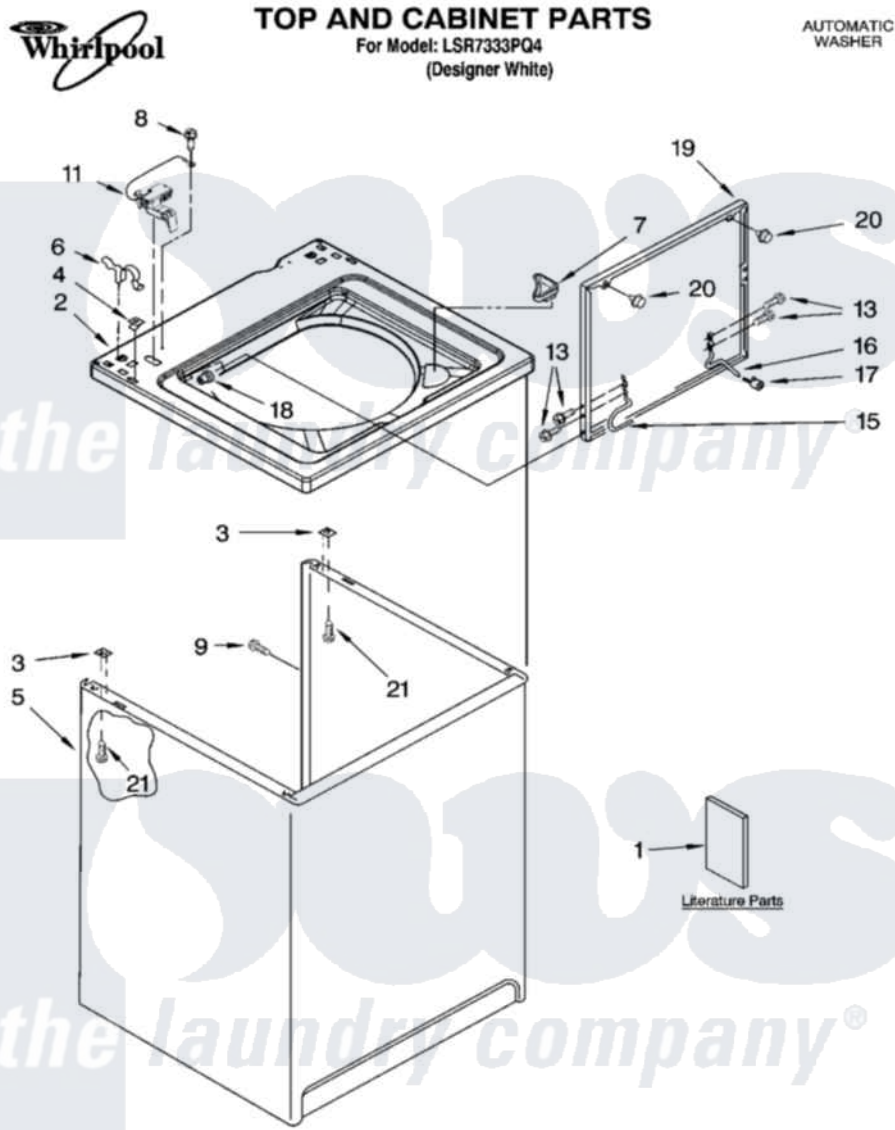

11-05 Litho in U.S.A. (drd)

1

Part No. 8180976 Rev. A

[Whirlpool Residential Whirlpool LSR7333PQ4 Washer Parts](#) Parts Diagram 01 - TOP AND CABINET PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3958075		Not Available	Installation Instructions
"	3955901		Not Available	Feature Sheet
"	8578232		Not Available	Use & Care Guide
"	8546687		Not Available	Wiring Diagram
"	3957355		Not Available	Energy Guide
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	4313896			Do-It-Yourself Repair Manuals
2	8318064			Top
3	62750			Spacer, Cabinet To Top (4)
4	357213			Nut, Push-In
5	63424			Cabinet
6	62780			Clip, Top And Cabinet And Rear Panel
7	3362952			Dispenser, Bleach
8	3351614			Screw, Gearcase Cover Mounting

9	3357011	308685	Side Trim)
11	8318084		Switch, Lid
13	3351355	W10119828	Screw, Lid Hinge Mounting
15	8318088		Hinge, Lid
16	54583		Hinge, Lid
17	19119		Bumper, Lid Hinge
18	21258		Bearing, Lid Hinge
19	8542387	W10193857	Lid
20	9724509		Bumper, Lid
21	3390631		Screw, 10-16 X 3/8

