


Whirlpool LSW9750PW2 02 - CONTROLS AND REAR PANEL PARTS

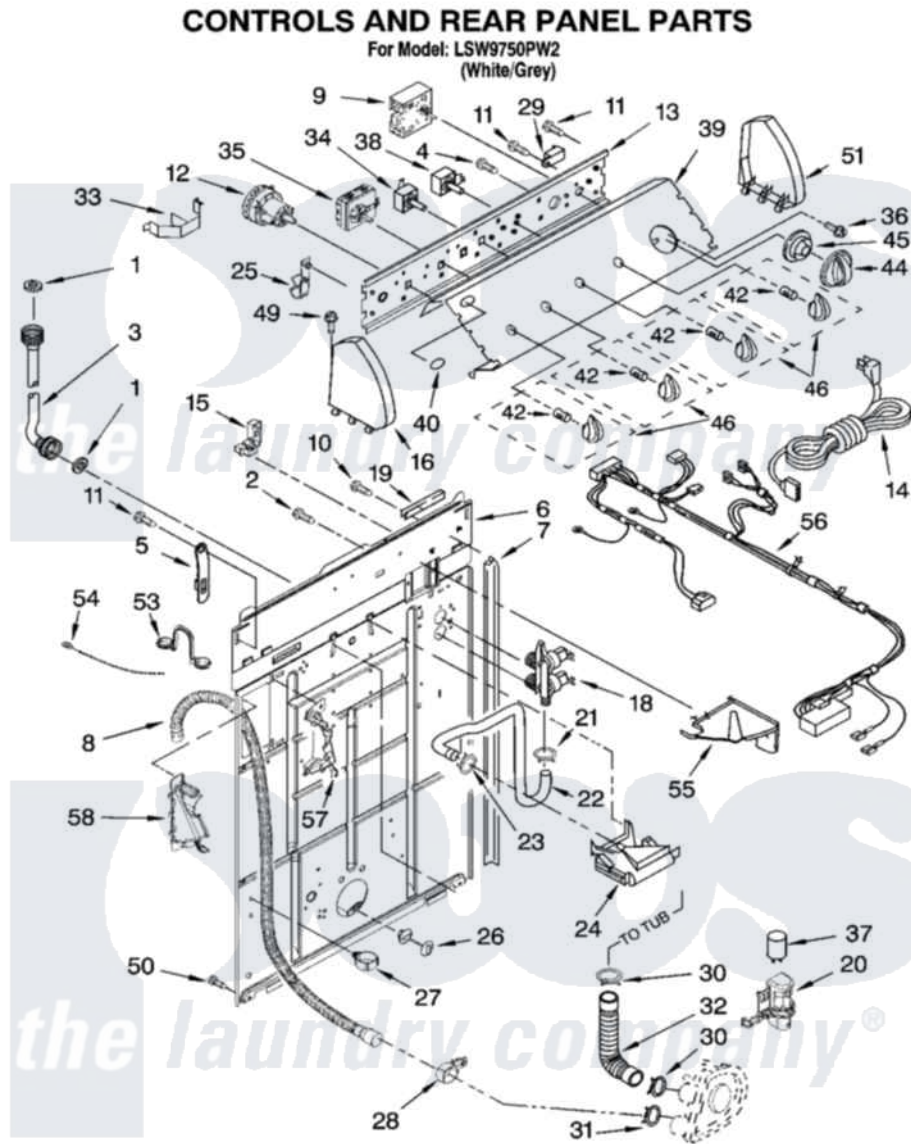

8180700

3

Whirlpool Residential Whirlpool LSW9750PW2 Washer Parts Parts Diagram 02 - CONTROLS AND REAR PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3976300	16123		Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
2	9740848			Screw, Mixing Valve Mounting
3	8571377	89503		Hose-Inlet
"	8571378	89503		Hose-Inlet
4	3400073			Screw, Ground
5	8568314			Strap, Console
6	8318015			Panel, Rear
7	62747			Pad, Rear Panel
8	8559373	W10096921		Drain Hose Assembly
9	8557301			Timer, Control
10	3351614			Screw, Gearcase Cover Mounting
11	90767			Screw, 8A X 3/8 HeX Washer Head Tapping
12	8528337	W10339317		Switch-WL

13	8544893		Bracket, Control
14	661661	285800	Cord-Power
15	3952821	285777	Relief-Str
16	8271365	279962	Endcap
18	3979347	3979346	Valve, Water Inlet And Thermistor Assembly
19	303294	3367669	Protector, Edge
20	8318046		Clip, Capacitor
21	301958	596669	Clamp, Manifold
22	8317974	8317926	Hose, Vacuum Break
23	370450	596669	Clamp, Manifold
24	387606	3360977	Break-Vac
25	8317975		Restraint, Harness
26	8519200		Support, Rear Panel
27	8541667		Clamp, Hose
28	8541668		Clamp, Hose
29	694419		Mini-Buzzer
30	3363366	616099	Clamp
31	8317496	285655	Clamp, Hose
32	3951449	285871	Hose
33	8055003		Clip, Harness And Pressure Switch
34	3949180	W10168257	Switch, Rotary
35	8571736		Switch, Water Temperature 5
36	3400818		Screw, Timer Mounting
37	661606	8572717	Capacitor, Motor Start
38	3949187	W10168262	Switch, Rotary
39	3956610		Panel, Console
40	3400985		Medallion
42	8536939		Clip, Knob
44	8544945		Knob, Timer
45	8544947		Dial, Timer
46	8544937		Knob, Control
49	388326		Screw, 8-18 X 1.25
50	62863	3390631	Screw, 10-16 X 3/8
51	8271359	279962	Endcap
53	8541672	8577378	U-Bend, Drain Hose
54	3347868	W10339879	Tie, Cable
55	8539874		Shield, Suds
56	3957274		Harness, Wiring
57	8541669		Bucket, Drain Hose
58	8541658		Bucket, Drain Hose