


# Whirlpool LTE6234DT3 01 - WASHER/DRYER CONTROL PANEL PARTS

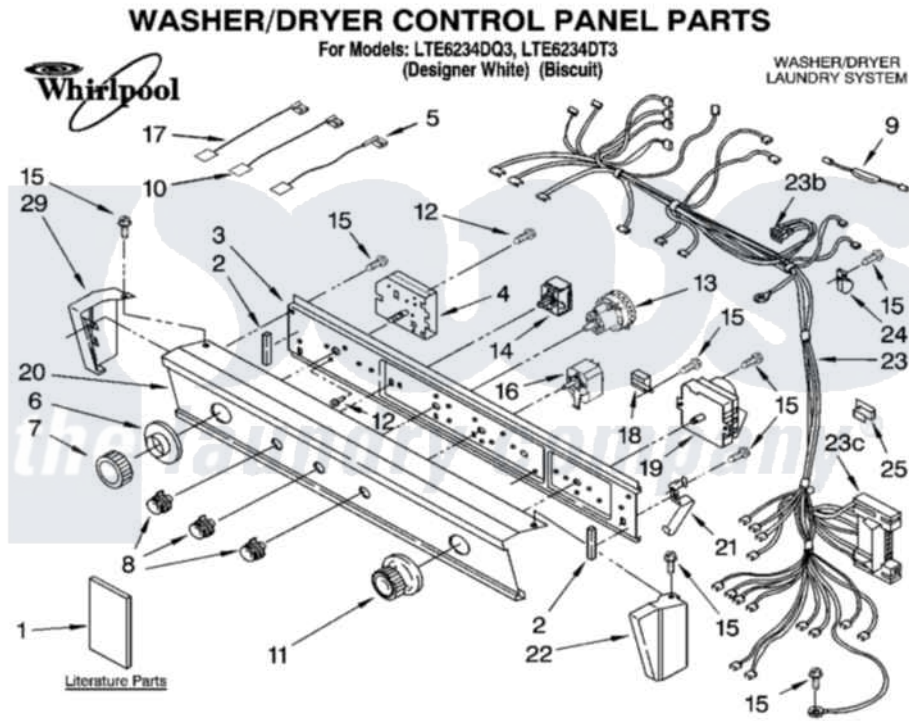

10-03 Litho in U.S.A. (djc)

1

Part No. 8180161

Whirlpool [Residential Whirlpool LTE6234DT3 Washer/Dryer Parts](#) Parts Diagram 01 - WASHER/DRYER CONTROL PANEL PARTS

[Click on the part number to view part](#)

| Item | Original Part Number    | Replaced By             | Status        | Part Description                                       |
|------|-------------------------|-------------------------|---------------|--|
| 1    | LIT8542746              |                         | Not Available | Literature Parts (Installation Instructions (English)) |
| "    | LIT3397634              |                         | Not Available | Literature Parts (Arabic Use & Care Guide)             |
| "    | LIT3406880              |                         | Not Available | Literature Parts (Installation Instructions (English)) |
| "    | LIT3405528              |                         | Not Available | Literature Parts (Arabic)                              |
| "    | LIT8542752              |                         | Not Available | Literature Parts (Sheet, Cycle Feature)                |
| "    | LIT8546674              |                         | Not Available | Literature Parts (Wiring Diagram)                      |
| "    | LIT3956353              |                         | Not Available | Literature Parts (Energy Guide)                        |
| 2    | <a href="#">3390688</a> |                         |               | Spacer- Foam Pad                                       |
| 3    | <a href="#">8528583</a> |                         |               | Bracket, Control                                       |
| 4    | <a href="#">3948357</a> |                         |               | Timer, Washer  |
| 5    | <a href="#">3401674</a> |                         |               | Wire, Jumper   |
| 6    | 3403097                 | <a href="#">3957845</a> |               | Dial,  |
| "    | 3979132                 | <a href="#">3957846</a> |               | Dial,  |

|    |                         |                           |   |
|----|-------------------------|---------------------------|---|
| 7  | <a href="#">3364291</a> |                           | Knob, Timer                             |
| "  | <a href="#">3364294</a> |                           | Knob, Timer                             |
| 8  | 3950759                 | <a href="#">3957796</a>   | Knob, Control                           |
| "  | 3978873                 | <a href="#">3957797</a>   | Knob, Push-To-Start                     |
| 9  | 3401078                 | <a href="#">279872</a>    | Resistor                                |
| 10 | <a href="#">3401684</a> |                           | Jumper, Wire                            |
| 11 | 3406146                 | <a href="#">3957750</a>   | Knob, Timer                             |
| "  | 3978864                 | <a href="#">3957751</a>   | Knob, Timer                             |
| 12 | <a href="#">3400064</a> |                           | Screw, Timer Mounting                   |
| 13 | 8546175                 | <a href="#">W10311356</a> | Switch-WL                               |
| 14 | <a href="#">3405157</a> |                           | Switch, Temperature                     |
| 15 | <a href="#">90767</a>   |                           | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 16 | <a href="#">3404233</a> |                           | Switch, Push-To-Start                   |
| 17 | <a href="#">3393810</a> |                           | Jumper Wire                             |
| 18 | <a href="#">694419</a>  |                           | Mini-Buzzer                             |
| 19 | <a href="#">3976569</a> |                           | Timer, Dryer                            |
| 20 | <a href="#">3396689</a> |                           | Panel, Control                          |
| "  | <a href="#">3406828</a> |                           | Panel, Control                          |
| 21 | <a href="#">3389453</a> |                           | Bracket, Hinge                          |
| 22 | <a href="#">3389456</a> |                           | End Cap                                 |
| "  | <a href="#">3389462</a> |                           | End Cap                                 |
| 23 | 8299835                 | <a href="#">8576535</a>   | Harns-Wire                              |
| "  | <a href="#">2154470</a> |                           | Receptacle,                             |
| "  | <a href="#">3395683</a> |                           | Receptacle, Multi-Terminal              |
| 24 | <a href="#">3390604</a> |                           | Clamp, Harness                          |
| 25 | 3390422                 | <a href="#">W10134185</a> | Clip, Harness                           |
| 29 | <a href="#">3389464</a> |                           | End Cap                                 |
| "  | <a href="#">3389470</a> |                           | End Cap                                 |

