


# Whirlpool LTG5243DQB 01 - WASHER/DRYER CONTROL PANEL PARTS

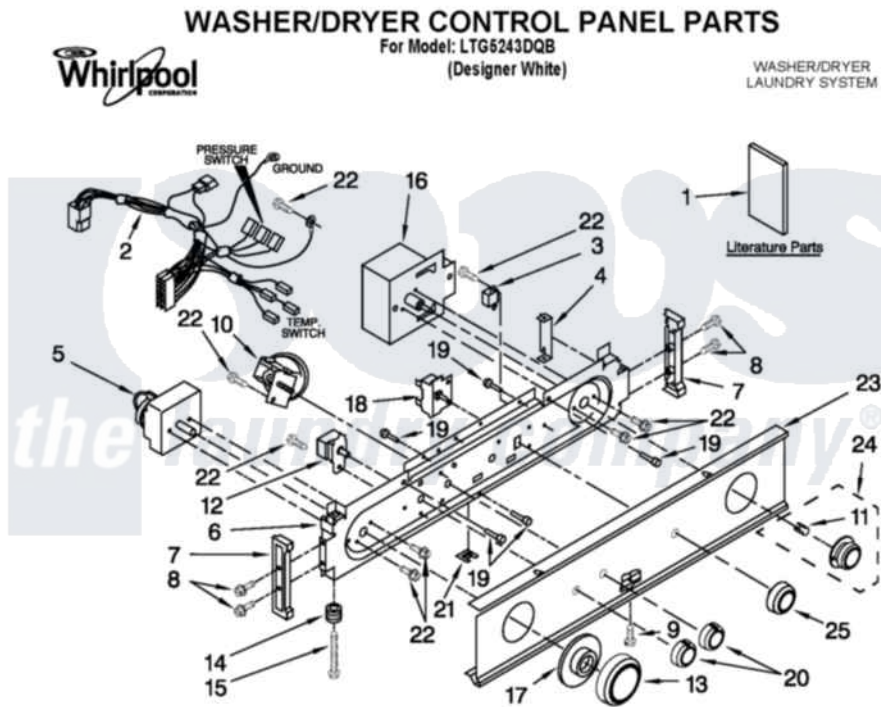

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1-12 Litho in U.S.A. (BMN) (psw)

1

Part No. W10476313 Rev. A

## Whirlpool Residential Whirlpool LTG5243DQB Washer/Dryer Parts Parts Diagram 01 - WASHER/DRYER CONTROL PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10222384		Not Available	Installation Instructions
"	W10196553		Not Available	Guide, Use & Care
"	8542754		Not Available	Sheet, Cycle Feature
"	8577335		Not Available	Wiring Diagram
"	W10404614		Not Available	ENERGY GUIDE
2	<a href="#">W10278751</a>			Harness, Console Wiring
3	<a href="#">694419</a>			Mini-Buzzer
4	<a href="#">692983</a>			Lock, Console
5	<a href="#">3952499</a>			Timer, Control
6	<a href="#">8528154</a>			Bracket, Control
7	<a href="#">692993</a>			End Cap, Console
8	<a href="#">348689</a>			Screw, End Cap Mounting
9	342055	<a href="#">488627</a>		Screw
10	<a href="#">W10231404</a>			Switch, Water Level
11	<a href="#">688805</a>			Clip, Spring Knob
12	<a href="#">8054142</a>			Switch, Water Temperature

13	<a href="#">3957821</a>		Knob, Timer
14	<a href="#">693151</a>		Spring, Console Lock
15	<a href="#">3400860</a>		Screw, Console Lock
16	<a href="#">3406720</a>		Timer, Control
17	<a href="#">3957841</a>		Dial, Timer
18	<a href="#">3977456</a>		Switch, Push-To-Start
19	<a href="#">693152</a>		Bumper, Console
20	<a href="#">3957796</a>		Knob, Control
21	<a href="#">694037</a>		Clip, Console
22	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
23	<a href="#">3977194</a>		Panel, Control
24	<a href="#">3957752</a>		Knob, Timer
25	<a href="#">3957800</a>		Knob, Push-To-Start

