


# Whirlpool LTG5243DT8 01 - WASHER/DRYER CONTROL PANEL PARTS

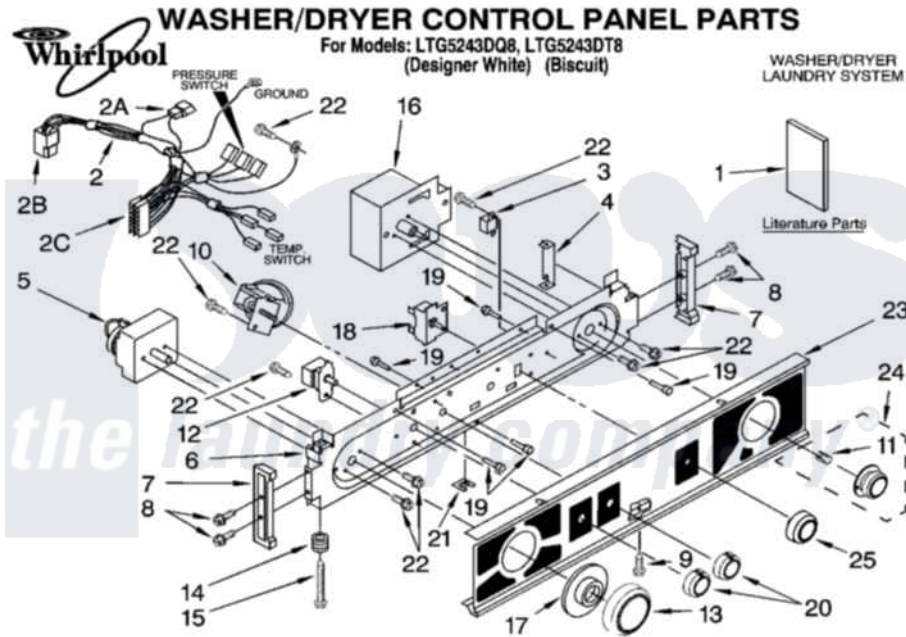

3-09 Litho in U.S.A.(LT)(bay)

1

Part No. W10259009 Rev. A

## Whirlpool Residential Whirlpool LTG5243DT8 Washer/Dryer Parts Parts Diagram 01 - WASHER/DRYER CONTROL PANEL PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10222384		Not Available	Installation Instructions
"	W10196553		Not Available	Guide, Use & Care
"	8542754		Not Available	Sheet, Cycle Feature
"	8577335		Not Available	Wiring Diagram
"	W10194037		Not Available	Energy Guide
2	<a href="#">8577368</a>			Harness, Console Wiring
"	<a href="#">3350130</a>			Plug, Terminal
"	<a href="#">696073</a>			Receptacle, Connector
"	<a href="#">3948614</a>			Disconnect Block
3	<a href="#">694419</a>			Mini-Buzzer
4	<a href="#">692983</a>			Lock, Console
5	<a href="#">3952499</a>			Timer, Control
6	<a href="#">8528154</a>			Bracket, Control
7	<a href="#">692993</a>			End Cap, Console
"	<a href="#">3978584</a>			End Cap, Console
8	<a href="#">348689</a>			Screw, End Cap Mounting

9	<a href="#">694091</a>		Trim, Side Right Hand
10	<a href="#">3362987</a>		Switch, Water Level
11	<a href="#">688805</a>		Clip, Spring Knob
12	<a href="#">8054142</a>		Switch, Water Temperature
13	<a href="#">3957821</a>		Knob, Timer
"	<a href="#">3957822</a>		Knob, Timer
14	<a href="#">693151</a>		Spring, Console Lock
15	<a href="#">3400860</a>		Screw, Console Lock
16	<a href="#">3406720</a>		Timer, Control
17	<a href="#">3957841</a>		Dial, Timer
"	<a href="#">3957842</a>		Dial, Timer
18	<a href="#">3977456</a>		Switch, Push-To-Start
19	<a href="#">693152</a>		Bumper, Console
20	<a href="#">3957796</a>		Knob, Control
"	<a href="#">3957797</a>		Knob, Push-To-Start
21	<a href="#">694037</a>		Clip, Console
22	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
23	<a href="#">3977194</a>		Panel, Control
"	<a href="#">3977195</a>		Panel, Control
24	<a href="#">3957752</a>		Knob, Timer
"	<a href="#">3957753</a>		Knob, Timer
25	<a href="#">3957800</a>		Knob, Push-To-Start
"	<a href="#">3957801</a>		Knob, Push-To-Start

