


Whirlpool LTG6234DQ2 01 - WASHER/DRYER CONTROL PANEL PARTS

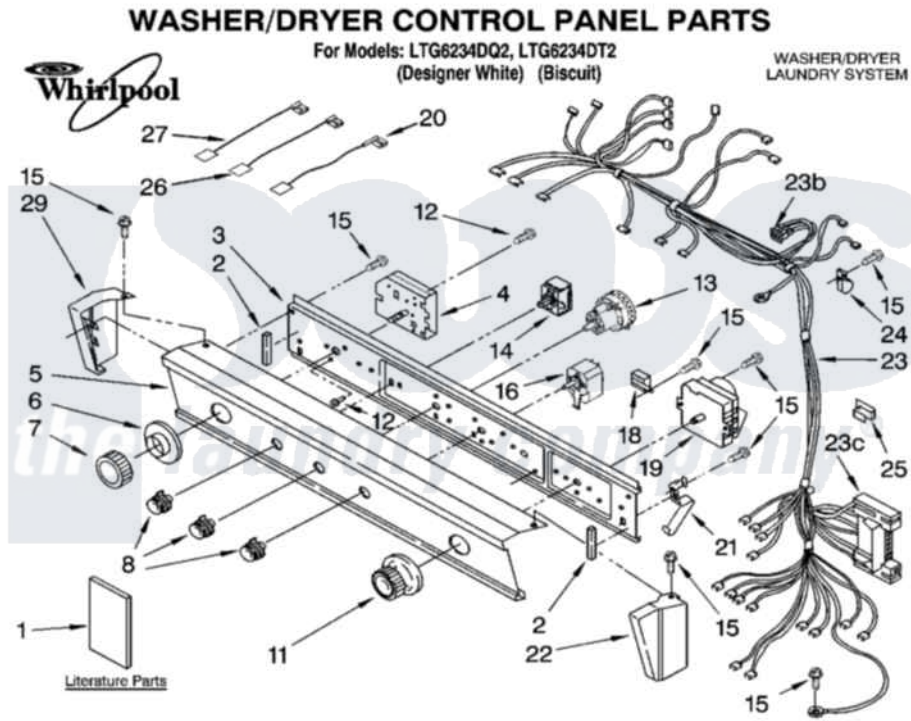

10-03 Litho in U.S.A. (djc)

1

Part No. 8180162

Whirlpool Residential Whirlpool LTG6234DQ2 Washer/Dryer Parts Parts Diagram 01 - WASHER/DRYER CONTROL PANEL PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8542750		Not Available	Installation Instructions
"	LIT3406880		Not Available	Literature Parts (Installation Instructions (English))
"	LIT8542752		Not Available	Literature Parts (Sheet, Cycle Feature)
"	LIT8546674		Not Available	Literature Parts (Wiring Diagram)
"	LIT3956353		Not Available	Literature Parts (Energy Guide)
2	3390688			Spacer- Foam Pad
3	8528583			Bracket, Control
4	3948357			Timer, Washer
5	3396689			Panel, Control
"	3406828			Panel, Control
6	3403097	3957845		Dial,
"	3979132	3957846		Dial,
7	3364291			Knob, Timer
"	3364294			Knob, Timer

8	3950759	3957796	Knob, Control
"	3978873	3957797	Knob, Push-To-Start
11	3406146	3957750	Knob, Timer
"	3978864	3957751	Knob, Timer
12	3400064		Screw, Timer Mounting
13	8546175	W10311356	Switch-WL
14	3405157		Switch, Temperature
15	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
16	3404233		Switch, Push-To-Start
18	694419		Mini-Buzzer
19	3976569		Timer, Dryer
20	3393810		Jumper Wire
21	3389453		Bracket, Hinge
22	3389456		End Cap
"	3389462		End Cap
23	3398983		Harness - Dryer
"	2154470		Receptacle,
"	3395683		Receptacle, Multi-Terminal
24	3390604		Clamp, Harness
25	3390422	W10134185	Clip, Harness
26	3401674		Wire, Jumper
27	3401684		Jumper, Wire
29	3389464		End Cap
"	3389470		End Cap

the laundry company[®]

the laundry company[®]